

California GHG Emissions Reporting Tool: Users Guide

Table of Contents

	<u> </u>	Page
1.0 C	Overview	.1-1
1.2 1.3 1.4 1.5	The California GHG Emissions Reporting Tool General Description Base Functionality Supported by the Tool. Key California GHG Emissions Reporting Tool Concepts User Groups and Roles. General Tips and Data Entry Conventions Annual Reporting Concepts and Reporting Flow.	. 1-2 . 1-3 . 1-3 . 1-5
2.0 C	Common Tasks and Steps for a Facility Manager User	.2-1
2.1	Setting Up Your Facility (or Facilities)	. 2-1
2	2.1.1 First Time Facility Registration and Logging In to the California GHG Emissions Reporting Tool 2.1.2 Registering Multiple Facilities 2.1.3 Go to My Profile 2.1.4 Go to the Facility Information Page	. 2-6 . 2-8
	 2.1.4.1 Verify and/or Modify Facility Details (Facility Details Tab) 2.1.4.2 Manage Facility Addresses (Addresses Tab) 2.1.4.3 Manage Geographic Location Information (Geographic Location Tab) 2.1.4.4 Add and Manage Facility Contacts (Contacts Tab) 2.1.4.5 Add and Edit Facility Documents (Facility Documents Tab) 2.1.4.6 Add and Manage Facility Verification Bodies (Verification Bodies Tab) 2.1.4.7 View Power Entity Relationships (Associated Entity Tab) 2.1.4.8 View ARB Notifications (ARB Notifications Tab) 	2-15 2-17 2-18 2-23 2-24 2-27
D	setting Up Your Facility's Reporting Structure (Emitting Activities, Generating Unit Devices, Energy and Production Reporting Categories, nd Facility and Unit Submissions)	
	Add and Manage Facility Emitting Activities (Emitting Activities Tab)	
3	3.2.1 Add Generating Unit	. 3-5 . 3-8
	3.2.2.1 Generating Unit Operating Status	3-10
3.4	Add and Manage Devices - Fuel Use Reporting to the Last Point of Measurement (Devices Tab)	3-16

Table of Contents (cont.)

			<u>Page</u>
1.0) Comi	mon Tasks and Steps for a Power Entity Manager User	4-1
4	4.1 Set	ting Up Your Power Entity (or Power Entities)	4-1
	4.1.1	First Time Power Entity Registration and Logging In to the California GHG Emissions Reporting Tool	4-1
	4.1.2	Registering Multiple Power Entities	
	4.1.3	Go to My Profile	4-9
4	4.2 Go	to the Power Entity Information page	4-12
	4.2.1	Review and/or Modify Power Entity Details (Entity Details Tab)	4-14
		Manage Power Entity Addresses (Addresses Tab)	
		Add and Manage Power Entity Contacts (Contacts Tab)	
		Add and Edit Power Entity Documents (Entity Documents Tab)	
		Add and Manage Power Entity Verification Bodies (Verification Bodies Tab)	
		View Facility Relationships (Facilities Tab)	
	4.2.7	View ARB Notifications (ARB Notifications Tab)	4-29
4		tting Up Your Power Entity's Emitting Activities (for Reporting SF ₆ Emissions) mitting Activities Tab)	4-30
	4 0 1	Add and Managa Davies Entity Engitting Activities	4 20
		Add and Manage Power Entity Emitting Activities	
5.0) Annu	ıal Reporting	5-1
į	5.1 Cre	eate a Submission	5-5
į	5.2 An	nual Reporting Home	5-12
5.0		ort Annual Emissions and Fuels Data (Facility and Generating Unit) or	, ,
	керо	rt Annual SF ₆ Emissions Data (Power Entity)	6-1
(6.1 Re	porting Emitting Activity Fuel Use Data	6-3
(6.2 Re	porting Emissions Data	6-8
(6.3 Re	porting Device Level Fuel Data	6-14
(5.4 Ad	ding Supporting Documentation	6-17
7.0	Repo	ort Annual Energy and Production Data	7-1
-	7.1 An	nual Energy and Production Submission	7-1
		porting Indirect Energy Use	
		porting Energy Production	
		porting Energy Provided or Sold	
		porting Steam Production	
-	7.6 Re	porting Cement Efficiency Metrics	7-17

Table of Contents (cont.)

		<u>Page</u>
	ting Hydrogen Datag Supporting Documentation	
8.0 Report	Annual Power Transactions Data	8-1
8.2 Review	nd Power Transactions Data	8-10
	omission QA Checks and Change Submission Status to g Certification"	9-1
	necksge Submission Status to "Pending Certification"	
10.0 Certify	ying Annual Data	10-1
10.2 Revie	ify or Unlock Annual Data Homepageew Submission QA Checksify Submission	10-4
11.0 Verify	ing Annual Data	11-1
11.2 Verif	fication Homepagefy Annual Data Homepagefy Annual Datafy Annual Data	11-4

List of Figures

		Page
Figure 1-1:	GHG Emissions Reporting Tool Reporting Flow	1-2
	User Roles	
	Top Horizontal Menu Bar	
•	Grid Example	
•	Tab Example	
•	Hyperlinks	
•	Radio Buttons	
Figure 1-8:		
5	Filters	
9	: Major Actions	
	: GHG Emissions Reporting Tool Reporting Flow Summary	
	: GHG Emissions Reporting Tool Reporting Flow Detailed	
	: Submissions Statuses Flow	
•	Logged Out Home Page	
	Register Your Organization Page	
0	User Registration Page	
•	Agree to Terms Page	
	Announcements Page	
	Logged In Home Page	
•	Logged in Home Page - Register Multiple Facilities	
	Confirm Relationship Page	
	: Logged in Home Page - My Profile	
	: My Profile Page	
•	: Facility Menu	
	: Facility Homepage	
	: Facility Information Page	
	: Facility Details Tab	
	: Addresses Tab	
	: Add Address Page	
	: Contacts Tab	
Figure 2-20	: Create Facility Contact Page	2-20
	: Select Facility Contact Detail Page	
Figure 2-22	: Select Facility Contact Page	2-22
	: Facility Documents Tab	
Figure 2-24	: Add Document Page	2-24
	: Verification Bodies Tab	
Figure 2-26	: Select Verification Body for Facility Page	2-26
Figure 2-27	: Confirm Facility-Verification Body Relationship Page	2-27
	: Associated Entity Tab	
Figure 2-29	: ARB Notifications Tab	2-29
Figure 3-1:	Emitting Activities Tab	3-3
Figure 3-2:	Add Emitting Activity Page	3-4
	Generating Units Tab	
	Add Generating Unit Page	
Figure 3-5:	Generating Unit Details Page	3-8
	Unit Operating Status Tab	

List of Figures (cont.)

		<u>Page</u>
Figure 3-7:	Add Status Page	3-10
Figure 3-8:	Cogeneration Information Tab	3-10
Figure 3-9:	Emitting Activities Tab	3-11
Figure 3-10	: Add Unit Emitting Activity Page	3-12
Figure 3-11	: Devices Tab	3-14
	: Add Device Page	
	: Energy and Production Tab	
	: Facility Energy and Production Sector Reporting Matrix	
	: Generating Unit Energy and Production Sector Reporting Matrix	
	: Facility Unit and Submission Tab	
Figure 4-1:	Logged Out Home Page	4-1
Figure 4-2:	Register Your Organization Page	4-2
	User Registration Page	
	Agree to Terms Page	
•	Announcements Page	
	Logged In Home Page	
•	Logged in Home Page - Register Multiple Power Entities	
	Registration Page for Multiple Power Entities	
0	Confirm Relationship Page	
	: Logged in Home Page - My Profile	
0	: My Profile Page	
0	: Power Entity Menu	
	: Power Entity Home	
	: Power Entity Information Page	
	: Power Entity Details Tab	
•	: Addresses Tab	
•	: Add Address Page	
	: Contacts Tab	
	: Create Power Entity Contact Page	
	: Select Power Entity Contact Detail Page	
	: Select Power Entity Contact Page	
•	: Power Entity Documents Tab	
	: Add Document Page	
	: Verification Bodies Tab	
	: Select Verification Body for Power Entity Page	
	: Confirm Power Entity-Verification Body Relationship Page	
	: Facilities Tab	
	: Select Power Entity-Facility Relationship Page	
	: Confirm Power Entity-Facility Relationship Page	
	: ARB Notifications Tab	
	: Emitting Activities Tab	
Figure 4-32	: Add Emitting Activity Page	4-32
Figure 4-33	Power Entity Submissions Tab	4-34
	Facility without Units Annual Report Flow	
	Facility with Generating Units Annual Report Flow	
Figure 5-3:	Power Entity Annual Report Flow	5-2

List of Figures (cont.)

	<u>Page</u>
Figure 5-4: Submissions Statuses Flow	5-4
Figure 5-5: Power Entity and Facility Submissions Statuses	
Figure 5-6: Report Annual Data Sub-Menu	
Figure 5-7A: Select Submission Details - Emissions and Fuels	
Figure 5-7B: Select Submission Details - Energy and Production	
Figure 5-7C: Select Submission Details - SF ₆ Emissions (Power Entity)	
Figure 5-7D: Select Submission Details - Power Transactions (Power Entity)	
Figure 5-8: Select Facility Page	
Figure 5-9: Select Generating Unit Page	
Figure 5-10: Select Power Entity Page	
Figure 5-11: Annual Reporting Home	
Figure 5-12: Annual Reporting Filter	
Figure 6-1: Review Emissions and Fuels Submission Details Page	
Figure 6-2: Annual SF ₆ Emissions Submission Page	
Figure 6-3: Emitting Activity Fuel Use Data Detail Tab	
Figure 6-4: Select Emitting Activity Page	
Figure 6-5: Report Activity Fuel Use - Select Fuel	6-5
Figure 6-6: Report Activity Fuel Use - Enter Quantity Consumed	
Figure 6-7: Report Activity Fuel Use - Report Detailed Factors	
Figure 6-8: Activity Fuel Use Page	
Figure 6-9: Emissions Data Detail Tab	
Figure 6-10: Report Emissions - Select Fuel Grid	. 6-10
Figure 6-11: Report Emissions - Select GHG Tab	. 6-11
Figure 6-12: Report Emissions - Check Report Emissions Checkbox	. 6-11
Figure 6-13: Report Emissions - Select Calculation Method	. 6-12
Figure 6-14: Report Emissions - Review Results and Save	. 6-12
Figure 6-15: Complete Report Emissions Page	
Figure 6-16: Review Emitting Activity Emission Records	. 6-14
Figure 6-17: Device Level Fuel Use Data Detail Tab	. 6-15
Figure 6-18: Add Device Level Fuel Data Page	. 6-17
Figure 6-19: Supporting Documentation Tab	
Figure 6-20: Add Document Window	. 6-19
Figure 7-1: Review Energy and Production Submission Details Page	7-2
Figure 7-2: Indirect Energy Use Tab	7-3
Figure 7-3: Report Indirect Energy Use Data	
Figure 7-4: Select Provider Facility	
Figure 7-5: Select Provider Entity	7-6
Figure 7-6: Energy Production Tab (Non-Cogeneration)	7-7
Figure 7-7: Energy Production Tab (Cogeneration)	
Figure 7-8: Energy Provided or Sold Tab	
Figure 7-9: Report Wholesale Electricity Direct Export (Cogeneration and	
Non-cogeneration)	. 7-10
Figure 7-10: Report Thermal Energy Provided or Sold (Cogeneration Only)	
Figure 7-11: Report Electricity Provided or Sold (Cogeneration Only)	
Figure 7-12: Report Total Wholesale Electricity Sold (Cogeneration Only)	
Figure 7-13: Steam Production Tab	

List of Figures (cont.)

	Page
Figure 7-14: Cement Efficiency Metrics Tab	7-17
Figure 7-15: Hydrogen Tab	
Figure 7-16: Supporting Documentation Tab	
Figure 7-17: Add Document Window	
Figure 8-1: Power Transactions Submission Page	
Figure 8-2: Power Entity Power Transactions Reporting Requirements Summary	
by Entity Type	8-3
Figure 8-3: Upload Data	
Figure 8-4: Download Power Transaction Template(s)	8-5
Figure 8-5: Power Transaction Template - Guidance Tab	
Figure 8-6: Power Transaction Template - Submission Information Tab	
Figure 8-7: Power Transaction Template	8-8
Figure 8-8: Upload XML File to the Reporting Tool	
Figure 8-9: Current XML Submissions	
Figure 8-10: Upload Power Transactions Data Page	8-10
Figure 8-11: Power Transactions Submission Page	8-11
Figure 8-12: Power Transactions Data Tab	
Figure 8-13: Power Wheeled Data Tab	
Figure 8-14: Retail Sales Data Tab	
Figure 8-15: Facility Ownership Data Tab	8-14
Figure 8-16: Supporting Documentation Tab	8-15
Figure 8-17: Add Document Window	8-16
Figure 9-1: Review Submission Page	
Figure 9-2: Review QA Checks Page	9-3
Figure 9-3: Review Submission QA Checks Page - Ready for Certification	
Changes Submission Status to "Pending Certification"	
Figure 10-1: Certify or Unlock Annual Data Sub-Menu	
Figure 10-2: Certify Annual Data Homepage	
Figure 10-3: Certify or Unlock Annual Data Filter	
Figure 10-4: Review QA Checks Page	
Figure 10-5: Certification Page	
Figure 10-6: Review Submission Details and Facility Block	
Figure 10-7: Review Submission Data	10-8
Figure 10-8: Certify Submission and Change the Submission Status to	
"Unverified Locked Data"	
Figure 11-1: Verification Menu	
Figure 11-2: Verification Homepage	
Figure 11-3: Verification Homepage Filter	
Figure 11-4: Verify Annual Data Sub-menu	
Figure 11-5: Verify Annual Data Homepage	
Figure 11-6: Verify Annual Data Filter	
Figure 11-7: Verification Page	
Figure 11-8: Review Submission Details and Facility Block	
Figure 11-9: Verification Documents Tab	
Figure 11-10: Add Verification Document Pop-up	
riquie 11-11. Verity sudmission and change the sudmission status to Veritied"	11-9

CA GHG Emissions Reporting Tool: Users Guide February 25, 2009

[This page intentionally left blank.]



California GHG Emissions Reporting Tool: Users Guide

1.0 Overview

Beginning in early 2009, approximately 1,000 California businesses will be subject to a new greenhouse gas (GHG) reporting regulation adopted by the California Air Resources Board (ARB or Board), the ARB Mandatory Reporting Regulation. The regulation was developed under the California Global Warming Solutions Act of 2006 (Statutes of 2006; Chapter 488; Health and Safety Code sections 38500 et seq.). Approved by the Board in December 2007 and the first of its kind in the United States, the regulation requires facilities to report their annual GHG emissions in 2009 and every year thereafter. The California GHG Emissions Reporting Tool was developed to facilitate the reporting of annual data directly to the California Air Resources Board.

This document provides a general overview and introduction to the key features of the California GHG Emissions Reporting Tool web application. This document does not supplant or replace the regulation. It is intended to guide you, as a first-time or returning facility or power entity user, through the tasks and functions that you will most frequently encounter in your use of the California GHG Emissions Reporting Tool. For a high level overview of the Reporting Tool, please refer to the *California GHG Emissions Reporting Tool: A Primer*. Please also refer to the ARB Mandatory Greenhouse Gas Emissions Reporting website: http://www.arb.ca.gov/cc/reporting/ghg-rep/ghg-rep.htm.

1.1 The California GHG Emissions Reporting Tool General Description

The power entity/facility and core application infrastructure of the California GHG Emissions Reporting Tool application is based on the Emissions and Allowance Tracking System (EATS), a generic application sponsored by the U.S. Environmental Protection Agency (EPA). The emissions reporting module is based on Version 2.0 of the Online Calculation, Reporting and Verification Tool (CRAVe 2), also sponsored by EPA. The EATS system architecture uses ColdFusion and MS SQL 2005.

The California GHG Emissions Reporting Tool is a web based annual reporting tool managed by the California Air Resources board. The tool facilitates: reporting of annual GHG emissions data, reporting of non-emissions energy and production data, reporting of power entity power transactions data, tracking of power entity and facility information, and generation of emissions summary reports for reporters, regulatory bodies, and the public.

A typical user of the system will manage login and user information, manage and update general information about their organization (reporting sectors, location, address...), create and manage an inventory that can be utilized for subsequent annual reporting tasks

(generating units, emitting activities, and metering devices), report annual data within their created structure (emissions and fuels data, energy and production, power transactions), certify reported data, and manage relationships with verification bodies to facilitate the verification of their annual data.

Figure 1-1 illustrates the flow of data through the GHG Emissions Reporting Tool and indicates the responsible party for each action.

Figure 1-1
GHG Emissions Reporting Tool Reporting Flow



1.2 Base Functionality Supported by the Tool

The following functions are provided in the GHG Emissions Reporting Tool:

- Automated registration;
- User management and security;
- Definition of power entity information;
- Definition of facility information; and
- Definition of annual reporting inventory parameters to include:
 - -- Emitting Activities;
 - -- Generating Units;
 - -- Metering Devices; and
 - -- Energy and Production Reporting Categories.
- Annual Reporting of Data to include:
 - -- Emissions and Fuels Data (Facility and Generating Unit);
 - -- Energy and Production Data (Facility and Generating Unit);
 - -- Power Transaction Data (Bulk Upload) (Power Entity); and
 - -- SF6 Emissions Data (Power Entity).
- Quality Assurance checks;
- Tracking of Annual Data;
- Verification of Annual Data; and
- Generation of Reports.

1.3 Key California GHG Emissions Reporting Tool Concepts

Where methods are provided, the GHG mandatory reporting regulation requires the reporting of the six Kyoto greenhouse gases (GHGs): carbon dioxide (CO_2), nitrous oxide (N_2O), methane (CH_4), hydrofluorocarbons (HFCs), perfluorocarbons (PFCs), and sulfur hexafluoride (SF_6). GHG emissions are reported at the emitting activity level for the facility (and/or generating unit) for Facility Reporters, or for the power entity level for Power Entity Reporters. The software aggregates emissions to the power entity or facility level when generating annual reports of reported data.

A facility is any property, plant, building, structure, stationary source, stationary equipment or grouping of stationary equipment or stationary sources located on one or more contiguous or adjacent properties, in actual physical contact or separated solely by a public roadway or other public right-of way, and under common operational control, that emits or may emit any greenhouse gas. Operators of military installations may classify such installations as more than a single facility based on distinct and independent functional groupings within contiguous military properties.

A power entity is a person, firm, association, organization, partnership, business trust, corporation, limited liability company, company, or government agency. For mandatory reporting purposes entities include retail providers, marketers, asset owning/controlling suppliers of electric power, and the California Department of Water Resources.

A generating unit, related to the electricity generation sector, means any combination of physically connected generator(s), reactor(s), boiler(s), combustion turbine(s), or other prime mover(s) operated together to produce electric power.

A *verification body* means a firm or AQMD/APCD, accredited by ARB, that is able to render a verification opinion and provide verification services for operators subject to reporting.

1.4 User Groups and Roles

The reporting tool will include individualized functionality based on the type of client using the system.

System Administrators, Program Managers, and Regulatory Auditors will typically be ARB staff responsible for operating, administering, and maintaining the tool.

Power Entity Managers and Power Entity Reporters will be owners or operators of power entities, and managers, consultants, and other private parties involved in reporting annual data.


Facility Managers and Facility Reporters will be owners or operators of facilities, facility staff and managers, consultants, and other private parties involved in reporting annual data.

Lead Verifiers are users representing a verification body responsible for verifying GHG emissions.

Please see the figure below for an overview of all of the actors that will interact with the California GHG Emissions Reporting Tool, and the roles and permissions each will have.

Figure 1-2
User Roles

California GHG Reporting Tool Use Diagram
All Users

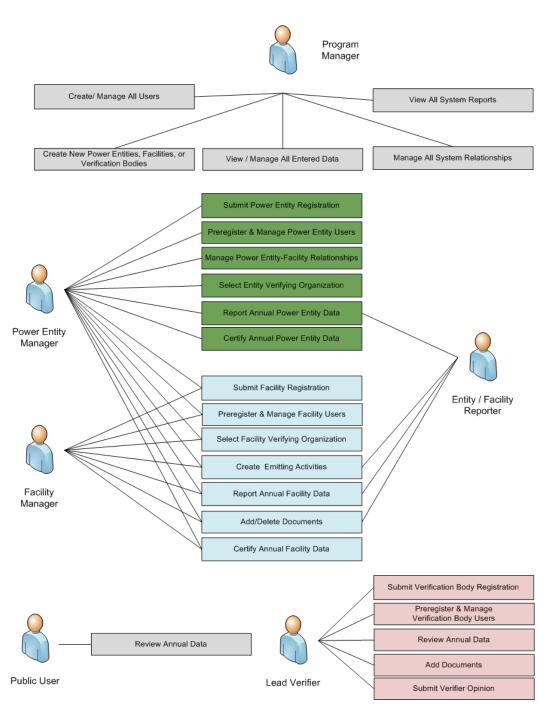


1.5 General Tips and Data Entry Conventions

The following information describes the navigation tools for the application.

Menu Navigation. The top horizontal menu bar options across the top of the screen provide access to the functional areas within the application. The functional areas displayed in the menu depend on the user group assigned. When you hover your mouse over the main menu options, any available submenu options will be displayed. If you click on the main menu option, the "home" page for that module will appear.


Figure 1-3 Top Horizontal Menu Bar

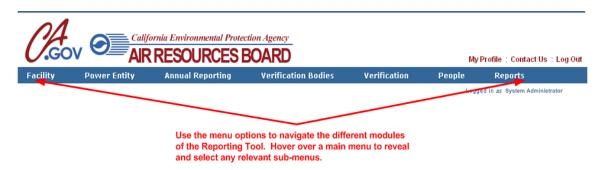

Note: The menu options displayed above represent the menu view for a System Administrator user, which includes the entirety of menu options. Depending on user security group, menu options may be limited, and all of the menu options in Figure 1-2 above may not display.

Grids. The module home pages contain grids that summarize the existing data contained in the GHG Emissions Reporting Tool for the selected subject area (Entities, Facilities, Annual Reporting, etc.). Grids that contain too many rows of data to display on one page can be navigated using the arrows at the bottom or the scroll bar along the right side. In most cases, home page grid column headers can be sorted in ascending or descending order by clicking on the grid column header.


Figure 1-4 Grid Example

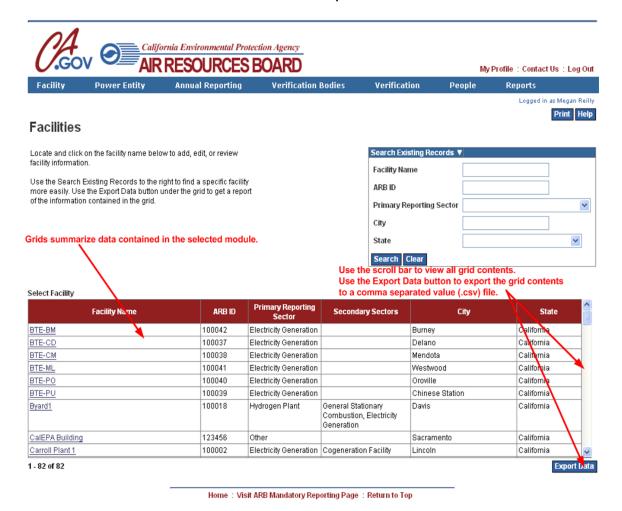

Tabs. In instances where pages contain multiple grids, the grids can be navigated using the series of tabs across the top of the grids. Each tab displays a subject area name.

To view more detail or edit information presented in a grid, grids contain "hyperlinks," radio buttons, and/or highlighting row selection (Annual Reporting module only).

Figure 1-5 Tab Example

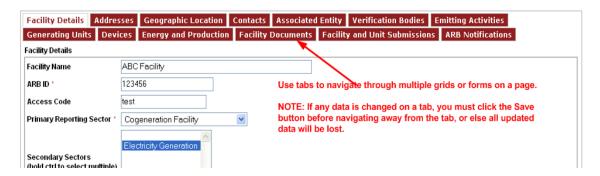


Hyperlinks. Hyperlinks are identified by underlined blue text; simply clicking on a hyperlink will take you to the detail page for the selected item.

Figure 1-6 Hyperlinks



Radio buttons. Radio buttons appear in the left hand grid column; to select a row of data to view or change, click on the radio button for the desired row and then click on the button below the grid to perform the desired action.

Figure 1-7 Radio Buttons

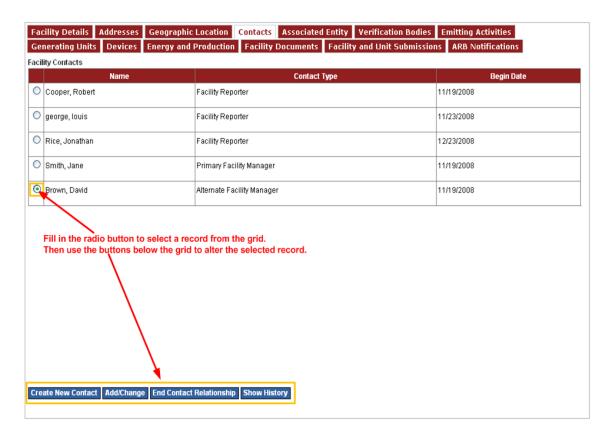


Highlighting Row Selection. Highlighting row selection may be available for some grids in the Annual Reporting module; when you hover your mouse over the grid rows, the row will become lightly highlighted. To select a row of data to view or change, click anywhere on the desired row and then click on the button below the grid to perform the desired action.

Figure 1-8 Highlighting Row Selection


Annual Reporting

Highlight and click on the row in the grid below listing the Submission ID for which you wish to review annual submission data. Then click the Next button.

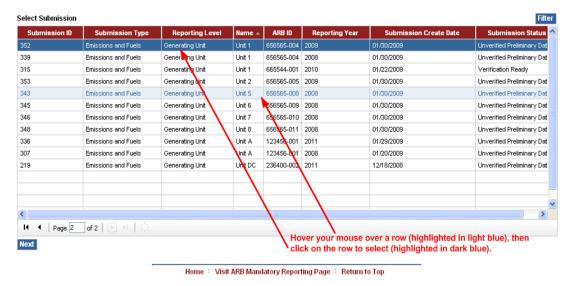

Filters. To make an item in a grid easier to find, you can use the filters above the grid. Filters may be either an "exact match" or "partial match." Multiple filters can be applied at the same time to further narrow a search. Click on the Clear button to refresh the grid to display all data.

Figure 1-9 Filters

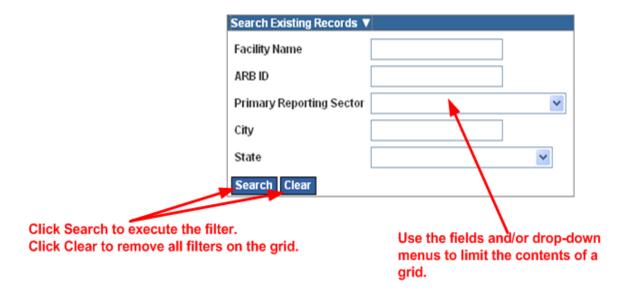

Edit Button. To change the information that appears in a grid, fill the radio button adjacent to the item to be changed. Click the Edit button. This will take you to a "Select" page where you are able to select a new item to be added from existing data. To select, fill the radio button adjacent to the selection, provide any other required information, and click the Select button.

Add Button. If new data needs to be added (i.e., a person does not appear in the grid on the Select pages), you can click on the Add button to add a new one. This will take you to an Add page where new data can be added to the database. Once new data has been added, it remains in the system and may be selected again at a later time.

Back Button. Click the Back button on any screen to navigate from a low-level screen back to a higher level screen.

Note: Clicking on the Back button before any selected changes have been saved or submitted will not store any of the changes made on that screen. Using the Browser back arrow will reverse back to previously viewed pages, instead of returning to the higher level menu option.

Save and Submit Buttons. When you click on a Save or Submit button, a message will always display in red at the top of the screen. If the Save or Submit was successful, the message will inform you that data were saved. <u>Use the Back or Cancel buttons to return to previous menus or screens if you do not wish to save or submit the changes</u>. If the Save failed, one or more Error Messages will display in red at the top of the screen describing the problem encountered. On the applicable data entry screen, correct the problem and click on Save or Submit again.

Show History Button. Clicking the Show History button beneath a grid displays all of the historical associations for a particular item. Click on the Show Current button to return to the current associations.

Required Fields. Required fields on each data entry screen are indicated by a red asterisk (*). You will not be able to save the information entered on a form until all required fields on the form have been completed.

1.6 Annual Reporting Concepts and Reporting Flow

Figure 1-10 illustrates the major actions that need to be completed in year one and year two of reporting using the California GHG Emissions Reporting Tool. Note that in year two, you only have to update information prior to reporting new annual data.

Figure 1-10 Major Actions

Using the GHG Reporting Tool Year One: 2008 Reporting Year

- 1. Register Your First Facility & User Account (Home Page)
- 2. Register Additional Facilities (Inside Tool)
- 3. Complete Basic Facility Information
- 4. Set Up Additional Users
- 5. Create Annual Report Structure (Emitting Activities, Units...)
- 6. Enter Annual Data for 2008
- 7. Submit Annual 2008 Report

Using the GHG Reporting Tool Year Two: 2009 Reporting Year

- 1. Update Annual Report Structure If Needed.
- 2. Enter Annual Data for 2009
- 3. Submit Annual 2009 Report

Figures 1-11 and 1-12 below display the basic components and flow for submissions:

Figure 1-11
GHG Emissions Reporting Tool Reporting Flow Summary


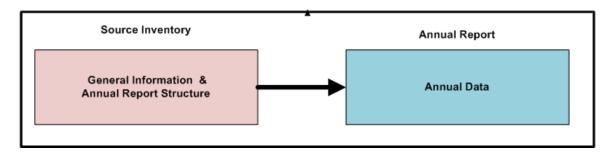


Figure 1-12
GHG Emissions Reporting Tool Reporting Flow Detailed

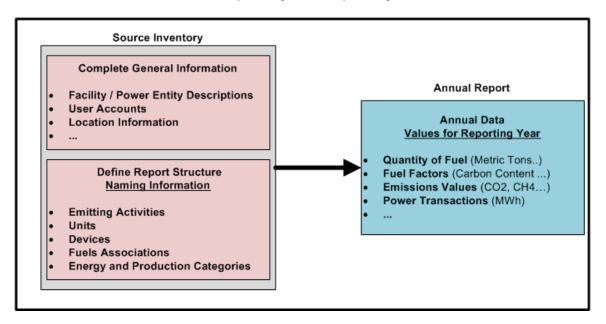

Source Information is defined for your organization once in the first reporting year. This structure remains in place and can apply to multiple years of data. If updates are necessary, Source Information can be edited as needed.

Basic Source Information:

- Required Details (Primary Reporting Sector, Secondary Reporting Sector(s), NAICS, Description);
- Geographic Location Information/Address;
- Relationships To other Organizations in the system;
- Notifications from the ARB; and
- User Relationships.

The Reporting Structures for your organization drive what you can report in the annual reporting module. This structure remains static and can apply to multiple years of data. If updates are necessary, Reporting Structures can be edited as needed.

Basic Reporting Structures:

• Facilities:

- -- Emitting Activities
 - Fuel Associations, if applicable, per Emitting Activity
- -- Generating Units
 - Emitting Activities
 - + Fuel Associations, if applicable, per Emitting Activity
- -- Device
- -- Energy and Production Categories


• Power Entities:

-- Emitting Activities for SF₆ Emissions

Figure 1-13 displays the basic flow for submissions with the respective user roles for each status type a submission can have along each step of the reporting process.

Figure 1-13
Submissions Statuses Flow

Submission Status Flow

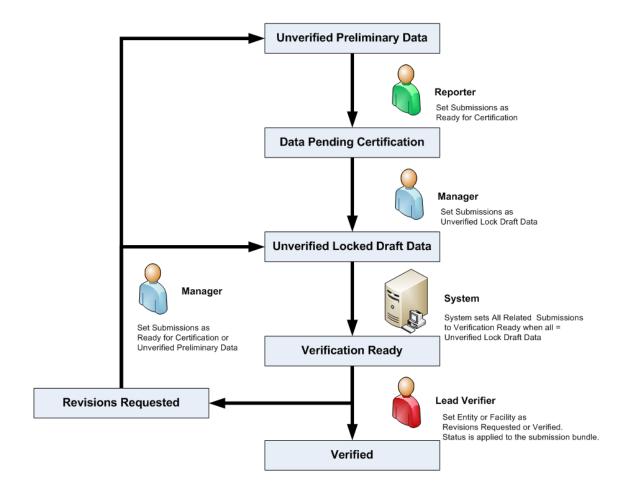

2.0 Common Tasks and Steps for a Facility Manager User

The information and instructions contained in this section pertains to facility registration and setting up basic facility information (facility contacts, addresses, geographic location, etc.). For information and instructions pertaining to power entity registration, please refer to the next section (Section 4.0) of the Users Guide.

2.1 Setting Up Your Facility (or Facilities)

2.1.1 First Time Facility Registration and Logging In to the California GHG Emissions Reporting Tool

Note: Use these steps and instructions *only* for the first facility that you register. Registering additional multiple facilities can be completed after you have logged in to the tool. Please see Section 2.1.2 for more details.

 Navigate to the California GHG Emissions Reporting Tool (https://GHGReport.arb.ca.gov). Click on the Register button on the homepage to register your facility and complete user registration, where you will create a GHG Emissions Reporting Tool username and password.

California Environmental Protection Agency User Login Welcome to the California Air Resources Board's Online Greenhouse Gas (GHG) Reporting Tool. The reporting tool has been designed to meet the needs of companies and agencies reporting GHGs and other information User ID * required by the State's mandatory reporting regulation. It also serves as a unified tool for facility tracking and certification of emission reports Password as well as data verification by third-party verifiers, as required by the Because ARB's GHG reporting tool shares its basic software platform Forgot your <u>User ID</u> or <u>Password</u> with existing reporting and tracking tools developed for U.S. EPA and The Climate Registry, it is also designed to ease transitions to potential regional and national reporting programs in the future. Register for an ARB login A User Guide for the reporting tool is available at the California's To activate a user account for an organization, mandatory reporting web page, at click the Register button http://www.arb.ca.gov/cc/reporting/ghg-rep/ghg-rep.htm. Home: Visit ARB Mandatory Reporting Page: Return to Top Click Register button to set up your Facility and Reporting Tool user login.


Figure 2-1 Logged Out Home Page

2) Select Yes or No from the drop-down menu next to the guestion "Already a User?"

Note: If you have already chosen a username and password, then you are already a user and should select **Yes**. You should then log in to the Reporting Tool with this username and password, and can proceed with registering other additional facilities if necessary from within the tool (see Section 2.1.2).


3) Select the Organization Type (Facility) and enter the ARB ID and Access Code provided to you by ARB. Then click the **Next** button to proceed with user registration.

Figure 2-2 Register Your Organization Page

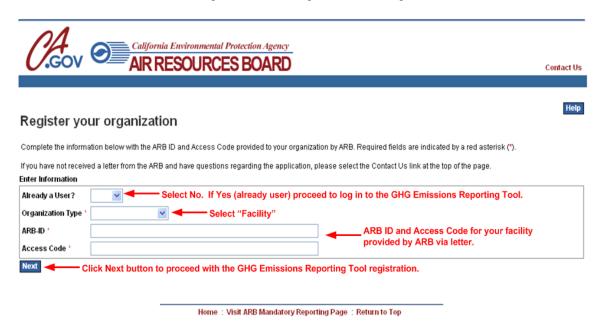


4) Enter personal contact information on the Complete User Registration page. Required fields are indicated by a red asterisk (*), and must be completed before you are able to save data on the form and continue off the page. Choose a GHG Emissions Reporting Tool username and password. Usernames for the GHG Emissions Reporting Tool must be between three and eight total characters and must contain only alphanumeric characters. Passwords for the GHG Emissions Reporting Tool must contain at least eight characters with at least one uppercase, one lowercase, and one numeral. Then click the Next button.

Figure 2-3 User Registration Page

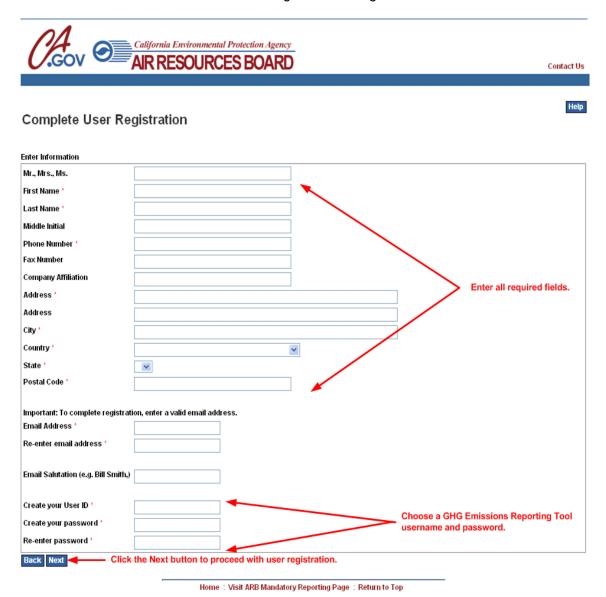


5) Read the Access Agreement and Terms of Use for the ARB GHG Reporting Tool. Click the I Agree to these Terms button. You must agree to the terms of the system to proceed with registration for the California GHG Emissions Reporting Tool. If you decline or cancel by clicking either the I Decline or Cancel buttons, your registration will be withdrawn.

Figure 2-4 Agree to Terms Page

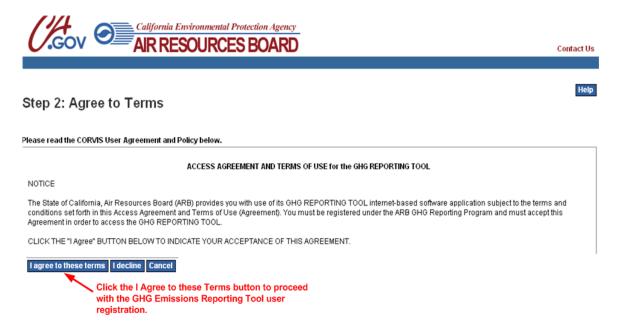

6) Read any current system announcements. Click the **Continue** button. Upon clicking the **Continue** button, you will be automatically logged in to the GHG Emission Reporting Tool.

Figure 2-5 Announcements Page

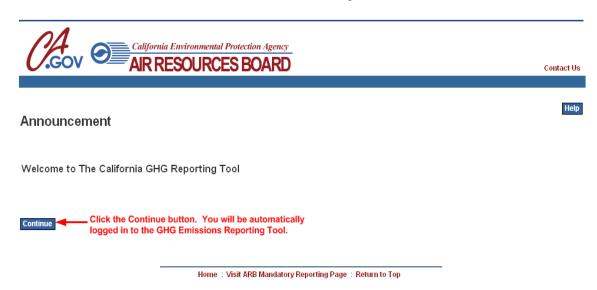

7) Successful completion of the GHG Emissions Reporting Tool registration automatically logs you in to the system. For future access to the GHG Emissions Reporting Tool,

enter your User ID and password on the GHG Emissions Reporting Tool homepage. After you click the **Login** button you will see the logged in home page as displayed in Figure 2-6. From the home page, you can perform the following activities:

- Use the top horizontal menu bar to access the GHG Emissions Reporting Tool modules (see Section 1.5 for further description of the reporting tool menu structure);
- Use the quick links listed under your user group, under the heading "Responsibilities" to navigate directly to a specific page;
- Register additional facilities using the blue Register Additional Organization button;
- Update your contact information, email address and password by clicking on the Edit button under My Profile;
- Read previous system announcements posted by the Air Resources Board in the Announcements section; or
- Send a question or report a problem to the Air Resources Board using the Contact Us link.



Figure 2-6 Logged In Home Page

2.1.2 Registering Multiple Facilities

If you have received registration information (ARB ID and Access Code) from ARB for multiple facilities, you should see the steps and instructions below. If you only have received one ARB ID and access code, and will be reporting for only one facility, you may skip ahead to Section 2.1.4 to review further information about setting up your facility's information.

- 1) Register your first facility and complete user registration following the steps and instructions in Section 2.1.1.
- 2) Log in to the tool by entering your username and password and clicking the Login button. Upon logging in, you will be automatically navigated to the California GHG Emissions Reporting Tool Home page.
- 3) Click on the blue **Register Additional Organization** button in the middle of the page, under the heading "Responsibilities."

Figure 2-7
Logged in Home Page - Register Multiple Facilities



4) Enter the ARB ID and Access Code for the additional facility contained in the letter from ARB. On this page, the Organization Type (Facility) will already automatically be selected for you. Click the **Next** button.


Figure 2-8
Registration Page for Multiple Facilities



5) On the following page, confirm that the facility displayed is the one which you would like to register.

Note: By registering this facility, you will automatically be assigned as the Facility Manager for this facility. This relationship can later be ended if necessary.

Figure 2-9 Confirm Relationship Page

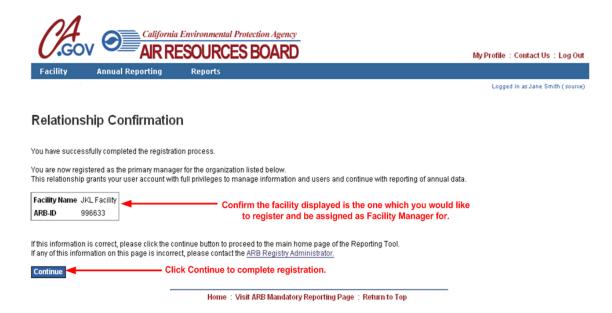

6) Repeat for other additional facilities, if necessary.

2.1.3 Go to My Profile

My Profile is used to edit and manage your personal user information, such as your email address, mailing address, phone number, or system password. Please keep the contact information in My Profile as up to date as possible; particularly your email address as this is used to send you system emails, such as notification of password expiration or notification of other actions taken in the system (e.g. annual report certified or verification opinion issued).


Figure 2-10 Logged in Home Page - My Profile



1) From the Reporting Tool homepage, you can access My Profile by clicking the Edit button in the lower right hand corner of the screen in the My Profile block.

From any page when you are logged in to the Reporting Tool, you can always access My Profile by clicking on the red hyperlink **My Profile** that displays in the upper right hand corner of your screen whenever you are logged in to the Reporting Tool.

Figure 2-11 My Profile Page

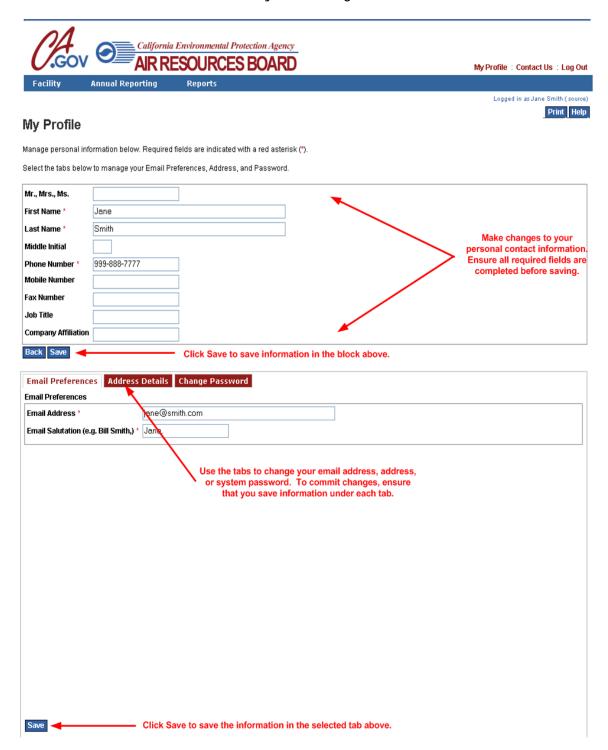

2) Use the top block on the page to edit your name, phone number, job title, or company affiliation. To save click the **Save** button below the block. All required fields in the block, as indicated by a red asterisk (*) must be completed.

3) Use the tabs to edit specific information, such as your email contact information, address contact information, or system password. Click the **Save** button at the bottom of the page to save the information entered on that tab.

Note: If you navigate away from the tab before clicking the **Save** button, all new information entered on the tab will be lost.

2.1.4 Go to the Facility Information Page


1) Click on the Facilities menu link in the top navigation menu at the top of the screen, or click on the Manage Facility Information link under the Facility User Responsibilities section of the homepage.

Figure 2-12 Facility Menu




2) If you are associated with more than one facility, click on the Facility Name hyperlink in the facility home page grid.

Figure 2-13 Facility Homepage

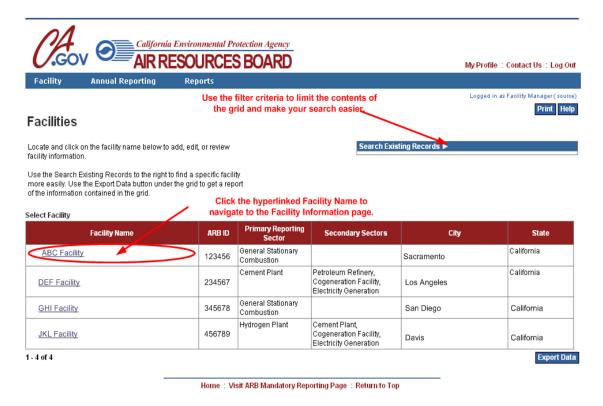

3) After clicking the Facility Name hyperlink, you will be navigated to the Facility Information page for the selected facility.

Figure 2-14 Facility Information Page

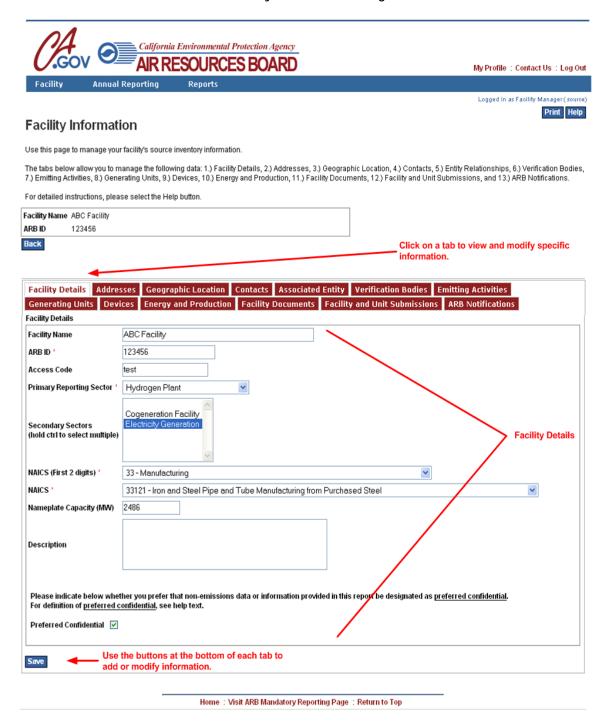

2.1.4.1 Verify and/or Modify Facility Details (Facility Details Tab)

1) Click the Facility Details tab. Review the information in the Facility Details tab to confirm that the Facility Name, Primary Reporting Sector, Secondary Reporting Sector if applicable, NAICS (First 2 digits), NAICS, Nameplate Capacity (MW) if applicable,


Description, and Preferred Confidential Status are correct. Make any necessary changes and click the **Save** button.

- a) Preferred Confidential: State law mandates that all emissions data be considered public information. The GHG mandatory reporting regulation requires reporters to provide non-emissions data that may be a trade secret or sensitive business information. Reporters may check this box to require a Public Records Act request procedure before a determination is made of that information which should be made publicly available. ARB has many programs that require the collection of sensitive business data and a well established process of working with regulated businesses and members of the public when non-emissions data is requested.
- b) PRIMARY and SECONDARY SECTOR DESIGNATIONS: Often facilities have emitting activities that require reporting under more than one industry sector. Examples are a refinery with a hydrogen production plant, and a general combustion facility with a cogeneration plant. ARB staff has assigned some facilities a primary sector designation to indicate the principal reporting requirements that apply to that facility. Please review this designation under the Primary Reporting Sector field. You may change it, or if a designation has not been pre-assigned, please identify your facility's primary sector according to its principal business. Then, if your facility has additional sector reporting requirements under the same operational control, please identify one or more secondary sectors.

If you are not a refinery, hydrogen plant, cement plant, or general stationary combustion facility that meets the 25,000 metric ton CO2 threshold, but are required to report because you have power generating units down to 1 MW, you should assign your primary sector as being electricity generation or cogeneration. This applies even if your primary business activity is something else. Please refer to the GHG mandatory reporting regulation and reporting guidance or consult with ARB staff for applicability requirements.

Note: For the Secondary Reporting Sector, hold down the "Ctrl" button to highlight multiple selections. All Secondary Reporting Sector options will be listed in this box. If a Secondary Reporting Sector is listed in the box, but not highlighted, then it has not been selected.


Figure 2-15 Facility Details Tab

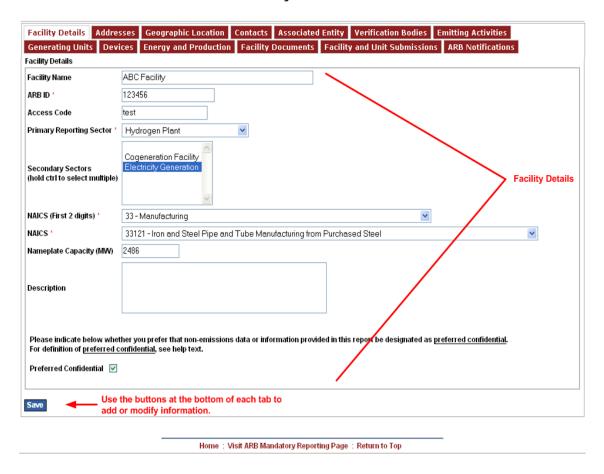

2.1.4.2 Manage Facility Addresses (Addresses Tab)


1) Click the Addresses tab and review the address information displayed in the grid to confirm that the address listed is correct.

Figure 2-16 Addresses Tab

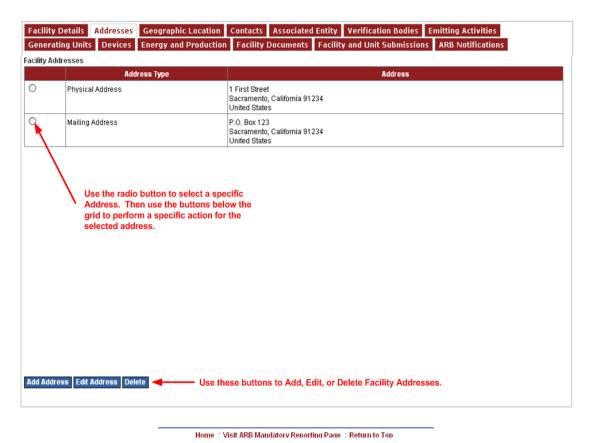

- a) Make any necessary changes by selecting the address with the radio button and clicking the Edit Address button under the Addresses grid. On the Edit Address page, make any necessary changes and clicking the Save button. Then click the Back button to return to the Facility Information page.
- b) Add a secondary address for your facility by clicking the Add Address button under the Addresses grid. On the Create Address page, enter all required fields, as indicated by a red asterisk (*) and click the Save button. Then click the Back button to return to the Facility Information page.

Figure 2-17 Add Address Page

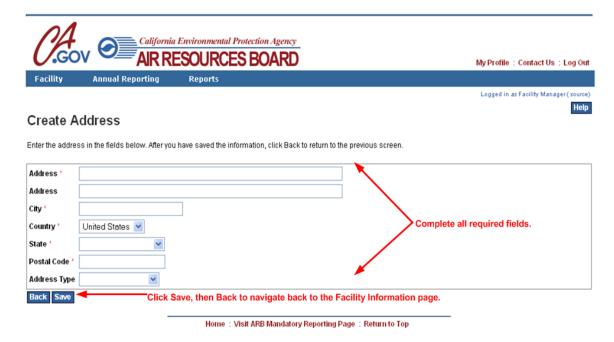

2.1.4.3 Manage Geographic Location Information (Geographic Location Tab)


- 1) Click the Geographic Location tab to enter relevant geographic location information for your facility. California facilities will provide latitude and longitude coordinates and to select their County, Air Basin, and Air District. Out-of-state, non-California facilities will only provide their facility's latitude and longitude coordinates.
 - a) Enter your latitude coordinates and longitude coordinates in the corresponding fields. Latitude and longitude coordinates should be entered in decimal degrees. This field will support up to five decimal places.

Note: Use the link to Google Maps to confirm already entered geographic location coordinates. If you do not know your geographic location coordinates, the external link from Google Maps is available to help you find your facility's geographic location. Navigating to Google Maps will open a new browser that is external to the GHG Emissions Reporting Tool.

- i. If you do know your latitude and longitude coordinates, you may use Google Maps to confirm them. Enter your latitude and longitude coordinates in the Reporting Tool. Then click on the Google Maps icon on the tab to open a new browser window that will display the entered latitude and longitude coordinates in Google Maps.
- ii. If you do not know your latitude and longitude coordinates, you may use Google Maps to find them. Click on the Google Maps icon on the tab to open a new browser window. Use the map to find your facility.

b) Enter all required information, as indicated by a red asterisk (*) and click the Save button.

Figure 2-18 Geographic Location Tab

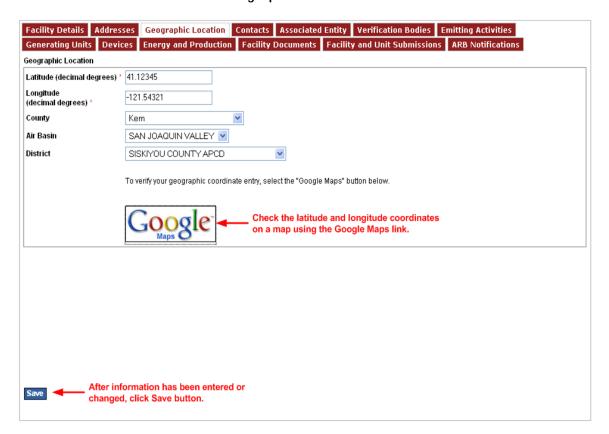


2.1.4.4 Add and Manage Facility Contacts (Contacts Tab)

The main facility contact types are Primary Facility Manager, Alternate Facility Manager, and Facility Reporter. Each Facility must have at least one Primary Facility Manager at all times, and may have a maximum of two Primary Facility Managers. The user who registers a facility is automatically assigned as the facility's Primary Facility Manager.

1) Click on the Contacts tab to create, add, and manage contacts associated with your facility.

Figure 2-19 Contacts Tab

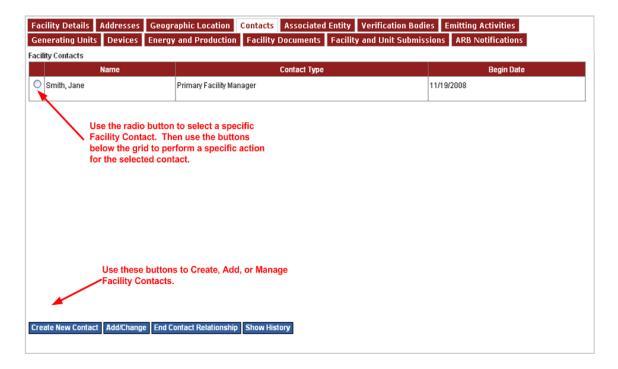


2) To create a new facility contact, who is not yet a user of the GHG Emissions Reporting Tool, click the Create New Contact button.

Note: You should only create a new contact if this user is not yet a user of the GHG Emissions Reporting Tool. Before creating a new contact, please check to see if the person is already a user by clicking on the Add/Change button and searching for the person in the grid and/or using the filter criteria at the top right of your screen.

- a) If you are unsure, you can check by clicking the Add/Change button and trying to find their name(s). Names already in the grid are already users and should be added to your contacts list, not created as a new contact.
- b) If you try to add a new contact, and you receive a system error that this person's email address already exists, then this person is either already a registered user (see Step a) or has already been created as a contact person, but has not yet completed the registration process and become a user. In the latter case, this person should go into their email inbox and find the pre-registration notification email. Then he or she should click on the link and complete registration to become a user of the Reporting Tool. After he or she have completed registration and become a user, you will be able to add him or her as a contact for your facility.
- 3) Enter basic contact information for the new facility contact on the Create Facility Contact page. Required fields are indicated by a red asterisk (*). Click the Save button.


Figure 2-20 Create Facility Contact Page

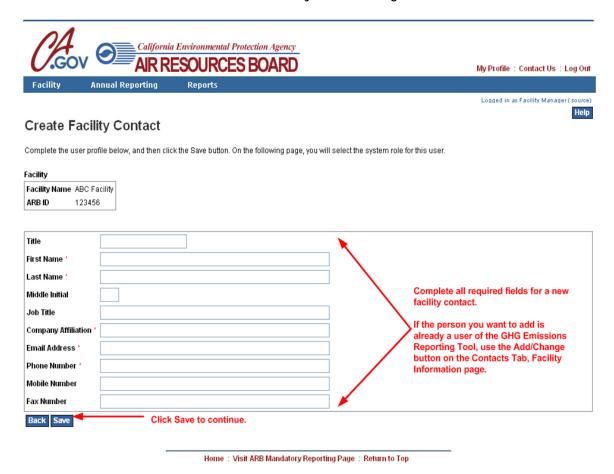

4) On the Select Facility Contact Detail page, select a Contact Type (Primary Facility Manager, Alternate Facility Manager, or Facility Reporter) for the new facility contact. Select a Begin Date using the calendar icon, if necessary.

Note: If no date is selected, the current system date will automatically be assigned as the Begin Date. Then click the **Save** button.

Figure 2-21 Select Facility Contact Detail Page

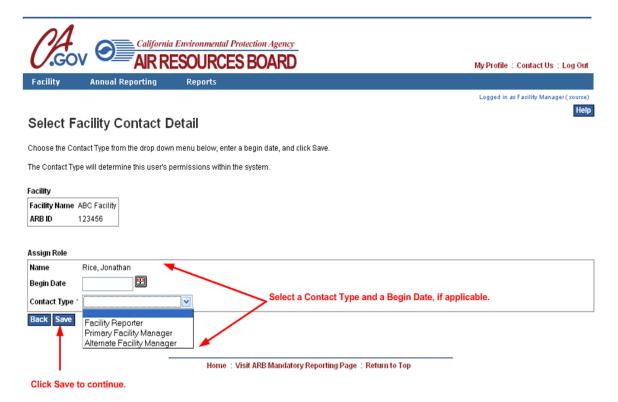


- 5) To select a contact who is already a user of the GHG Emissions Reporting Tool that you would like to associate with your facility, click the Add/Change button.
 - a) On the Select Facility Contact page, select the person you would like to add as a facility contact. To select a person, fill in the radio button next to their name and click the Select button. You may use the Search Existing Records block to the right to refine your search.

Note: Only people who have registered as users of the California GHG Emissions Reporting Tool will display in this grid. Contacts that have been previously created, but who have not completed the registration process to become a user will not display in this grid.

If you have previously added a person, but do not see their name in this grid, it is likely because they are not yet users of the Reporting Tool. The contact must open his or her pre-registration notification email, click on the link, and complete the registration information before they will display in the grid and be added as a facility contact.

Figure 2-22 Select Facility Contact Page

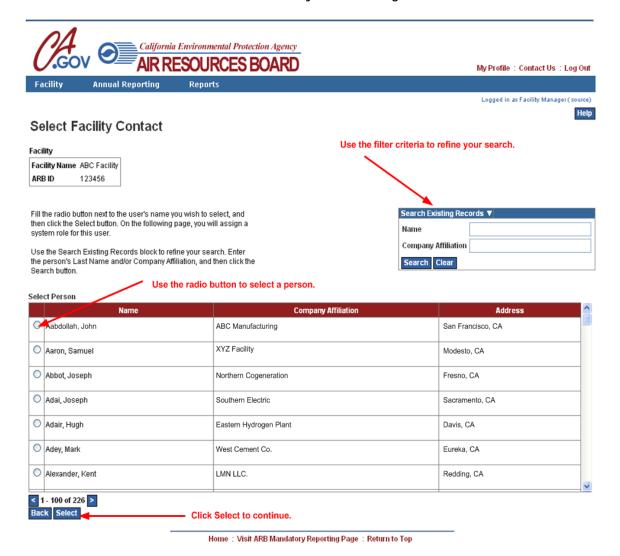


- b) On the Select Facility Contact Detail page, select a Contact Type (Primary Facility Manager, Alternate Facility Manager, or Facility Reporter) for the new facility contact. Select a Begin Date using the calendar icon, if necessary. If no date is selected, the current system date will automatically be assigned as the Begin Date. Then click the Save button. See Figure 2-21 for more information.
- 6) To end a facility contact relationship, select the contact with which you would like to end the relationship by filling the radio button next to his or her name and click the **End Contact Relationship** button. From the calendar pop-up, select the date on which you would like the relationship to end.
- 7) To view all current and historic Facility contacts, click the **Show History** button.

2.1.4.5 Add and Edit Facility Documents (Facility Documents Tab)


1) Click the Facility Documents tab to upload documents for your facility or to edit existing facility documents.

Figure 2-23 Facility Documents Tab

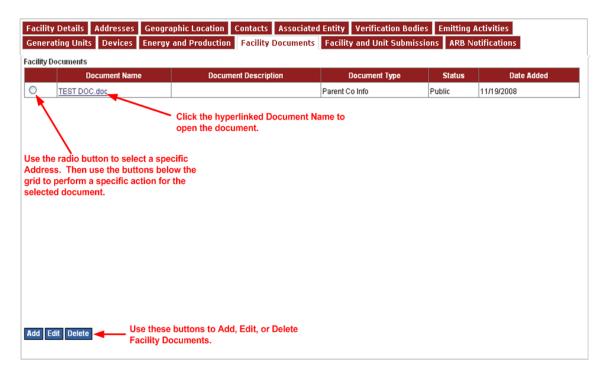

a) Add a document for your facility by clicking the **Add** button under the Facility Documents grid. On the Add Document page, use the **Browse** button to find and upload a file from your local computer, enter all required fields as indicated by a red asterisk (*), and click the **Save** button. Then click the **Back** button to return to the Facility Information page.

Figure 2-24 Add Document Page

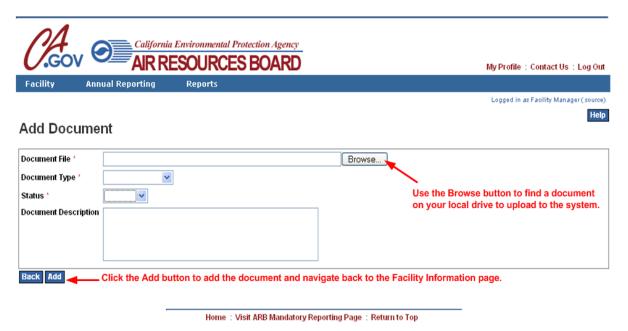


b) Make any necessary changes to the description of an existing document by selecting the document with the radio button and clicking the Edit button under the Facility Documents grid. On the Edit Document page, make any necessary changes and clicking the Save button. Then click the Back button to return to the Facility Information page.

2.1.4.6 Add and Manage Facility Verification Bodies (Verification Bodies Tab)

1) Click on the Verification Bodies tab to add and manage verification body relationships associated with your facility.


Figure 2-25 Verification Bodies Tab

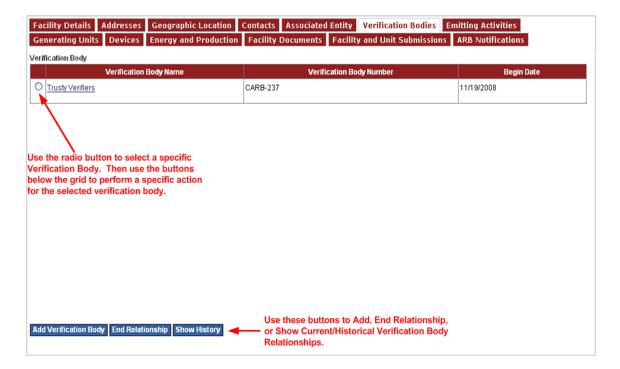

- To select a verification body that you would like to associate with your facility, click the Add Verification Body button.
 - a) On the following Select Verification Body for Facility page, select the verification body you would like to designate for the third party verification of your facility's annual report. To select a verification body, fill in the radio button next to its name and click the Select button. You may use the Search Existing Records block to the right to refine your search.


Note: A facility should not add a verification body until ARB has approved the Conflict of Interest assessment for the facility-verification body relationship.

Figure 2-26 Select Verification Body for Facility Page

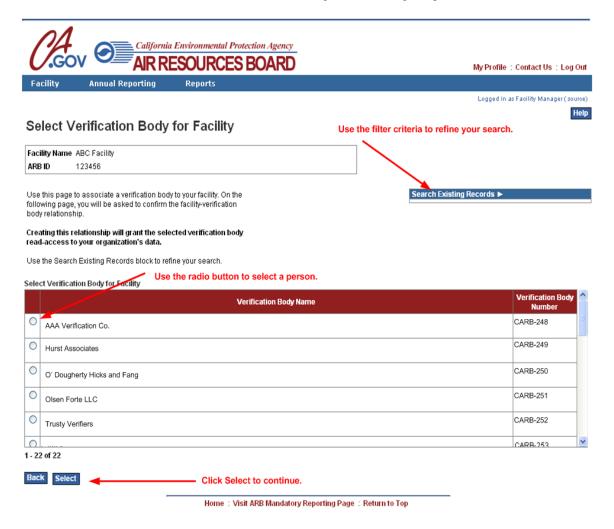

b) On the following Confirm Facility-Verification Body Relationship page, confirm that the verification body name displayed on the page is correct. If correct, click the **Select** button. If incorrect, click the **Back** button and select the correct verification body.

Figure 2-27 Confirm Facility-Verification Body Relationship Page

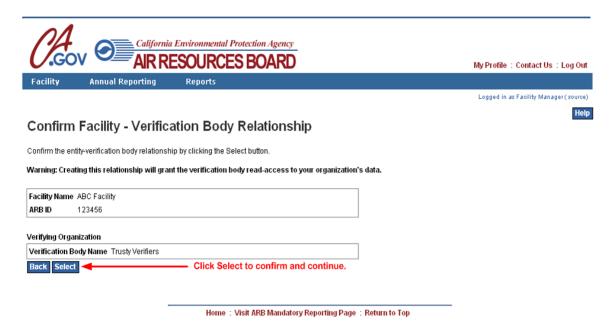


- 3) To end a facility-verification body relationship, select the verification body with which you would like to end the relationship by filling the radio button next to its name and click the **End Relationship** button. From the calendar pop-up, select the date on which you would like the relationship to end.
- 4) To view all current and historic verification bodies with which your facility currently does or has had a relationship, click the **Show History** button.

2.1.4.7 View Power Entity Relationships (Associated Entity Tab)

 Only retail providers, power marketers, asset owning/controlling suppliers, and the California Department of Water Resources are considered power entities within the tool. To view a power entity with which your facility has an association, click the Associated Entity tab.

Figure 2-28 Associated Entity Tab

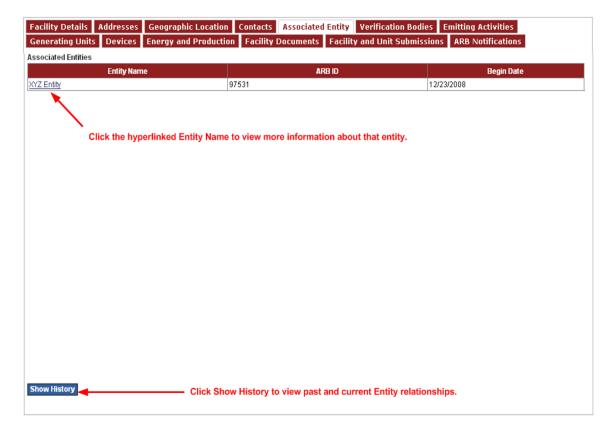


- 2) Facility users do not have the ability to edit power entity-facility relationships. However, if there is a power entity listed on this tab that you believe is in error, please contact the System Administrator by using the Contact Us link at the top right of the page.
- 3) To view all historic and current power entity relationships, click the **Show History** button.

2.1.4.8 View ARB Notifications (ARB Notifications Tab)

1) To view any notifications that the System Administrator or ARB Program Managers may have entered for your facility, click the ARB Notifications tab.

Figure 2-29 ARB Notifications Tab

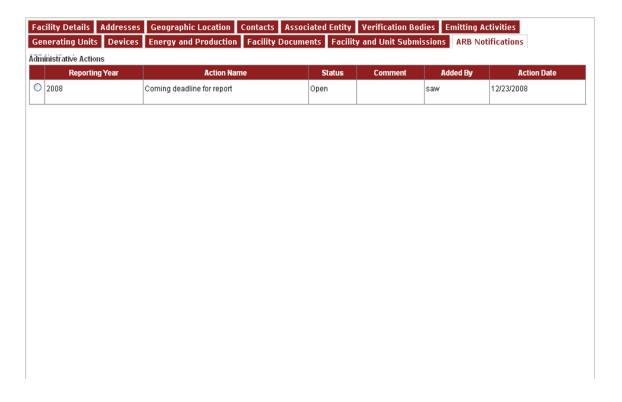

After the basic Source Information for your facility, and generating units if applicable, has been entered, the Reporter should proceed to setting up the Reporting Structure for the facility and generating units, if applicable, including Emitting Activities, Fuel Associations, and Energy and Production Reporting Categories. See the following section, Section 3.0 Facility Reporting Structure, for more information.

[This page intentionally left blank.]

3.0 Setting Up Your Facility's Reporting Structure (Emitting Activities, Generating Units, Devices, Energy and Production Reporting Categories, and Facility and Unit Submissions)

Reporting Structure

Below are some basic definitions of reporting structure data required for your organization:

An *emitting activity* represents equipment or processes for a power entity, facility, or generating unit that has the capacity to produce emissions. Reporters create emitting activities to organize and define their reported emissions, fuels, and feedstocks as required by the Mandatory GHG Reporting Regulation. An emitting activity in the reporting tool includes naming and categorization information, status and aggregation information, and associated fuels consumed by the emitting activity. Emitting activities may be defined very specifically for an individual process (e.g., a specific boiler) or broadly to cover an entire organization's emissions reporting category (e.g., all stationary combustion). Reporters can adjust emitting activity status and aggregation level of individual emitting activities to facilitate the correct organization of emissions and fully represent the correct configuration of the facility's GHG emissions sources. Fuels used for reporting emissions must be associated with the emitting activity.

For each emitting activity, the reporting tool provides an *emitting activity status* setting that indicates whether or not the reported equipment, activity, or process will be included in generating the annual report for the current reporting period. This status code is not part of the regulatory requirements and is used solely to aid in quality assuring reported data.

An *emitting activity aggregation level* indicates how the data associated with the selected emitting activity should be aggregated in a report. This status code is used solely to aid in generation of reports in order to avoid double counting of reported data.

An emitting activity fuel association indicates which fuels, feedstock or other inputs were combusted, consumed or processed, in order to generate emissions for the selected emitting activity. These associations are made directly in an emitting activity record.

A *device* is a representation of the last point of metering at a facility. A Facility determines the number and naming structure they wish to apply to a device to properly represent their points of metering.

Emissions Submission Data (Emissions and Fuels and SF₆ Emissions)

Below are basic definitions of types of emissions and fuels data that may be reported for your organization's submission. Please see Section 5.1 for more information on how to create a submission, and Section 6 for more information on Emissions and Fuels submission reporting.

Emitting Activity Fuel data are reported per each defined emitting activity for one submission.

Emissions data are reported per each defined emitting activity and/or Emitting Activity Fuel for one submission.

Annual SF_6 Emissions data are reported per each defined emitting activity for one submission.


Device level fuel data are reported per each defined device for one submission.

3.1 Add and Manage Facility Emitting Activities (Emitting Activities Tab)

The reporting tool is designed to retain certain information from year to year. For example, in year one the reporter would set up with facility emitting activities for the sources that are required to be reported. General practice in following years will be to simply update the data associated with those sources; information on emitting activities would only be re-entered if changes were made at the facility. This section provides the steps on how to add emitting activities and set up your facility for reporting when you first enter the tool. Please note that to report emissions, the reporter must first create a submission, described in Section 5 of this document, and then enter annual Emissions and Fuels data in his or her submission, as described in Sections 6 of this document.


1) Click on the Emitting Activities tab to add and manage emitting activities for your facility. An Emitting Activity refers to equipment, activities, or processes at your facility that produces emissions. An Emitting Activity may be very specifically defined or broadly defined. Please refer to the ARB Mandatory Reporting Regulation and the Mandatory Reporting Instructional Guidance for Operators for additional information on what your facility is required to report under the regulation.

Figure 3-1 Emitting Activities Tab

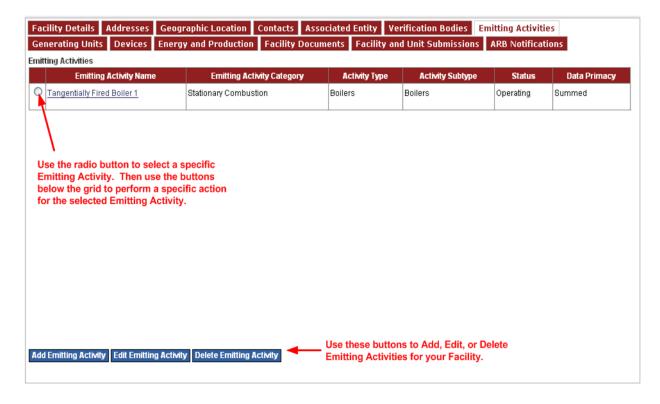

2) To add a new emitting activity for your facility, click the **Add Emitting Activity** button.

Figure 3-2 Add Emitting Activity Page

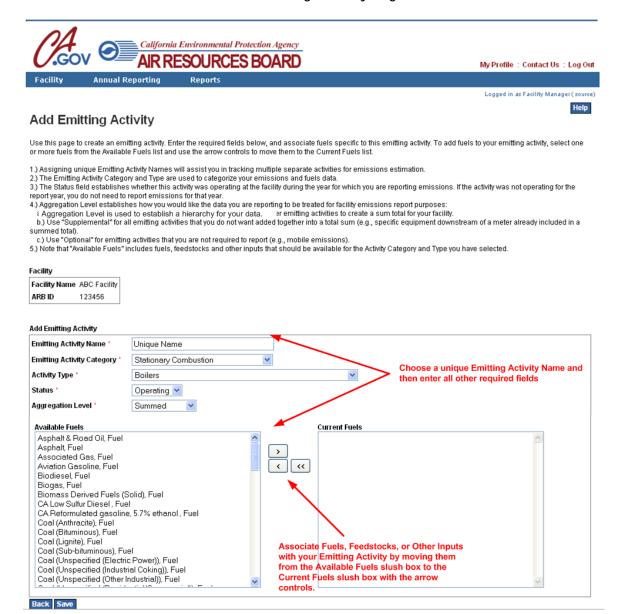

- a) Enter a unique Emitting Activity Name.
- b) Select an Emitting Activity Category and Activity Type from the drop-down menus.
- c) Select a Status to indicate whether or not this activity operated during the report year.

Note: All Emitting Activities that are marked with a Status of Operating will require that emissions records are reported prior to the annual report's certification. If an Emitting Activity is marked as Shutdown or changed to

Shutdown, then that Emitting Activity will not require data to be reported for it for that year until it is marked as Operating again.

- d) Select an Aggregation Level for this emitting activity. Aggregation Level is used to indicate at what level your data will be summed for the purposes of reports. Please see below for more information on the three different Aggregation Level categories:
 - i) Use Summed for all emitting activities you would like added to other emitting activities to create a sum total for your facility.
 - ii) Use Supplemental for all emitting activities that you do not want added together into a total sum (ex., Specific equipment downstream of a meter already included in your facility's summed total).
 - iii) Use Optional for emitting activities for which you are not required to report (ex., Mobile Emissions).
- e) Associate fuels, feedstocks, or other inputs with your emitting activity. Find the fuels, feedstocks, or other inputs you would like to associate in the Available Fuels slush box. Move them over to the Current Fuels slush box using the arrow controls.


Note: Not all emitting activities require designation of a fuel, feedstock, or other input. For example, fugitive SF6 emissions do not.

- f) Click the Save button.
- 3) To edit an existing emitting activity for your facility, fill in the radio button next to the Emitting Activity Name. Then click the Edit Emitting Activity button. Change any information necessary on the page and then click the Save button.
- 4) To delete an existing emitting activity for your facility, fill in the radio button next to the Emitting Activity Name. Then click the **Delete Emitting Activity** button. You may not delete emitting activities for which any annual data has been already submitted.
- 3.2 Add and Manage Generating Units (Generating Units Tab)

3.2.1 Add Generating Unit


1) If applicable, click on the Generating Units tab to add and manage the generating units for your facility.

Figure 3-3 Generating Units Tab

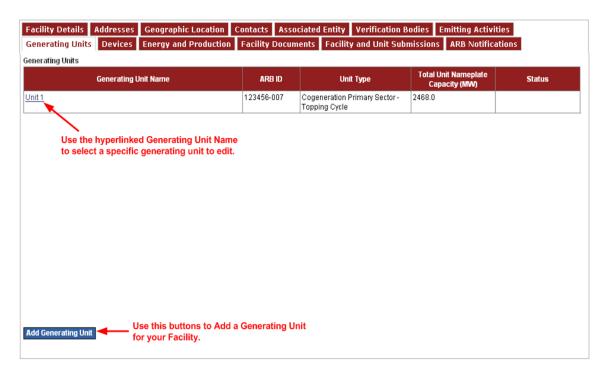

2) To add a new generating unit for your facility, click the **Add Generating Unit** button. Add generating units in the order you want them numbered.


Figure 3-4 Add Generating Unit Page

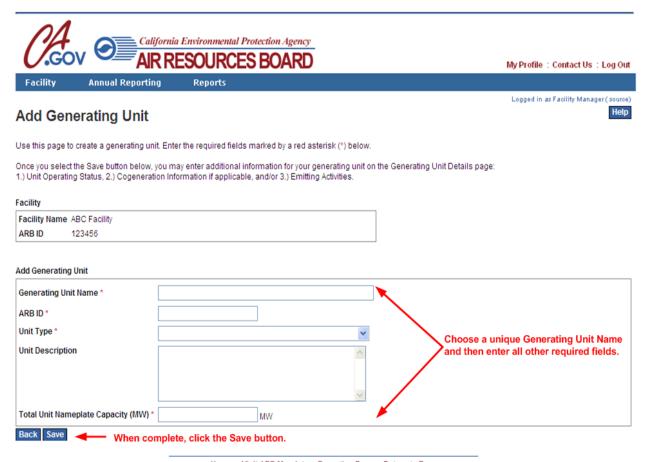

- Home: Visit ARB Mandatory Reporting Page: Return to Top
- a) Enter a unique Generating Unit Name.
- b) Select a Generating Unit Type from the drop-down menu.
- c) Enter the Total Nameplate Capacity for the Generating Unit in Megawatts (MW).
- d) Click the **Save** button. You will be navigated to the Generating Unit Details page, where you can edit the Operating Status, Cogeneration Information, and Emitting Activities for your generating unit.
- 3) To edit an existing generating unit for your facility, click the hyperlinked Generating Unit Name. Change any information necessary on the page and then click the Save button.

3.2.2 Generating Unit Details Page

Figure 3-5 Generating Unit Details Page

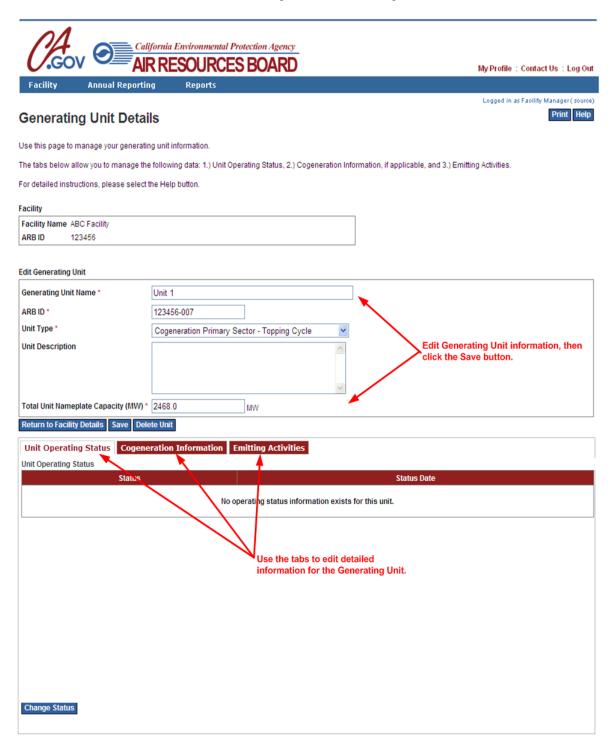


Home: Visit ARB Mandatory Reporting Page: Return to Top

3.2.2.1 Generating Unit Operating Status


- 1) To add or change the operating status of your generating unit, navigate to the Generating Unit Details page. If you have just created the generating unit and clicked the Save button, you will be navigated to the Generating Unit Details page automatically. If you have previously created the generating unit, click on the Generating Units tab on the Facility Information page. Then click on the hyperlinked Generating Unit Name to navigate to the Generating Unit Details page.
- 2) Click the Unit Operating Status tab on the Generating Unit Details page. Click the Change Status button under the Unit Operating Status grid to enter or change the generating unit operating status.

Figure 3-6 Unit Operating Status Tab

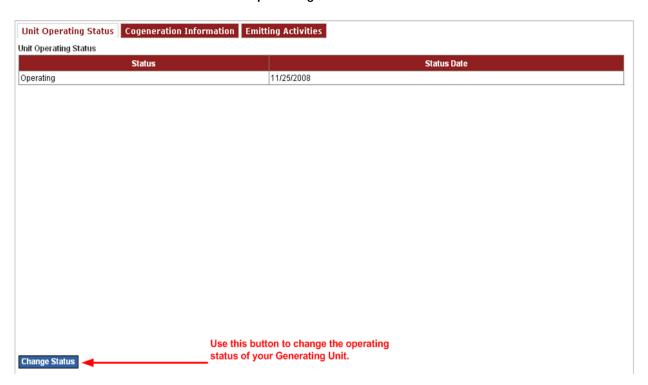

3) On the Add Unit Status page, select the operating status (Operating, Not Operating, or Permanent Shutdown) for your generating unit from the drop-down menu. Click the Save button, and then click the Return to Unit Information button to navigate back to the Generating Unit Details page.


Figure 3-7 Add Status Page

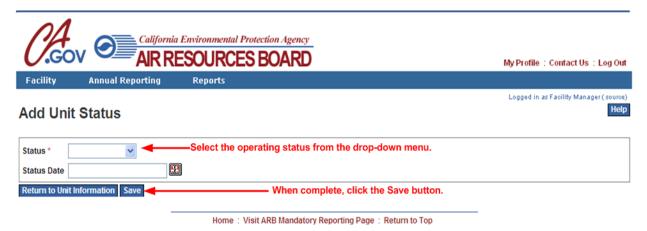

3.2.2.2 Cogeneration Information

- 1) To add or change the cogenerating information for your generating unit, navigate to the Generating Unit Details page. If you have just created the generating unit and clicked the Save button, you will be navigated to the Generating Unit Details page automatically. If you have previously created the generating unit, click on the Generating Units tab on the Facility Information page. Then click on the hyperlinked Generating Unit Name to navigate to the Generating Unit Details page.
- 2) Click the Cogenerating Information tab on the Generating Unit Details page. Enter all applicable fields regarding the cogenerating system information for your generating unit. Then click the Save button.


Figure 3-8 Cogeneration Information Tab

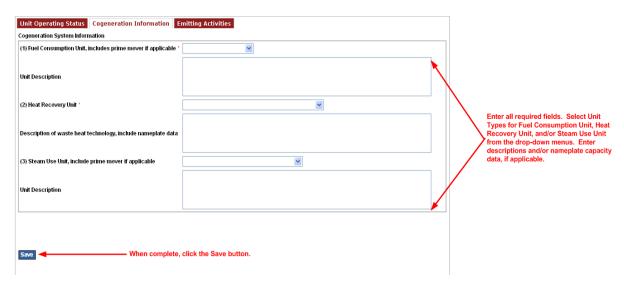

3.2.2.3 Generating Unit Emitting Activities

1) Click on the Emitting Activities tab to add and manage emitting activities for your generating unit.

Figure 3-9 Emitting Activities Tab

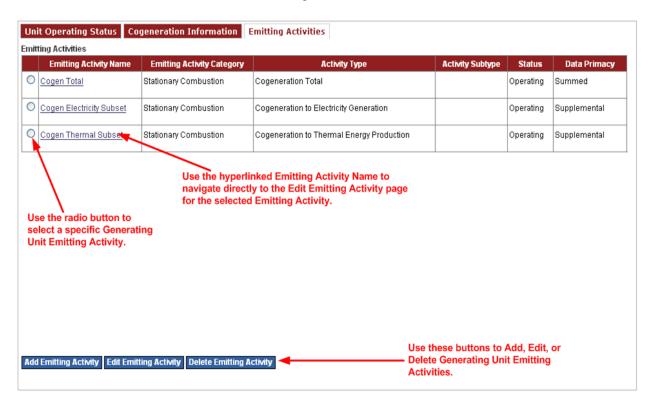

2) To add a new emitting activity for your generating unit, click the **Add Emitting Activity** button.

Figure 3-10 Add Unit Emitting Activity Page



Add Emitting Activity

Generating Unit

Generating Unit Name Unit 2

Use this page to create an emitting activity. Enter the required fields below, and associate fuels specific to this emitting activity. To add fuels to your emitting activity, select one or more fuels from the Available Fuels list and use the arrow controls to move them to the Current Fuels list.

- Assigning unique Emitting Activity Names will assist you in tracking multiple separate activities for emissions estimation.
- 2.) The Emitting Activity Category and Type are used to categorize your emissions and fuels data.
 3.) The Status field establishes whether this activity was operating at the facility during the year for which you are reporting emissions. If the activity was not operating for the report year, you do not need to report emissions for that year
- 4.) Aggregation Level establishes how you would like the data you are reporting to be treated for facility emissions report purposes:
 a.) Use "Summed" for all emitting activities that you would like added to other emitting activities to create a sum total for your facility.
- b.) Use "Supplemental" for all emitting activities that you do not want added together into a total sum (e.g., specific equipment downstream of a meter already included in a
- c.) Use "Optional" for emitting activities that you are not required to report (e.g., mobile emissions).
 5.) Note that "Available Fuels" includes fuels, feedstocks and other inputs that should be available for the Activity Category and Type you have selected.

ARB ID 123456-002 Add Emitting Activity **Emitting Activity Name** Emitting Activity Category * Activity Type ~ **Choose a unique Emitting Activity Name and** Status then enter all other required fields Aggregation Level Summed Available Fuels **Current Fuels** < << Associate Fuels, Feedstocks, or Other Inputs with your Emitting Activity by moving them from the Available Fuels slush box to the Current Fuels slush box with the arrow controls. Back Save

Home: Visit ARB Mandatory Reporting Page: Return to Top

- a) Enter a unique Emitting Activity Name.
- b) Select an Emitting Activity Category and Activity Type from the drop-down menus.
- c) Select a Status to indicate whether or not this activity is currently operating for your generating unit.

- d) Select an Aggregation Level for this emitting activity.
 - i) Use Summed for all emitting activities that you would like added to other emitting activities to create a sum total for your facility (i.e., equipment you wish to sum into a facility total).
 - ii) Use Supplemental to report for emitting activities that you do not want added into the sum of facility emissions because they are already included in your facility's summed total. Use this level if you have already accounted for these emissions as part of stationary combustion and, while you are providing this information to meet unit level reporting requirements, do not want these emissions double counted in the facility summed total.
- e) Associate fuels, feedstocks, or other inputs with your emitting activity. Find the fuels, feedstocks, or other inputs you would like to associate in the Available Fuels slush box. Move them over to the Current Fuels slush box using the arrow controls.


Note: Not all emitting activities require designation of a fuel, feedstock, or other input. For example, fugitive emissions do not.

- 3) Click the Save button.
- 4) To edit an existing emitting activity for your generating unit, fill in the radio button next to the Emitting Activity Name. Then click the Edit Emitting Activity button. Change any information necessary on the page and then click the Save button.
- 5) To delete an existing emitting activity for your generating unit, fill in the radio button next to the Emitting Activity Name. Then click the **Delete Emitting Activity** button. You may not delete emitting activities for which any annual data has been already submitted.
- 3.3 Add and Manage Devices Fuel Use Reporting to the Last Point of Measurement (Devices Tab)

The GHG mandatory reporting regulation also requires facilities to monitor and report fuel consumption (not emissions) for the facility and for each process unit or group of units where fuel use is separately metered. This tab provides the fields to enter that data.


1) Click on the Devices tab to add and manage devices for your facility.

Figure 3-11 Devices Tab

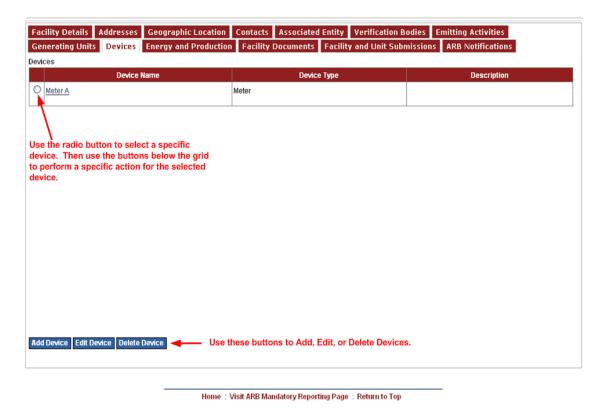

2) To add a new device for your generating unit, click the Add Device button.

Figure 3-12 Add Device Page

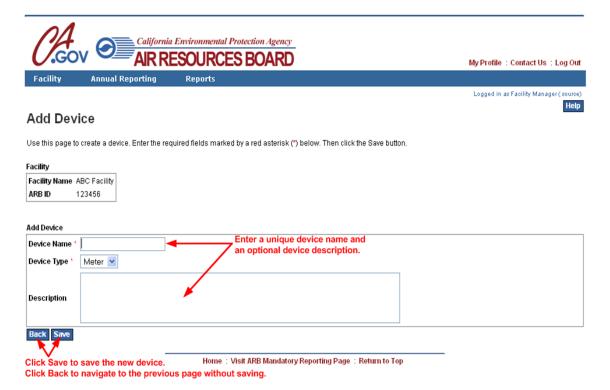

- a) Enter a unique Device Name.
- b) Select a Device Type from the drop-down menu (Meter or Other).
- c) Enter a Device Description Use the description field to list what types of equipment are downstream of the fuel meter or other measurement device. When the last point of measurement is for a solid fuel weighed by scale at each shipment (e.g., biomass solids), you can provide the device name as "Scale," select "Other" for Device Type, and in the description, note that it is measured per shipment by the supplier.
- Click the Save button.
- 4) To edit an existing device for your facility, fill in the radio button next to the Device Name. Then click the Edit Device button. Change any information necessary on the page and then click the Save button.
- 5) To delete an existing device for your facility, fill in the radio button next to the Device Name. Then click the **Delete Device** button. You may not delete devices for which any annual data has been reported.

3.4 Energy and Production Reporting Categories (Energy and Production Tab)

This tab is used to set up the energy and production (non-emissions) data that your facility will report. Based on the sector type selected for your facility, certain energy and production reporting categories will be pre-selected for you. You may add or remove reporting categories, based on the individual reporting requirements for your facility. See instructions below for more information about adding or removing energy and production reporting categories. For more information about annual reporting of energy and production data, see Section 6.0.

1) To add or remove energy and production reporting categories for your facility, click on the Energy and Production Tab.

Facility Details Addresses Geographic Location Contacts Associated Entity Verification Bodies Emitting Activities Generating Units | Devices | Energy and Production | Facility Documents | Facility and Unit Submissions | ARB Notifications Select Energy and Production Reporting Categories for which you would like to report data. Available Reporting Categories **Current Reporting Categories** Indirect Energy Use Data **Energy Production** Energy Provided or Sold Add > Steam Production Cement Efficiency Metrics Data < Remove Hydrogen Production Data Use the Add > or < Remove button to move energy and production reporting categories. You must click Save to commit any changes.

Figure 3-13
Energy and Production Tab

- 2) The box on the left "Available Reporting Categories" indicates all of the available types of energy and production (non-emissions) data available to report for your facility. The box on the right "Current Reporting Categories" indicates the types of energy and production data that you have set up for your facility to report.
- 3) To move energy and production reporting categories from one box to the other, use the Add > or < Remove buttons. You must click the Save button to commit any changes.
- 4) If you are unsure about what types of energy and production (non-emissions) data your facility is required to report, please consult the Mandatory Reporting Instructional Guidance for Operators. The figures below summarize these requirements.

Figure 3-14
Facility Energy and Production Sector Reporting Matrix

Energy and Production Reporting Category	Available for Facility Sector:					
	GSC	Cement	Refinery	Hydrogen	Cogen	Electricity
Indirect Energy Use	R	R	R	R	R	NAN I
Energy Provided or Sold	NA //	NA	NA //////	XXX	R	R
Energy Production	NA	NA	NA	XX	R	R
Steam Production	NA	NA	NA	NAN I	R	R
Cement Efficiency Metrics	NA	R	NA	NAN (NA	MAX////////
Hydrogen	NA.	NA	NA	R	MA	MAX
Supporting Documentation	0	0	0	0	0	0

R = Required, O = Optional, NA = Not Applicable

Figure 3-15
Generating Unit Energy and Production Sector Reporting Matrix


Energy and Production Reporting Category	Available for: Generating Units
Indirect Energy Use	NIA
Energy Provided or Sold	R
Energy Production	R
Steam Production	NA
Cement Efficiency Metrics	NA
Hydrogen	NA
Supporting Documentation	0

R = Required, O = Optional, NA = Not Applicable

3.5 View Facility and Unit Submissions (Facility and Unit Submissions Tab)

1) To view existing annual reporting submissions for your facility or units at your facility, click on the Facility and Unit Submissions tab.

Figure 3-16 Facility Unit and Submission Tab

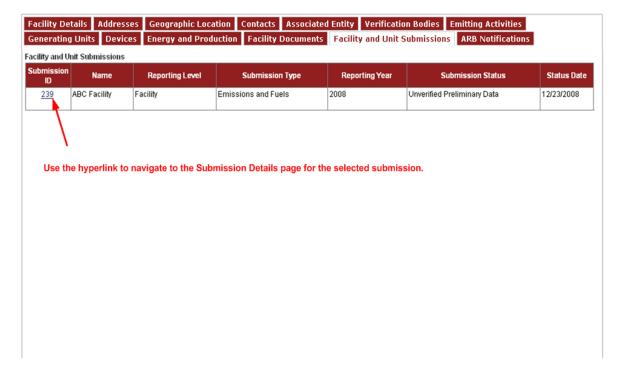

2) Click on the hyperlinked Submission ID to navigate to that submission.

up your Entity and Reporting

Tool user login.

4.0 Common Tasks and Steps for a Power Entity Manager User

The information and instructions contained in this section pertains to power entity registration and information. For information and instructions pertaining to facility registration and information, please refer to the previous section (Section 2.0) of the Users Guide.

4.1 Setting Up Your Power Entity (or Power Entities)

4.1.1 First Time Power Entity Registration and Logging In to the California GHG Emissions Reporting Tool

Note: Use these steps and instructions only for the first power entity that you register. Registering additional multiple power entities can be completed after you have logged in to the tool. Please see Section 4.1.2 for more details.

1) Navigate to the California GHG Emissions Reporting Tool (https://GHGReport.arb.ca.gov). Click on the Register button on the homepage to register your power entity and complete user registration, where you will create a GHG Emissions Reporting Tool username and password.

Figure 4-1 Logged Out Home Page




- 2) Select Yes or No from the drop-down menu next to the guestion "Already a User?"
 - Note: If you have already chosen a username and password, then you are already a user and should select Yes. You should then log in to the Reporting Tool with this username and password, and can proceed with registering other additional power entities if necessary from within the tool (see Section 4.1.2).
- 3) Select the Organization Type (Power Entity) and enter the ARB ID and Access Code provided to you by ARB. Then click the **Next** button to proceed with user registration.

Figure 4-2 Register Your Organization Page




4) Enter personal contact information on the Complete User Registration page. Required fields are indicated by a red asterisk (*). Choose a GHG Emissions Reporting Tool username and password. Usernames for the GHG Emissions Reporting Tool must be between three and eight characters, and all must be alphanumeric characters. Passwords for the GHG Emissions Reporting Tool must contain at least eight characters with at least one uppercase, one lowercase, and one numeral. Then click the Next button.

Figure 4-3 User Registration Page

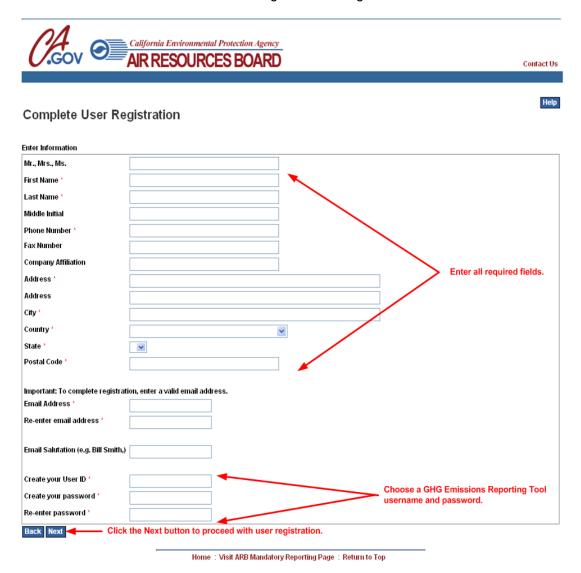


5) Read the Access Agreement and Terms of Use for the ARB GHG Reporting Tool. Click the I Agree to these Terms button. You must agree to the terms of the system to proceed with registration for the California GHG Emissions Reporting Tool. If you decline or cancel by clicking either I Decline button or Cancel button, your registration will be withdrawn.

Figure 4-4 Agree to Terms Page

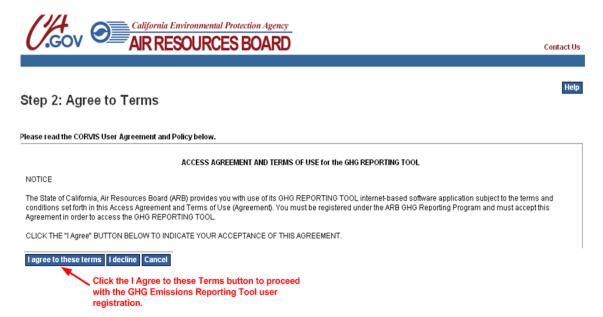

6) Read any current system announcements. Click the Continue button. Upon clicking the Continue button, you will be automatically logged in to the GHG Emission Reporting Tool.

Figure 4-5 Announcements Page

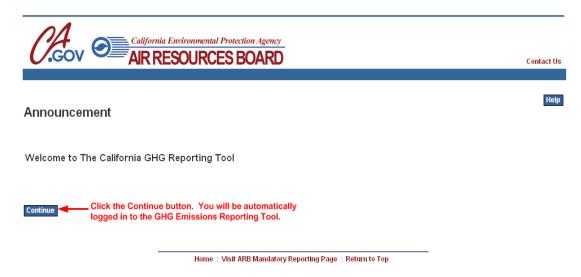

7) Successful completion of the GHG Emissions Reporting Tool registration automatically logs you into the system. For future access to the GHG Emissions Reporting Tool, enter your User ID and password on the GHG Emissions Reporting Tool homepage.

After you click the **Login** button you will see the logged in home page as displayed in Figure 4-6. From the home page, you can perform the following activities:

- Use the top horizontal menu bar to access the GHG Emissions Reporting Tool modules (See Section 1.5 for more information about the menu structure of the reporting tool);
- Use the quick links listed under your user group, under the heading "Responsibilities" to navigate directly to a specific page;
- Register additional power entities using the blue Register Additional Organization button;
- Update your contact information, email address and password by clicking on the Edit button under My Profile;
- Read previous system announcements posted by the Air Resources Board in the Announcements section; or
- Send a question or report a problem to the Air Resources Board using the Contact Us link.

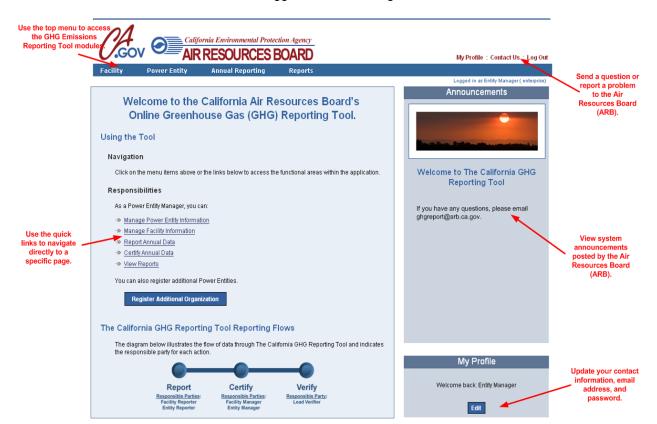



Figure 4-6 Logged In Home Page

4.1.2 Registering Multiple Power Entities

If you have received registration information (ARB ID and Access Code) from ARB for multiple power entities, you should see the steps and instructions below. If you only have received one letter and will be reporting for only one power entity, you may skip ahead to Section 4.2 to review further information about setting up your power entity's information.


- 1) Register your first power entity and complete user registration following the steps and instructions in Section 4.1.1.
- 2) Log in to the tool by entering your username and password and clicking the Login button. Upon logging in, you will be automatically navigated to the California GHG Emissions Reporting Tool Home page.
- 3) Click on the blue **Register Additional Organization** button in the middle of the page, under the heading "Responsibilities".

Figure 4-7 Logged in Home Page - Register Multiple Power Entities

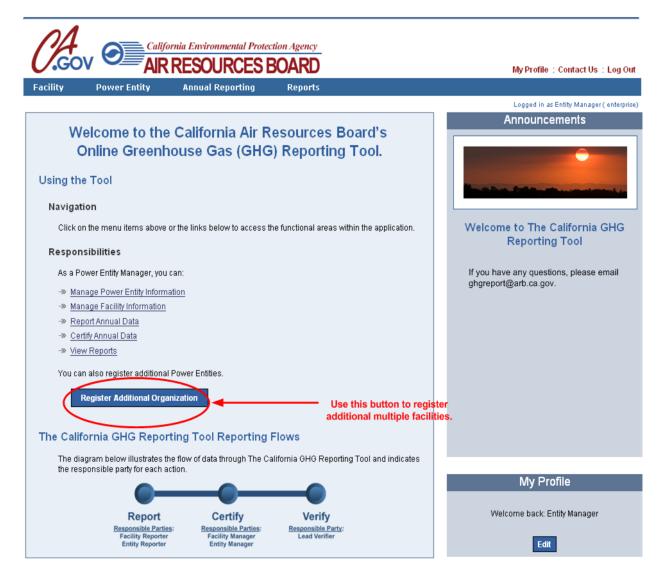

4) Enter the ARB ID and Access Code for the additional power entity contained in the letter from ARB. On this page, the Organization Type (Power Entity) will already automatically be selected for you. Click the Next button.

Figure 4-8
Registration Page for Multiple Power Entities

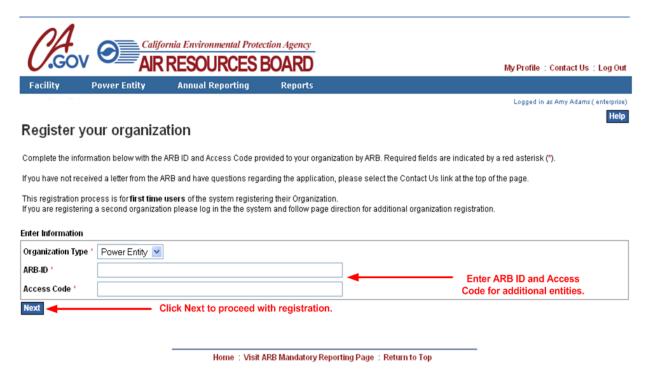

5) On the following page, confirm that the power entity displayed is the one which you would like to register.

Note: By registering this power entity, you will automatically be assigned as the Power Entity Manager for this power entity. This relationship can later be ended if necessary.

Figure 4-9 Confirm Relationship Page




6) Repeat for other additional power entities, if necessary.

4.1.3 Go to My Profile

My Profile is used to edit and manage your personal user information, such as your email address, mailing address, phone number, or system password. Please keep the contact information in My Profile up to date as possible; particularly your email address as this is used to send you system emails, such as notification of password expiration or notification of other actions taken in the system (e.g., annual report certified or verification opinion issued).


Figure 4-10 Logged in Home Page - My Profile

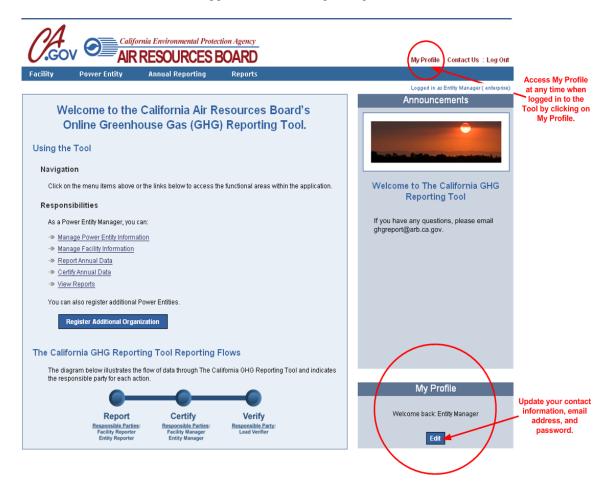

1) From the Reporting Tool homepage, you can access My Profile by clicking the Edit button in the lower right hand corner of the screen in the My Profile block.

From any page when you are logged in to the Reporting Tool, you can always access My Profile by clicking on the hyperlink My Profile that displays in the upper right hand corner of your screen whenever you are logged in to the Reporting Tool.

Figure 4-11 My Profile Page

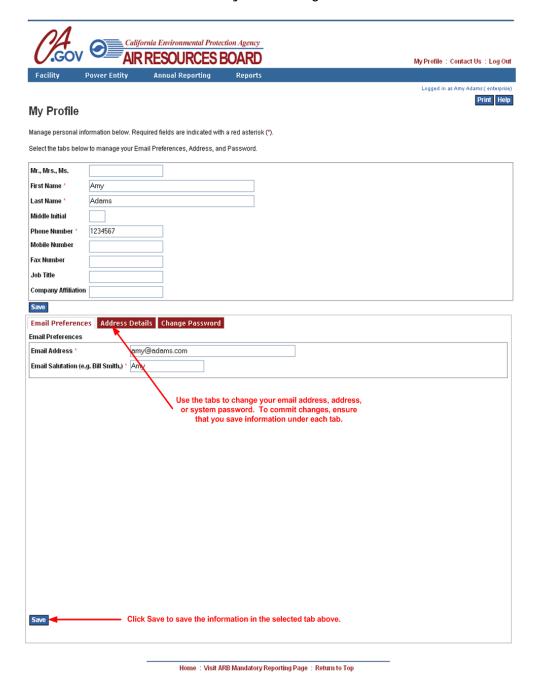

- 2) Use the top block on the page to edit your name, phone number, job title, or company affiliation. To save click the **Save** button below the block. All required fields in the block, as indicated by a red asterisk (*) must be completed.
- 3) Use the tabs to edit specific information, such as your email contact information, address contact information, or system password. Click the **Save** button at the bottom of the page to save the information entered on that tab. If you navigate away from

the tab before clicking the **Save** button, all new information entered on the tab will be lost.

4.2 Go to the Power Entity Information page


1) Click on the **Power Entities** menu link in the blue bar at the top of the screen, or click on the **Manage Power Entity Information** link under the Entity User Responsibilities section of the homepage.

Figure 4-12 Power Entity Menu



2) If you are associated with more than one power entity, click on the Power Entity Name link in the power entity home page grid.

Figure 4-13 Power Entity Home

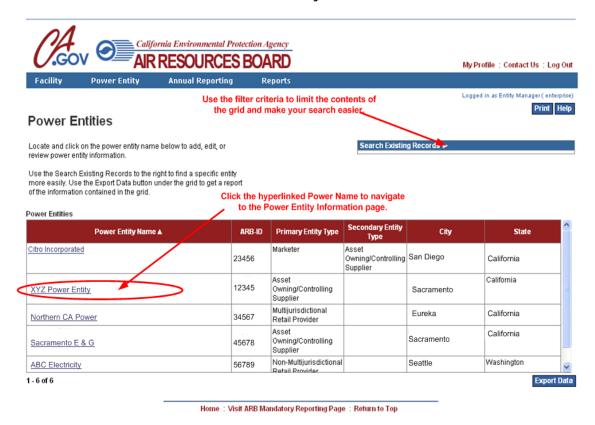

3) After clicking the Power Entity Name hyperlink, you will be navigated to the Power Entity Information page for the selected power entity.

Figure 4-14
Power Entity Information Page




Power Entity Information

Use this page to manage your power entity's source inventory information.

The tabs below allow you to manage the following data: 1.) Power Entity Details, 2.) Addresses, 3.) Power Entity Contacts, 4.) Facility Relationships, 5.) ARB Notifications, 6.) Emitting Activities, 7.) Verification Bodies, and 8.) Power Entity Documents.

For detailed instructions, please select the Help button.

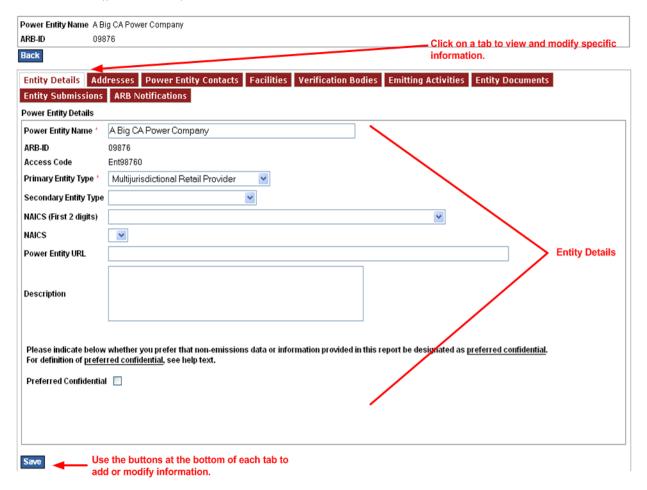

4.2.1 Review and/or Modify Power Entity Details (Entity Details Tab)

1) Click the Power Entity Details tab. Review the information in Power Entity Details tab to confirm that the Power Entity Name, Primary Entity Type, Secondary Entity Type if applicable, NAICS (First two digits), NAICS, Power Entity URL, Description, and

Preferred Confidential Status are correct. Make any necessary changes and click the **Save** button.

a) Preferred Confidential - State law mandates that all emissions data be considered public information. The GHG mandatory reporting regulation requires reporters to provide non-emissions data that may be a trade secret or sensitive business information. Reporters may check this box to require a Public Records Act request procedure before a determination is made of that information which should be made publicly available. ARB has many programs that require the collection of sensitive business data and a well established process of working with regulated businesses and members of the public when non-emissions data is requested.


Click on a tab to view and modify specific Entity Details Addresses Power Entity Contacts Facilities Verification Bodies Emitting Activities Entity Documents Entity Submissions | ARB Notifications **Power Entity Details** Power Entity Name * A Big CA Power Company ARR-ID 09876 Access Code Ent98760 Primary Entity Type * Multijurisdictional Retail Provider Secondary Entity Type NAICS (First 2 digits) * NAICS ~ **Entity Details** Power Entity URL Description Please indicate below whether you prefer that non-emissions data or information provided in this report be designated as preferred confidential. For definition of preferred confidential, see help text. Preferred Confidential Use the buttons at the bottom of each tab to add or modify information.

Figure 4-15 Power Entity Details Tab

4.2.2 Manage Power Entity Addresses (Addresses Tab)

1) Click the Addresses tab and review the address information displayed in the grid to confirm that the address listed is correct.


Figure 4-16 Addresses Tab

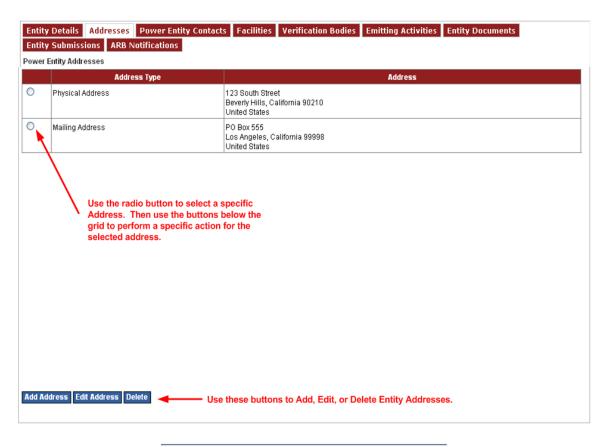

 $\label{thm:local_problem} \textbf{Home } : \textbf{Visit ARB Mandatory Reporting Page } : \textbf{Return to Top} \\$

- a) Make any necessary changes by selecting the address with the radio button and clicking the Edit Address button under the Addresses grid. On the Edit Address page, make any necessary changes and clicking the Save button. Then click the Back button to return to the Power Entity Information page.
- b) Add a secondary address for your power entity by clicking the Add Address button under the Addresses grid. On the Create Address page, enter all required fields, as indicated by a red asterisk (*) and click the Save button. Then click the Back button to return to the Power Entity Information page.

Figure 4-17 Add Address Page

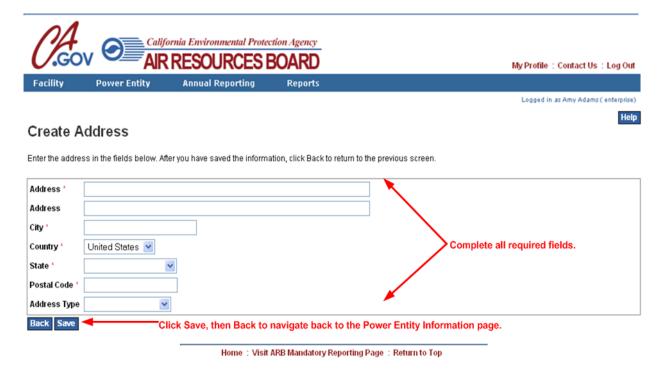


4.2.3 Add and Manage Power Entity Contacts (Contacts Tab)

The main power entity contact types are Primary Power Entity Manager, Alternate Power Entity Manager, and Power Entity Reporter. Each Power Entity must have at least one Primary Power Entity Manager at all times, and may have a maximum of two Primary Power Entity Managers. The user who registers a power entity is automatically assigned as the power entity's Primary Power Entity Manager.

 Click on the Contacts tab to create, add, and manage contacts associated with your power entity.

Figure 4-18 Contacts Tab

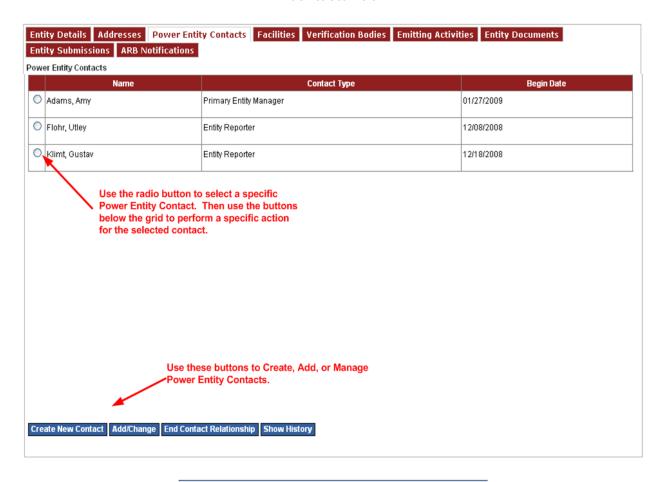

 $\textbf{Home} \; : \; \textbf{Visit ARB Mandatory Reporting Page} \; : \; \textbf{Return to Top}$

2) To create a new power entity contact, who is not yet a user of the GHG Emissions Reporting Tool, click the Create New Contact button.


Note: You should only create a new contact if this user is not yet a user of the GHG Emissions Reporting Tool. Before creating a new contact, please check to see if the person is already a user by clicking on the Add/Change button and searching for the person in the grid and/or using the filter criteria at the top right of your screen.

- a) If you are unsure, you can check by clicking the Add/Change button and trying to find their name(s). Names already in the grid are already users and should be added to your contacts list, not created as a new user.
- b) If you try to add a new contact, and you receive a system error that this person's email address already exists, then this person is either already a registered user (see Step a) or has already been created as a contact person, but has not yet completed the registration process and become a user. In the latter case, this person should go into their email inbox and find the pre-registration notification email. Then he or she should click on the link and complete registration to

become a user of the Reporting Tool. After he or she has completed registration and become a user, you will be able to add him or her as a contact for your power entity.

3) Enter basic contact information for the new power entity contact on the Create Power Entity Contact page. Required fields are indicated by a red asterisk (*). Click the Save button.


Figure 4-19 Create Power Entity Contact Page

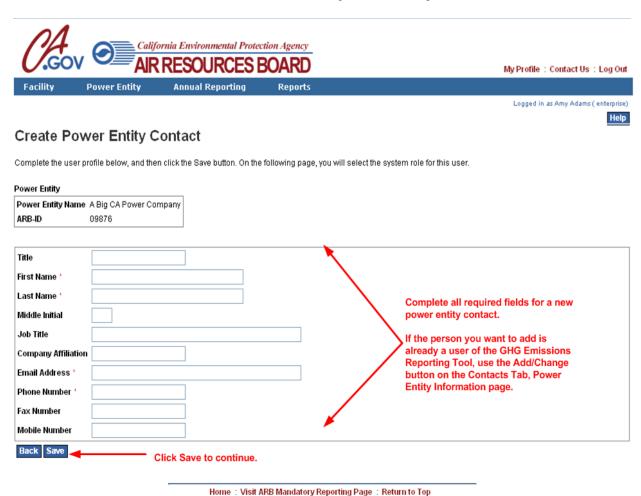

4) On the Select Power Entity Contact Detail page, select a Contact Type (Primary Power Entity Manager, Alternate Power Entity Manager, or Power Entity Reporter) for the new power entity contact. Select a Begin Date using the calendar icon, if necessary.

Note: If no date is selected, the current system date will automatically be assigned as the Begin Date. Then click the **Save** button.

Figure 4-20 Select Power Entity Contact Detail Page

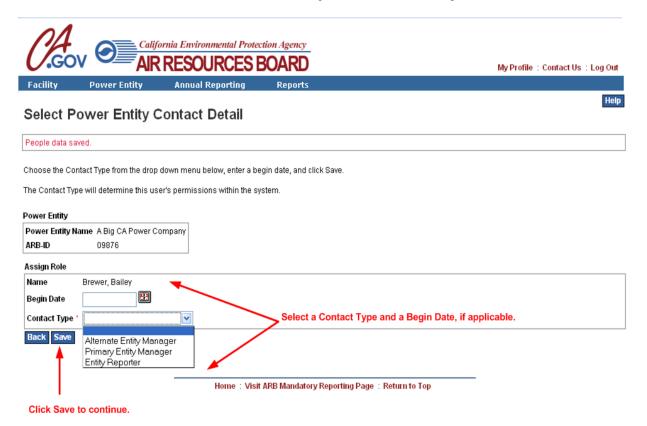


- 5) To select a contact who is already a user of the GHG Emissions Reporting Tool that you would like to associate with your power entity, click the Add/Change button.
 - a) On the Select Power Entity Contact page, select the person you would like to add as a power entity contact. To select a person, fill in the radio button next to their name and click the **Select** button. You may use the Search Existing Records block to the right to refine your search.

Note: Only people who have registered as users of the California GHG Emissions Reporting Tool will display in this grid. Contacts that have been previously created, but who have not completed the registration process to become a user will not display in this grid.

If you have previously added a person, but do not see their name in this grid, it is likely because they are not yet users of the Reporting Tool. The contact must open his or her pre-registration notification email, click on the link, and complete the registration information before they will display in the grid and are able to be added as a power entity contact.

Figure 4-21 Select Power Entity Contact Page

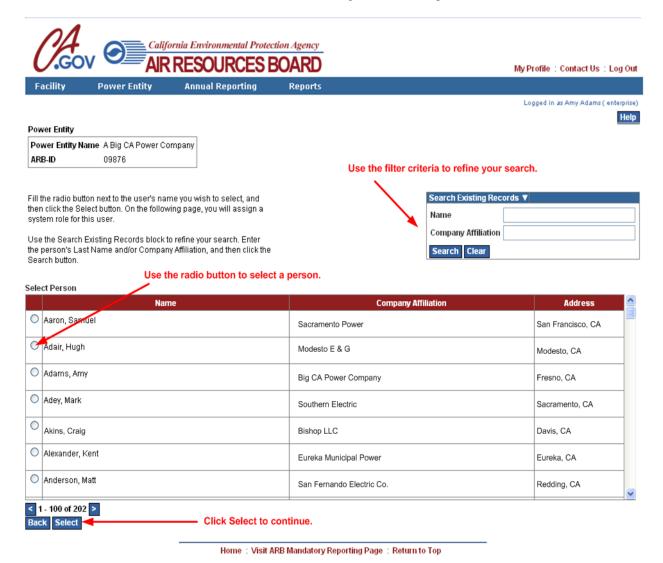


- b) On the Select Power Entity Contact Detail page, select a Contact Type (Primary Power Entity Manager, Alternate Power Entity Manager, or Power Entity Reporter) for the new power entity contact. Select a Begin Date using the calendar icon, if necessary. If no date is selected, the current system date will automatically be assigned as the Begin Date. Then click the **Save** button. See Figure 4-20 for more information.
- 6) To end a power entity contact relationship, select the contact with which you would like to end the relationship by filling the radio button next to his or her name and click the End Contact Relationship button. From the calendar pop-up, select the date on which you would like the relationship to end.
- 7) To view all current and historic Power Entity contacts, click the **Show History** button.

4.2.4 Add and Edit Power Entity Documents (Entity Documents Tab)


1) Click the Power Entity Documents tab to upload documents for your power entity or to edit existing power entity documents.

Figure 4-22 Power Entity Documents Tab

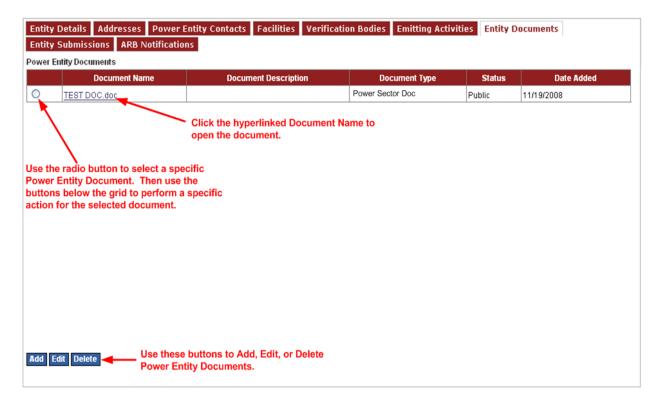


a) Add a document for your power entity by clicking the **Add** button under the Power Entity Documents grid. On the Add Document page, use the **Brows**e button to find and upload a file from your local computer, enter all required fields as indicated by a red asterisk (*), and click the **Save** button. Then click the **Back** button to return to the Power Entity Information page.

Figure 4-23 Add Document Page

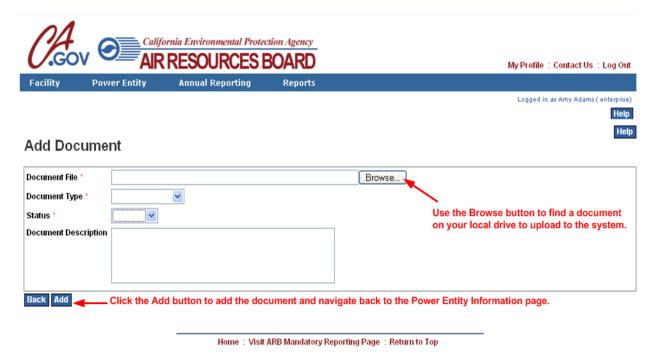

- b) Make any necessary changes to an existing document description by selecting the document with the radio button and clicking the Edit button under the Power Entity Documents grid. On the Edit Document page, make any necessary changes and clicking the Save button. Then click the Back button to return to the Power Entity Information page.
- 4.2.5 Add and Manage Power Entity Verification Bodies (Verification Bodies Tab)
- 1) Click on the Verification Bodies tab to add and manage verification body relationships associated with your power entity.


Figure 4-24 Verification Bodies Tab

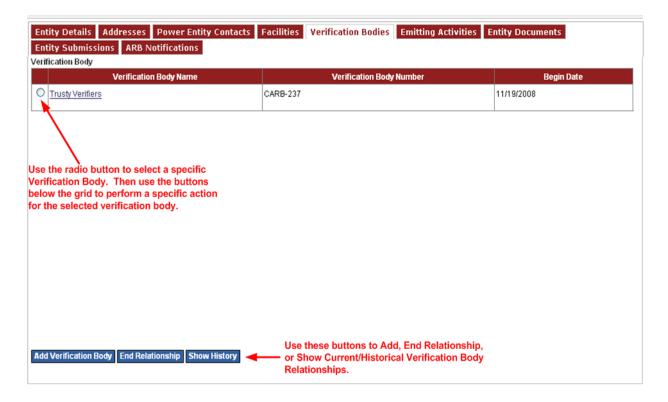

- 2) To select a verification body that you would like to associate with your power entity, click the Add Verification Body button.
 - a) On the following Select Verification Body for Power Entity page, select the verification body you would like to designate for the third party verification of your power entity's annual report. To select a verification body, fill in the radio button next to its name and click the Select button. You may use the Search Existing Records block to the right to refine your search.


Note: A power entity should not add a verification body until ARB has approved the Conflict of Interest assessment for the power entity-verification body relationship.

Figure 4-25 Select Verification Body for Power Entity Page

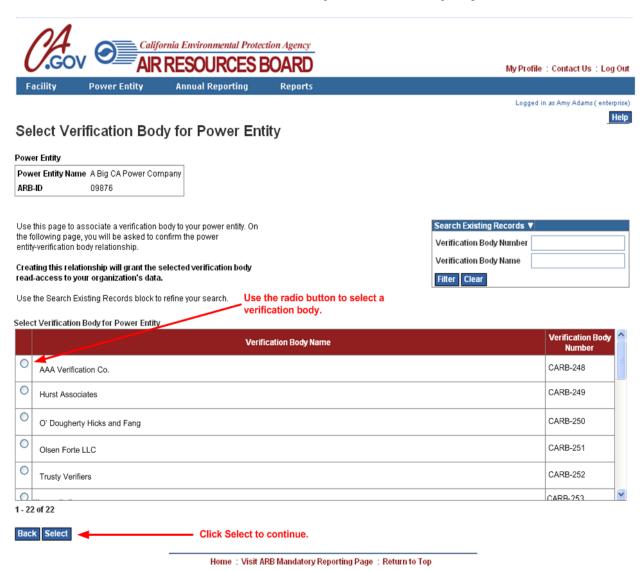

b) On the following Confirm Power Entity-Verification Body Relationship page, confirm that the verification body name displayed on the page is correct. If correct, click the **Select** button. If incorrect, click the **Back** button and select the correct verification body.

Figure 4-26 Confirm Power Entity-Verification Body Relationship Page

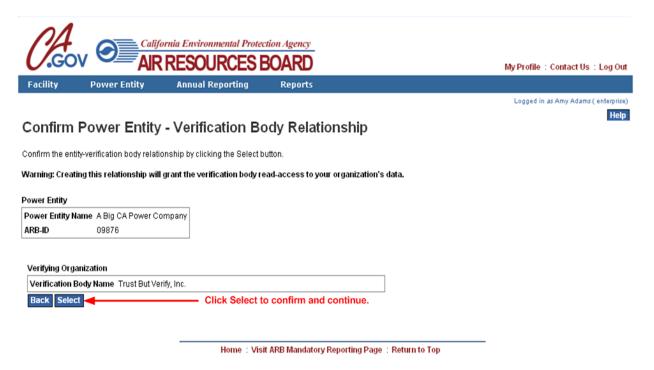


- 3) To end a power entity-verification body relationship, select the verification body with which you would like to end the relationship by filling the radio button next to its name and click the **End Relationship** button. From the calendar pop-up, select the date on which you would like the relationship to end.
- 4) To view all current and historic verification bodies with which your power entity currently does or has had a relationship, click the **Show History** button.

4.2.6 View Facility Relationships (Facilities Tab)


 To view all facilities with which your power entity has an association with, click the Facilities tab.

Figure 4-27 Facilities Tab

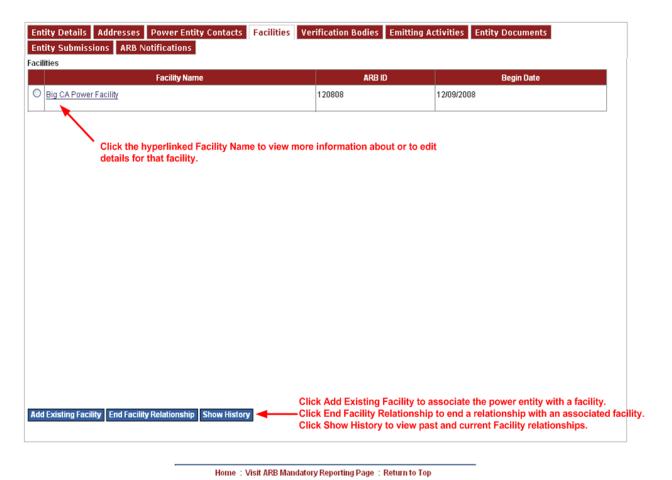


- 2) To select a facility over which your power entity has ownership or operational control, click the Add Existing Facility button.
 - a) On the Select Power Entity-Facility Relationship page, select the facility with which you would like to establish an association by filling in the radio button and click the **Select** button.

Figure 4-28
Select Power Entity-Facility Relationship Page

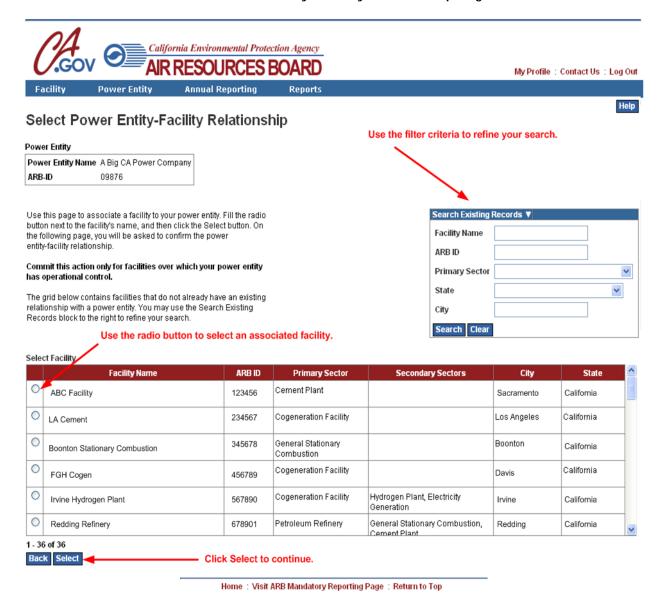

b) On the Confirm Power Entity-Facility Relationship page, review the information for the associated facility. Enter the Access Code from the ARB notification letter. Then click the Submit button to establish the relationship. The facility will now display in the grid under the Facilities tab on the Power Entity Information page.

Figure 4-29 Confirm Power Entity-Facility Relationship Page

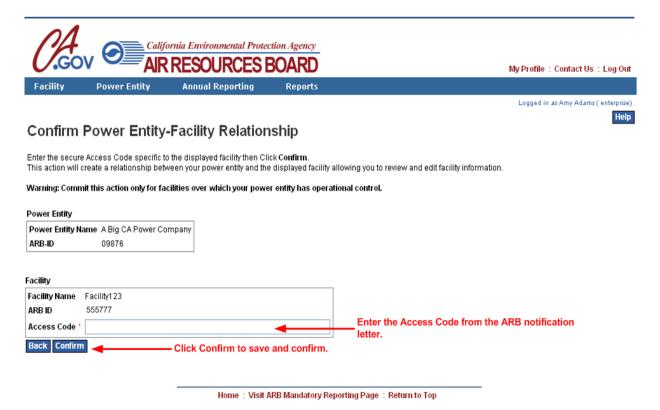

- 3) To end a relationship with a facility, select the facility from the grid under the Facilities tab by filling in the radio button. Then click the End Facility Relationship button. A calendar pop-up will display. Select the date to end the relationship on the calendar.
- 4) To view all historic and current power entity relationships, click the **Show History** button.

4.2.7 View ARB Notifications (ARB Notifications Tab)

 To view any notifications that the System Administrator or ARB Program Managers may have entered for your power entity, click the ARB Notifications tab. Power Entity Managers and Power Entity Reporters cannot edit ARB Notifications. They are viewonly on the tab.

Note: If you believe there is an ARB Notification posted for your power entity in error, you may use the Contact Us link to send a message to ARB.


Figure 4-30 ARB Notifications Tab



- 4.3 Setting Up Your Power Entity's Emitting Activities (for Reporting SF₆ Emissions) (Emitting Activities Tab)
 - 4.3.1 Add and Manage Power Entity Emitting Activities
- 1) Click on the Emitting Activities tab to add and manage emitting activities for your power entity. An Emitting Activity refers to equipment, activities, or processes at your power entity that produces emissions. An Emitting Activity may be very specifically defined or broadly defined. Please refer to the ARB Mandatory Reporting Regulation and the Mandatory Reporting Instructional Guidance for Operators for additional information on what your power entity is required to report under the regulation.

Note: For power entities, the only type of emitting activities that can be added will be Fugitive SF_6 emissions from transmission, distribution, or substation.

Figure 4-31 Emitting Activities Tab

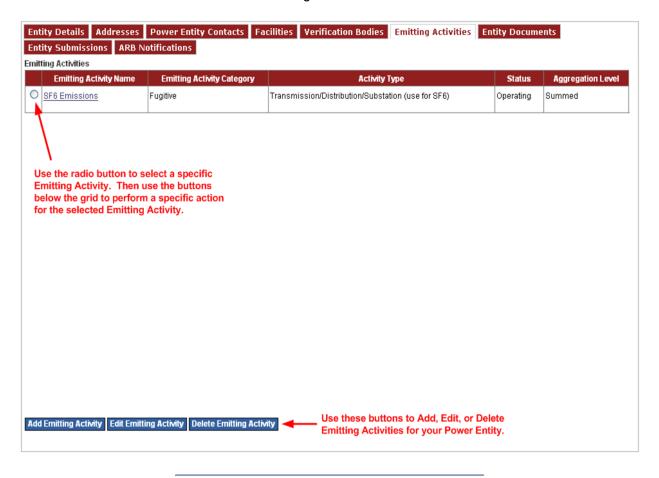

Home : Visit ARB Mandatory Reporting Page : Return to Top

2) To add a new emitting activity for your power entity, click the **Add Emitting Activity** button.

Figure 4-32 Add Emitting Activity Page




Add Emitting Activity

Power Entity

Use this page to create an emitting activity. Enter the required fields below, and associate fuels specific to this emitting activity. To add fuels to your emitting activity, select one or more fuels from the Available Fuels list and use the arrow controls to move them to the Current Fuels list.

- 1.) Assigning unique Emitting Activity Names will assist you in tracking multiple separate activities for emissions estimation.
- 2.) The Emitting Activity Category and Type are used to categorize your emissions and fuels data.
- 3.) The Status field establishes whether this activity was operating at the facility during the year for which you are reporting emissions. If the activity was not operating for the report year, you do not need to report emissions for that year.
- 4.) Aggregation Level establishes how you would like the data you are reporting to be treated for facility emissions report purposes:
- a.) Use "Summed" for all emitting activities that you would like added to other emitting activities to create a sum total for your facility.
 b.) Use "Supplemental" for all emitting activities that you do not want added together into a total sum (e.g., specific equipment downstream of a meter already included in a summed total).
- c.) Use "Optional" for emitting activities that you are not required to report (e.g., mobile emissions).
- 5.) Note that "Available Fuels" includes fuels, feedstocks and other inputs that should be available for the Activity Category and Type you have selected.

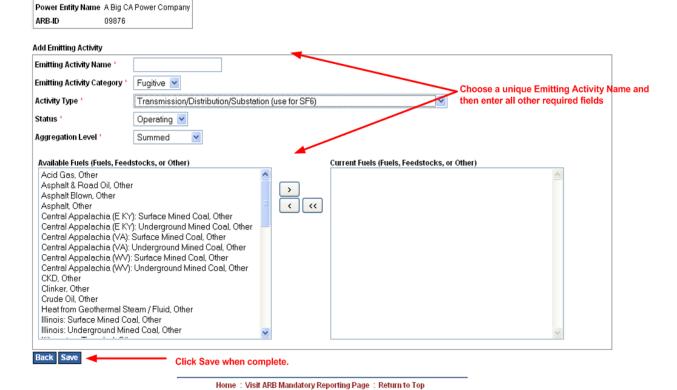

- a) Enter a unique Emitting Activity Name.
- b) Select an Emitting Activity Category (Fugitive is the only option for power entities and will be selected by default) and Activity Type from the drop-down menus.

Note: Power entities should select the Activity Type of Transmission/Distribution/Substation (use for SF₆).

c) Select a Status to indicate whether or not this activity operated during the report year.


Note: All Emitting Activities that are marked with a Status of Operating will require that emissions records are reported prior to the annual report's certification. If an Emitting Activity is marked as Shutdown or changed to Shutdown, then that Emitting Activity will not require data to be reported for it for that year until it is marked as Operating again.

- d) Select an Aggregation Level for this emitting activity. Aggregation Level is used to indicate at what level your data will be summed for the purposes of reports. Please see below for more information on the three different Aggregation Level categories:
 - i) Use Summed for all emitting activities that you would like added to other emitting activities to create a sum total for your power entity.
 - ii) Use Supplemental for all emitting activities that you do not want added together into a total sum (Ex. Specific equipment already included in your power entity's summed total).
- e) If applicable, associate fuels, feedstocks, or other inputs with your emitting activity. Find the fuels, feedstocks, or other inputs you would like to associate in the Available Fuels slush box. Move them over to the Current Fuels slush box using the arrow controls.

Note: It is not required to associate a fuel, feedstock, or other input for your emitting activity.

- f) Click the Save button.
- 3) To edit an existing emitting activity for your power entity, fill in the radio button next to the Emitting Activity Name. Then click the Edit Emitting Activity button. Change any information necessary on the page and then click the Save button.
- 4) To delete an existing emitting activity for your power entity, fill in the radio button next to the Emitting Activity Name. Then click the **Delete Emitting Activity** button. You may not delete emitting activities for which any annual data has been reported.
 - 4.3.2 View Power Entity Submissions (Power Entity Submissions Tab)
- 1) To view existing annual reporting submissions for your Power Entity, click on the Power Entity Submissions tab.

Figure 4-33 Power Entity Submissions Tab

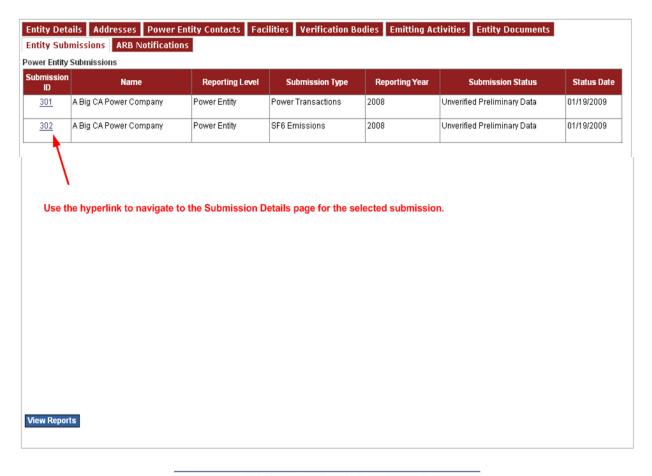

Home: Visit ARB Mandatory Reporting Page: Return to Top

2) Click on the hyperlinked Submission ID to navigate to that submission.


5.0 Annual Reporting

A facility or power entity's annual report consists of multiple submissions.

The annual report for a facility with no generating unit will consist of an Emissions and Fuels submission and an Energy and Production submission, for a total of two submissions.

Figure 5-1 Facility without Units Annual Report Flow


Facility without Units

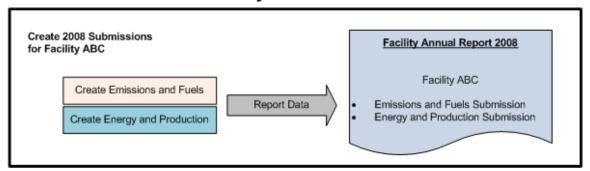

The annual report for a facility with one or more generating units will consist of Emissions and Fuels submission for the facility and each generating unit, and an Energy and Production submission for the facility and each generating unit. The total number of submissions would vary depending on the total number of generating units at the facility. For example, a facility with two generating units would have a total of six submissions: 1) Facility Emissions and Fuels submission, 2) Facility Energy and Production submission, 3) Unit one Emissions and Fuels submission, 4) Unit one Energy and Production submission, 5) Unit two Emissions and Fuels submission, and 6) Unit two Energy and Production submission.

Figure 5-2 Facility with Generating Units Annual Report Flow

Facility with Units

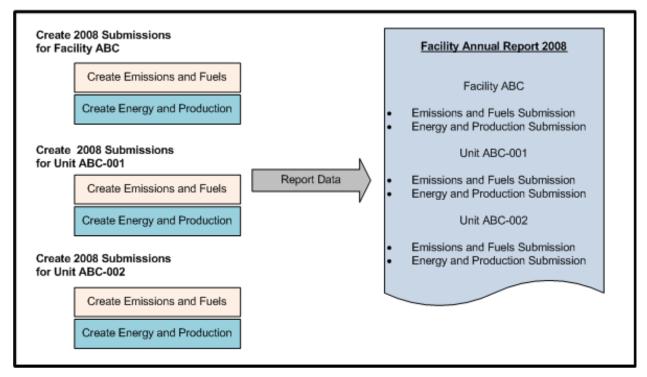

The annual report for a power entity will consist of a Power Transactions submission and an SF_6 Emissions submission, for a total of two submissions.

Figure 5-3
Power Entity Annual Report Flow

Power Entity



Submission Types

Please see below for definitions of all submission types supported by the California GHG Emissions Reporting Tool:

A *submission* consists of annual data values for one (Power Entity/Facility/Generating Unit) for one reporting year, one reporting period, and one submission type.

A *reporting level* is the organizational level at which data is reported for the submission: Facility, Generating Unit, or Power Entity.

A *submission type* is the description of the category of data contained in an annual submission. Submission types are controlled by different organization type within the application.

- Facility submission types: Emissions and Fuels; Energy and Production.
- Generating Unit submission types: Emissions and Fuels; Energy and Production.
- Power Entity submission types: Power Transactions; SF₆ Emissions.

An *Emissions and Fuels Submission* consists of the following types of annual data: emitting activity fuel data, emissions data, device level fuel data, and associated documentation.

An *Energy and Production Submission* consists of one or more of the following types of annual data: indirect energy use data, electricity and thermal energy production data, steam production data, cement efficiency metric data, hydrogen production data, and associated documentation.

A *Power Transaction Submission* consists of the following types of annual data: power transactions data, wheeled power data, retail sales data, facility ownership data, and associated documentation.

Power Transaction Submission Data are reported at the Power Entity level for one submission and do not require management of reporting structure at the source inventory level.

An SF6 Emissions Submission consists of annual emissions data and associated documentation. Annual SF_6 emissions data are reported at the Power Entity level for one submission.

A *submission status* is the description of the state of data associated with an individual submission. The status changes as data moves through the reporting process and receives additional levels of review and approval. The status is used by the reporting tool to grant access for different users to facilitate reporting, certification, and verification of annual data.

Submission Statuses and Reporting Flow

Figure 5-4 displays the basic flow for submissions along with the respective actors for each status a submission can have in each step of the reporting process.

Figure 5-4
Submissions Statuses Flow

Submission Status Flow

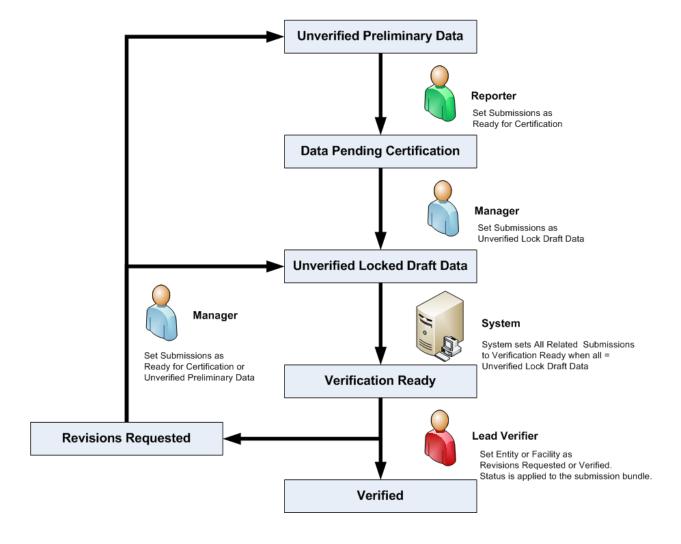


Figure 5-5 lists the possible statuses a submission can have in each step of the reporting process.

Figure 5-5
Power Entity and Facility Submissions Statuses


Reporting Step	Possible Submission Status	Description		
Report	Unverified Preliminary Data	Status when a facility user has saved draft emission records, but before the entry of all emissions values are complete.		
	Pending Certification	Status when the facility user has completed entry of emissions for that facility.		
Certify	Unverified Locked Draft Data	Data Status when manager certifies that the data are complete and accurate. Reporter is 'locked' out of the data report. With ARB approval, the verification body is added by the Reporter to have access to view the data report.		
Verify	Verification Ready	Status is changed to "Verification Ready" when all associated submissions = "Unverified Locked Draft Data." This status enables the Verifier to view data associated with the organization.		
	Revisions Requested	Status when verifier has requested changes be made to the data.		
	Verified	Status when the lead verifier has indicated that the verification is complete (positive or adverse).		
Final	Final Data	Status when the ARB accepts all data for a reporting year and makes emissions data available to the public.		

5.1 Create a Submission

If you have created an annual submission in a previous session, see Section 5.2 for instructions on how to access an existing submission through the Annual Reporting Home page. If you have not yet created an emissions and fuels submission for your facility and/or generating unit for the given reporting year, please see the steps and instructions below.

1) Navigate to the Select Submission Details page. Hover your mouse over the Annual Reporting menu in the top navigation bar. The Create New Submission sub-menu will appear below the main Annual Reporting menu. The Create New Submission sub-menu will underline when you hover your mouse over it; click to select this sub-menu.

Figure 5-6 Report Annual Data Sub-Menu

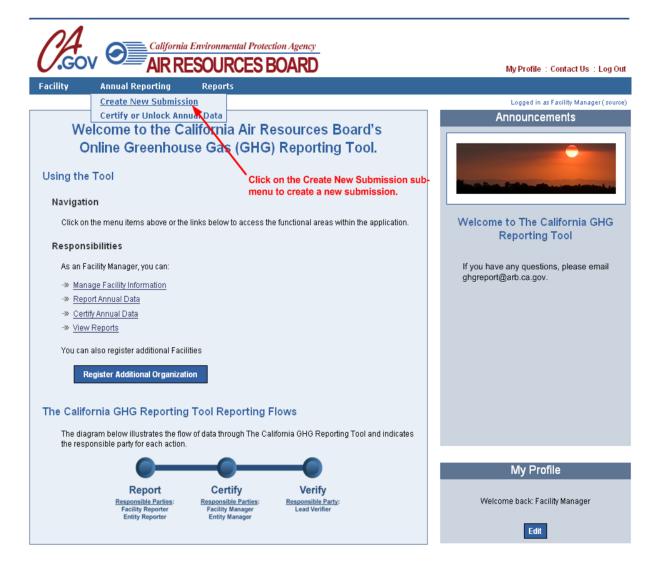


2) Enter Submission Details.

- a) Select the Reporting Year from the drop-down menu. The corresponding Reporting Period (1/1 12/31) of the selected reporting year) will automatically populate.
- b) Select the Reporting Level. If you are reporting emissions and fuel use data or energy and production for a facility, select Facility. If you are reporting emissions and fuel use data or energy and production data for a generating unit, select Generating Unit. If you are reporting SF₆ emissions data or power transactions data for a power entity, select Power Entity.
- c) Select the Submission Type. If you are reporting your facility's or generating unit's emissions and fuel use data, select Emissions and Fuels. If you are reporting your facility's or generating unit's non-emissions or energy and production data, select

Energy and Production. If you are reporting your power entity's SF_6 emissions data, select SF_6 Emissions. If you are reporting your power entity's power transactions data, select Power Transactions.

Figure 5-7A Select Submission Details - Emissions and Fuels

Facility

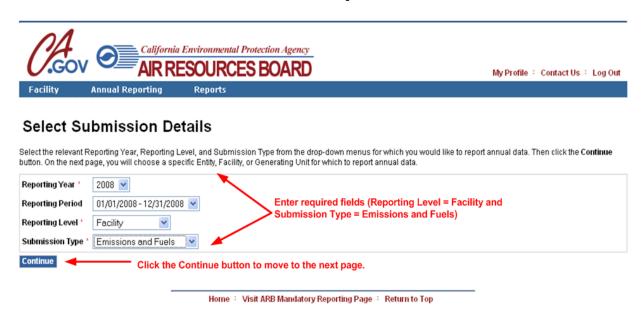


Generating Unit



Select Submission Details

Select the relevant Reporting Year, Reporting Level, and Submission Type from the drop-down menus for which you would like to report annual data. Then click the Continue button. On the next page, you will choose a specific Entity, Facility, or Generating Unit for which to report annual data.

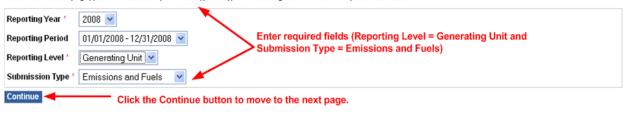

Home : Visit ARB Mandatory Reporting Page : Return to Top

Figure 5-7B Select Submission Details - Energy and Production

Facility



Select Submission Details

Select the relevant Reporting Year, Reporting Level, and Submission Type from the drop-down menus for which you would like to report annual data. Then click the Continue button. On the next page, you will choose a specific Entity, Facility, or Generating Unit for which to report annual data.



Home : Visit ARB Mandatory Reporting Page : Return to Top

Generating Unit



Select Submission Details

Select the relevant Reporting Year, Reporting Level, and Submission Type from the drop-down menus for which you would like to report annual data. Then click the Continue button. On the next page, you will choose a specific Entity, Facility, or Generating Unit for which to report annual data.



Home : Visit ARB Mandatory Reporting Page : Return to Top

Figure 5-7C Select Submission Details - SF₆ Emissions (Power Entity)

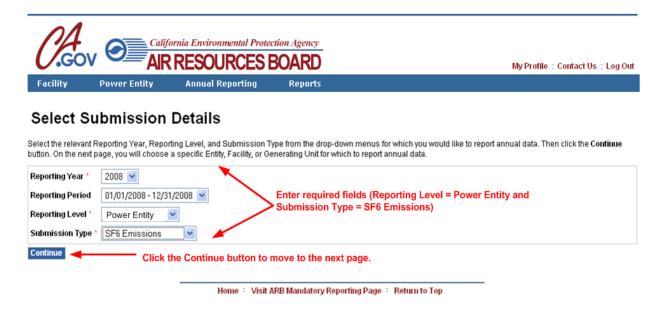


Figure 5-7D
Select Submission Details - Power Transactions (Power Entity)



Select Submission Details


Select the relevant Reporting Year, Reporting Level, and Submission Type from the drop-down menus for which you would like to report annual data. Then click the Continue button. On the next page, you will choose a specific Entity, Facility, or Generating Unit for which to report annual data.



3) Select Facility, Select Generating Unit, or Power Entity. Next, you will either be navigated to the Select Facility page, Select Generating Unit page, or Select Power Entity page, depending on what you have previously selected as your Reporting Level on the previous Select Submission Details page.

a) Select Facility - On the following page, find the facility for which you would like to report annual data. Click and highlight the row in the grid that lists the facility for which you would like to report. Then click the **Continue** button.

Figure 5-8 Select Facility Page

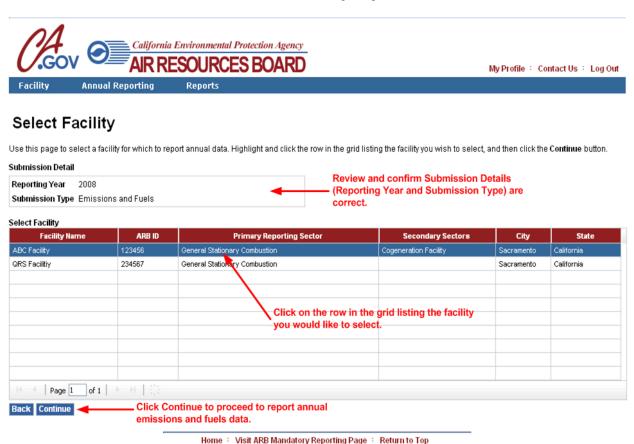

b) Select Generating Unit - On the following page, first identify the facility which houses the generating unit for which you would like to report annual data. Click and highlight the row in the grid with the desired facility. In the generating unit grid underneath, then select the generating unit for which you would like to report annual data. Click and highlight the row in the grid that lists the generating unit for which you would like to report. Then click the Continue button.

Note: If the generating unit for which you would like to report is not contained in the generating unit grid, then you should return to the Facility Information page and add the new unit (See Section 3).

Figure 5-9 Select Generating Unit Page



Select Generating Unit

Use this page to select a generating unit for which to report annual data. First, in the top grid, highlight and click on the row in the grid listing the facility where the generating unit is located. Next, highlight and click on the row in the grid listing the generating unit at that facility you wish to select, and then click the Continue button.

The Facilities grid contains only facilities with which you are currently associated. The Generating Units grid below contains only generating units available at the selected Facility.



Select Facility

Facility Name	ARB ID	Primary Reporting Sector	Secondary Sectors	City	State
ABC Facility	123456	Hydrogen Plant		Sacramento	California
QRS Facilitiy	234567	General Stationary Combustion		Sacramento	California
		Ollah an tha ma	to the sold lietter the feelite.		
		Click on the rov	w in the grid listing the facility to select.		
		you would like	to select.		
Page 1 of 1	→ → I ^{1,2} / _{2,5}				


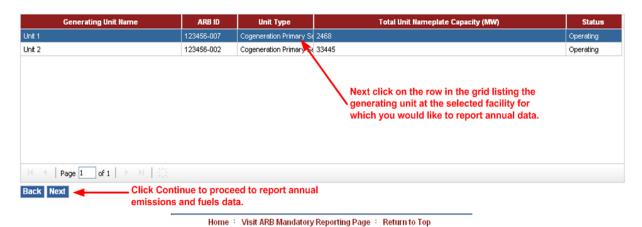


Figure 5-10 Select Power Entity Page

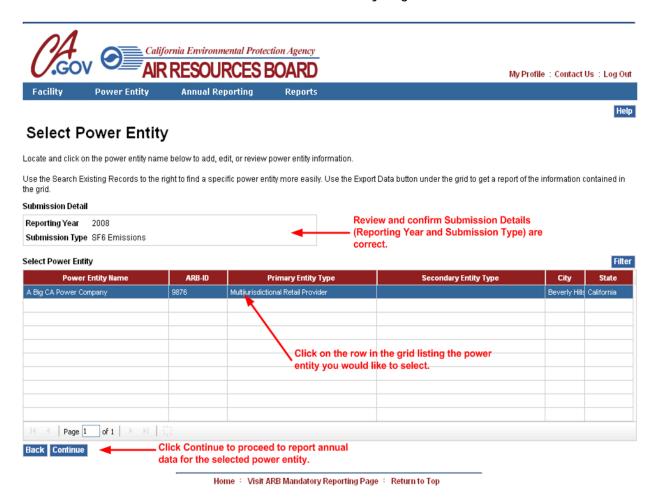


A submission has now been created for your facility, generating unit, or power entity. You may now enter annual data in this session or in subsequent sessions. To access this submission in subsequent sessions to add more data, see the Annual Reporting Home page (see Section 5.2).

5.2 Annual Reporting Home

The Annual Reporting Home page displays existing annual submissions for your facility, generating unit, or power entity. If you have already created an annual submission in a previous session, you may return to it using this menu. You may also access an existing submission through the Facility and Unit Submission tab on the Facility Information page (See Section 3) or through the Entity Submission tab on the Power Entity Information page (See Section 4). If you have already created a submission and reported some annual data, you should navigate back to the existing submission through the Annual Reporting Home page, the Facility and Unit Submission tab on the Facility Information page, or the Entity Submission Tab on the Power Entity Information page; you should not use the Report Annual Data again if you have already done so.

1) Navigate to the Annual Reporting Home page. Click on the Annual Reporting menu in the top navigation bar. The main menu will underline when you hover your mouse over it; click to select this menu.


Figure 5-11 Annual Reporting Home

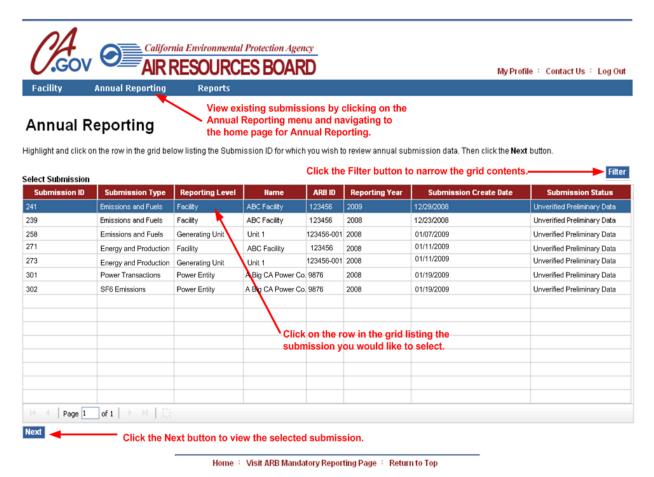

- 2) Select an existing annual submission from the grid. To select a submission, click on the row listing the submission you would like to view, and then click the **Next** button.
 - a) All columns in the submission grid can be sorted in ascending or descending order. Click on the column header to sort by a specific column of data.
 - b) The order of grid columns is changeable. To move a column of data, click on the column header and then drag and drop the column where you would like it.
 - c) If there are multiple pages of submissions, the total number of pages will display at the bottom of the grid. Use the arrows in the bottom left corner of the grid, on either side of the "Page # of #" label, to navigate between multiple pages.

- d) To search the grid and narrow the contents of the grid display, click the **Filter** button. A filter pop-up will display.
 - i) Enter the criteria that you would like to search on in the relevant field in the filter pop-up, and then click the **Filter** button in the pop-up.
 - ii) To remove all criteria and see the full grid contents, click the Clear button in the pop-up.


Figure 5-12 Annual Reporting Filter

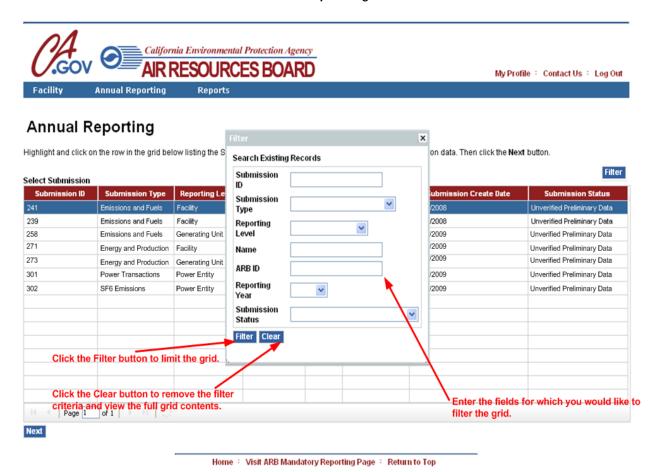

6.0 Report Annual Emissions and Fuels Data (Facility and Generating Unit) or Report Annual SF₆ Emissions Data (Power Entity)


After the submission has been created (See Section 5: Annual Reporting), you will be navigated to the Review Emissions and Fuels Submission Details page for a Facility or Generating Unit Submission.

Figure 6-1
Review Emissions and Fuels Submission Details Page

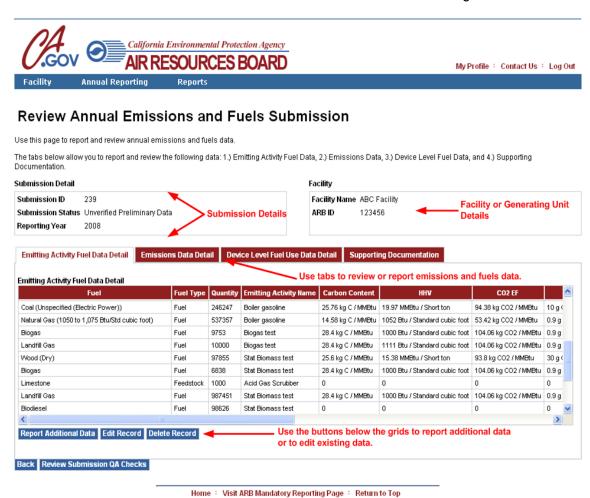

If you are reporting Annual SF_6 Emissions Data for a Power Entity, then after the submission has been created, you will be navigated to the Annual SF_6 Emission Submission page.

Figure 6-2 Annual SF₆ Emissions Submission Page

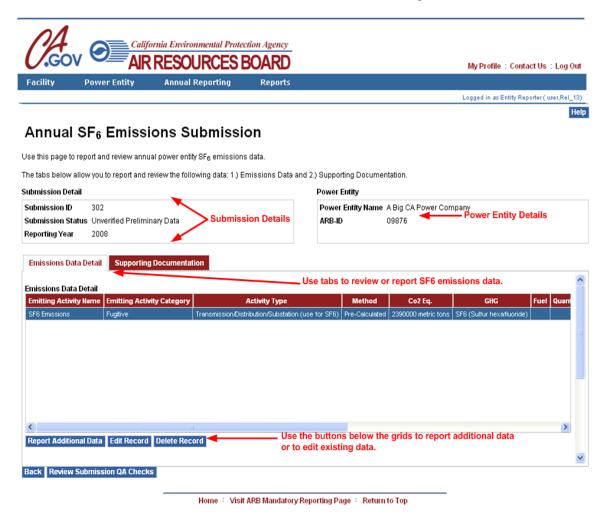

At the top of the Submission page, there are two blocks that display information about your submission. In the upper left hand corner, there is a block displaying your Submission ID (system-generated identifier), Submission Status, and Reporting Year. In the upper right hand corner, there is a block displaying your facility, generating unit, or power entity name and ARB ID.

From the Submission page (either Emissions and Fuels or SF₆ Emissions), use the tabs to report various data, such as device level fuel use, emitting activity fuel use, or emissions.

Note: For a power entity submission for annual SF_6 emissions data, the only tabs that will display are the Emissions Data Detail and Supporting Documentation tabs. Power Entities reporting their SF_6 emissions data will not report emitting activity fuel use or device level fuel use.


6.1 Reporting Emitting Activity Fuel Use Data

This section is only relevant for a facility or generating unit reporting Emissions and Fuels Data. A power entity will not report emitting activity fuel use for its SF₆ Emissions Data submission.

For the fuels, feedstocks, and other inputs that you have associated with your facility or generating unit's emitting activities, you are required to report the amount used (quantity consumed). You also have the option of reporting additional detailed factors for each fuel, such as carbon content, heat content, or emission factors.


1) To report Emitting Activity Fuel use, click on the Emitting Activity Fuel Data Detail tab. Then click the **Report Additional Data** button.

Figure 6-3
Emitting Activity Fuel Use Data Detail Tab

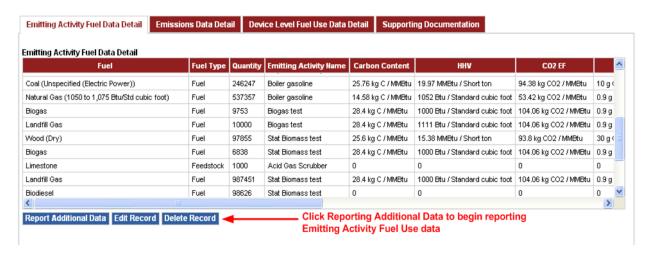

2) On the Select Emitting Activity page, you should select the emitting activity for which you would like to report your fuel use. Select an emitting activity by highlighting the row in the grid that lists the emitting activity for which you would like to report, and then click the **Continue** button.

Figure 6-4 Select Emitting Activity Page

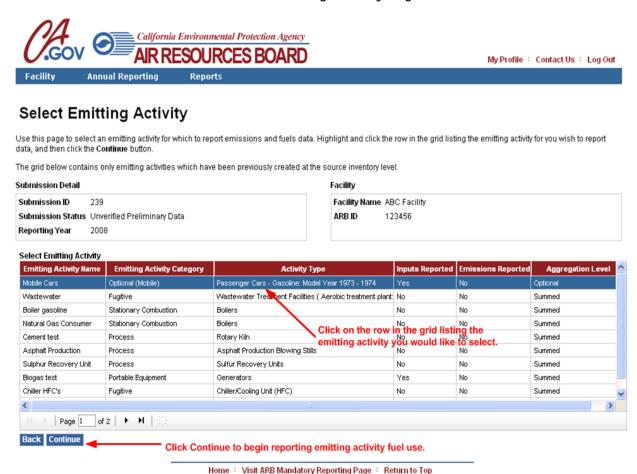


3) On the Activity Fuel Use page, you can report your fuel use and additional detailed factors, if applicable.

See Figure 6-8 to view the complete Report Activity Fuel Use page. Figure 6-5 through Figure 6-7 display step-by-step instructions for reporting emitting activity fuel use.

a) First select a fuel from the grid at the top of the page. The Fuel Name and the appropriate unit of measure will populate in the block below the grid.

Figure 6-5
Report Activity Fuel Use - Select Fuel

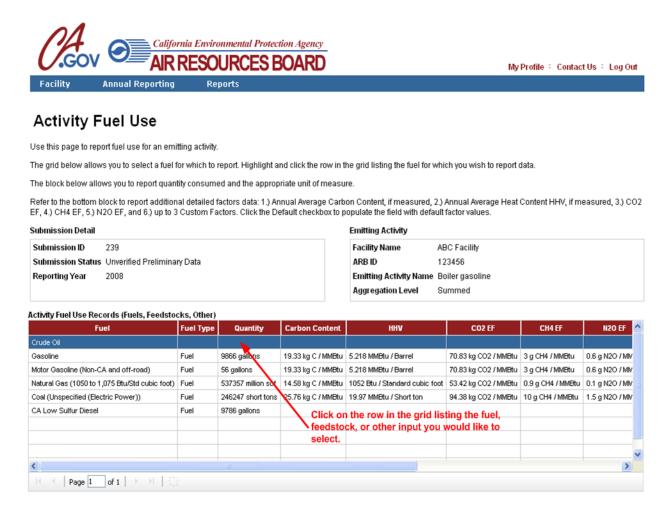

b) Next enter the amount used in the Quantity Consumed field.

Figure 6-6
Report Activity Fuel Use - Enter Quantity Consumed



c) If applicable, you may enter additional detailed factors.

Note: If a default factor is available, the checkbox under "Default" will be enabled. If you would like to use the default factor, click the checkbox. If you would like to use all available default values, click the Default "All" checkbox.

These default values will populate in the appropriate fields with the appropriate corresponding units of measure.

Figure 6-7
Report Activity Fuel Use - Report Detailed Factors

Factor Name	Default	□ All	Value	UOM
Annual Avg Carbon Content if measured:		Enter additional detailed —		kg C / MMBtu
Annual Avg Heat Content HHV if measured:		factors, if applicable. Use the		MMBtu / Barrel
CO2 EF		Default checkbox to select individual default values, or		kg CO2 / MMBtu
CH4 EF		use the Default All checkbox to select all available default		g CH4 / MMBtu
N2O EF		values.		g N2O / MMBtu
Custom Factor 1		~		V
Custom Factor 2		V		~
Custom Factor 3		V		v
Back Save Report Emissions Review Draft Submission	on			

Home : Visit ARB Mandatory Reporting Page : Return to Top

d) Click the Save button to commit these changes. Upon clicking the Save button, the values you have just entered will display in the grid.

Note: If you do not click the **Save** button before navigating away from this page, any changes made will not be retained.

- e) Repeat steps a-d to report for any other additional fuels.
- f) When complete, you may review these records by returning to the Review Emissions and Fuels Submissions page by clicking the Review Draft Submission button, or you may continue on to report the emissions for the selected emitting activity by clicking the Report Emissions button.

Figure 6-8 Activity Fuel Use Page



Activity Fuel Use

Use this page to report fuel use for an emitting activity.

Report Activity Fuel Use Record (Fuels, Feedstocks, Other)

The grid below allows you to select a fuel for which to report. Highlight and click the row in the grid listing the fuel for which you wish to report data.


The block below allows you to report quantity consumed and the appropriate unit of measure.

Refer to the bottom block to report additional detailed factors data: 1.) Annual Average Carbon Content, if measured, 2.) Annual Average Heat Content HHV, if measured, 3.) CO2 EF, 4.) CH4 EF, 5.) N2O EF, and 6.) up to 3 Custom Factors. Click the Default checkbox to populate the field with default factor values.



Activity Fuel Use Records (Fuels, Feedstocks, Other) Fuel Type Carbon Content CO2 EF CH4 EF N2O EF Crude Oil Gasoline Fuel 9866 ga 19.33 kg C / MMBtu | 5.218 MMBtu / Barrel 70.83 kg CO2 / MMBtu 3 g CH4 / MMBtu 0.6 g N2O / MW Motor Gasoline (Non-CA and off-road) Fuel 56 gallons 19.33 kg C / MMBtu | 5.218 MMBtu / Barrel 70.83 kg CO2 / MMBtu 3 g CH4 / MMBtu 0.6 a N2O / MM 14.58 kg C / MMBtu 1052 Btu / Standard cubic foot 53.42 kg CO2 / MMBtu 0.9 g CH4 / MMBtu 0.1 g N2O / MM Natural Gas (1050 to 1,075 Btu/Std cubic foot) Fuel 537357 million s 94.38 kg CO2 / MMBtu 10 g CH4 / MMBtu 246247 short tons 25.76 ka C / MMBtu | 19.97 MMBtu / Short ton Coal (Unspecified (Electric Power)) Fuel CA Low Sulfur Diesel 9786 gallons Fuel Click on the row in the grid listing the fuel, feedstock, or other input you would like to select. Page 1 of 1

Fuel Name * Quantity Consumed * Unit of Measure * Enter the quantity consumed for the selected fuel in this field. Factor Name Default All Value UOM

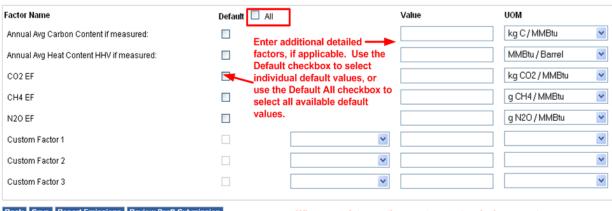

Back Save Report Emissions Review Draft Submission When complete, continue on to report emissions or return to the review submission page.

Click Save before proceeding. Home: Visit ARB Mandatory Reporting Page: Return to Top

6.2 Reporting Emissions Data

After your facility or generating unit has completed reporting emitting activity fuel use, you may proceed to report emissions. This can be accessed directly after reporting activity fuel use, by clicking the **Report Emissions** button. It can also be accessed by clicking on the Emissions Data Detail tab and then clicking the **Report Additional Data** button. If you are reporting SF_6 emissions data for a power entity, you may proceed directly to report emissions data. Power entities reporting SF_6 emissions should access it via the Emissions Data Detail tab and the **Report Additional Data** button.


Figure 6-9
Emissions Data Detail Tab

Emissions and Fuels Submission (Facility or Generating Unit)



Figure 6-9 Emissions Data Detail Tab (cont.)

SF₆ Emissions Submission (Power Entity)

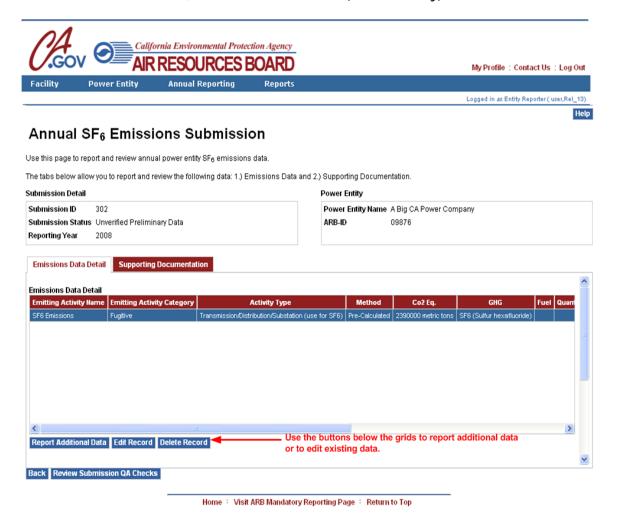

- 1) If you have not yet reported your facility or generating unit's emitting activity fuel use, you should do so before reporting emissions (See Section 6.1). Power Entities do not report emitting activity fuel use and can skip this step.
- 2) Navigate to the Report Emissions page in either of the following ways:
 - a) From the Activity Fuel Use page After completion of reporting emitting activity fuel use, click the **Report Emissions** button to continue reporting emissions.
 - b) From the Emissions Data Detail tab on the Review Emissions and Fuels Submission page. Click on the Emissions Data Detail tab. Then click the Report Additional Data button.
 - i) Select the Emitting Activity for which you would like to report emission on the Select Emitting Activity Page (See Section 6.1 for additional instructions).


- ii) Report any activity fuel use for the emitting activity (See Section 6.1 for additional instructions). This step is only applicable for facility or generating unit Emissions and Fuels Submissions; it is not applicable for power entity SF₆ Emissions Submissions.
- iii) Then click the Report Emissions button.
- 3) Select the fuel, feedstock, or other input for which you would like to report emissions in the top Select Fuel grid by highlighting and clicking on the row listing the fuel for which you would like to report.

Power entities reporting SF₆ emissions should select the row Remainder Emissions from the top grid.

Note: In the Select Fuel grid, there is row listing Remainder Emissions. This is meant to be used to report pre-calculated emissions values for which there is no fuel use data (e.g., power entity SF₆ fugitive emissions).


See Figure 6-15 to view the complete Report Emissions page. Figure 6-10 through Figure 6-14 display step-by-step instructions for reporting emissions.

Figure 6-10 Report Emissions - Select Fuel Grid

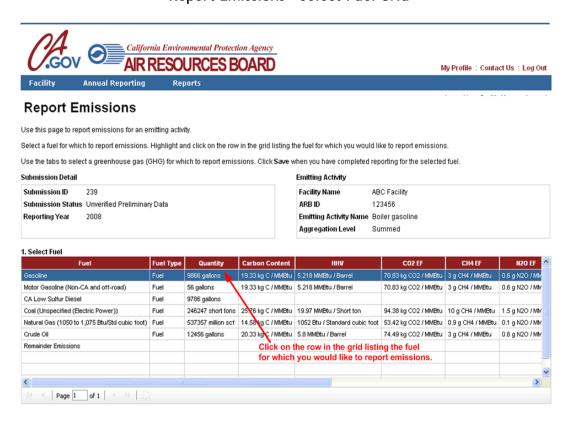


4) Select the GHG tab (CO₂, N₂O, CH₄, SF₆, etc.) to report emission for that greenhouse gas.

Figure 6-11 Report Emissions - Select GHG Tab

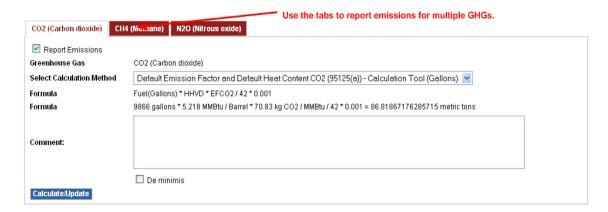

5) Click the Report Emissions checkbox to indicate that you would like to report for the selected GHG.


Figure 6-12
Report Emissions - Check Report Emissions Checkbox

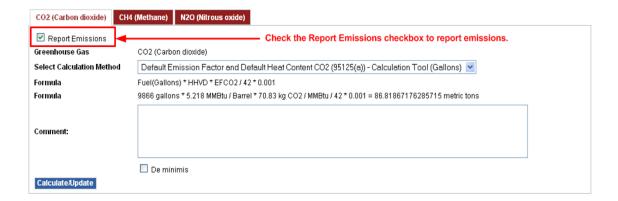

6) Select the calculation method that you would like to use to report emissions.


If you have selected a pre-calculation method, enter the pre-calculated emissions value in the appropriate field. If you have selected the calculation tool, the calculated emissions value will display.

Figure 6-13
Report Emissions - Select Calculation Method

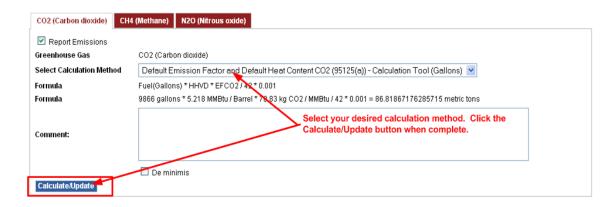

- 7) Enter a comment if applicable.
- 8) If the emissions you have reported meet the requirements of **De Minimis** emissions, click the **De Minimis** checkbox. For more information on what levels of emissions qualify as **De Minimis**, see the Mandatory Reporting Instructional Guidance for Operators.
- 9) Review all of the reported emissions for the selected fuel in the Review Results grid. Make any necessary changes using the GHG tabs above and Report Emissions checkbox.
- 10) Then click the **Save** button. After clicking the **Save** button, the Select Fuel grid at the top of the page will update to display what greenhouse gas emissions have been reported in the GHGs Reported column (far right column- you may have to scroll to view).


Figure 6-14
Report Emissions - Review Results and Save

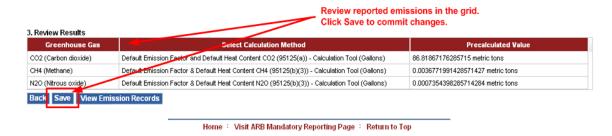

Note: You can change the order of any grid columns by clicking on the column header and dragging and dropping it in a new location.


11) Repeat Steps 1-10 for additional fuels if necessary.

Figure 6-15 Complete Report Emissions Page

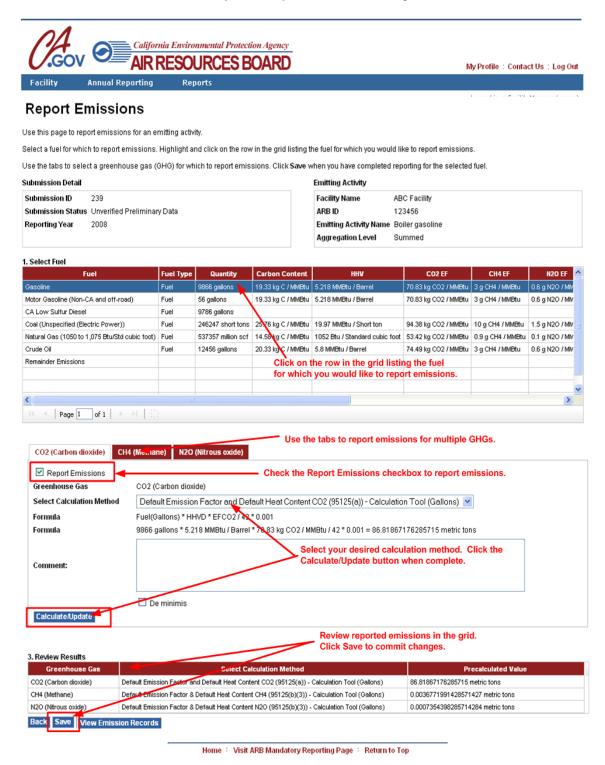

12) Click the View Emission Records button to review the reported emissions.

Figure 6-16
Review Emitting Activity Emission Records

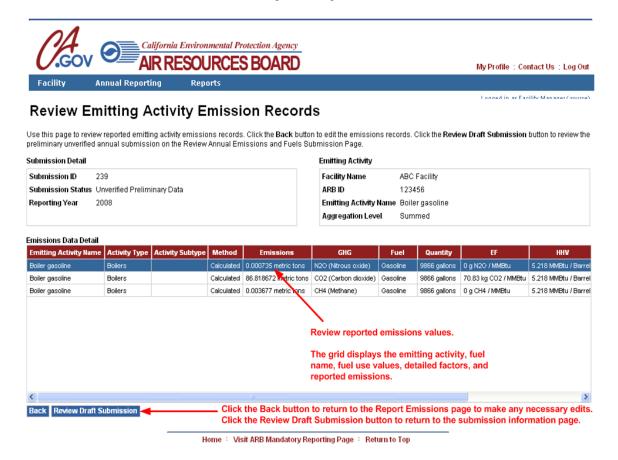

13) Review the emitting activity emissions records. Click the **Back** button to return to the Report Emissions page to make any necessary changes. When data is accurate and complete, click the **Review Draft Submission** button to return to the Emissions and Fuels Submission Information page.

6.3 Reporting Device Level Fuel Data

This section is only relevant for a facility reporting Emissions and Fuels Data. A generating unit will not report device level fuel use for its Emissions and Fuels Data submission. A power entity will not report device level fuel use for its SF_6 Emissions Data submission.

Facilities are required to report their device level fuel use at the lowest level of metering available at their facility. You should have set up any devices/meters at your facility when you were setting up your facility information earlier (see Section 3 for instructions on how to add or edit facility devices). Now you can report fuel use for these devices/meters.

1) Click on the Device Level Fuel Data Detail tab to report metered fuel use, then click the **Report Additional Data** tab to proceed with reporting device fuel data.

Figure 6-17 Device Level Fuel Use Data Detail Tab

CAGOV				Protection Agency S BOARD				
Facility	Annual Repo		Reports	S DOAND			My Profile : Contact Us : Log Ou	
, demey	- maar Kepo	· cing	Reports					
Review A	nnual E	missi	ons and	Fuels Subr	nissio	1		
Jse this page to re	port and review a	nnual emiss	ions and fuels da	ata.				
he tabs below allo ocumentation.	w you to report a	nd review the	following data: 1	.) Emitting Activity Fuel	Data, 2.) Emis	sions Data, 3.) Device Level F	uel Data, and 4.) Supporting	
Submission Detail				Facility				
Submission ID	ubmission ID 239				Facility Name ABC Facility			
Submission Statu		liminary Data			ARB ID	123456		
Reporting Year	2008							
Device Level Fuel Device Meter A		Meter	Device Type	Fuel N	lame	Quantity 5737 short tons	Comment	
Motor A		IMELEI		CORG		or or short tons		
				114	h - h - 44	balandha adda ka ara	of and distance Labora	
Report Additiona	Data Edit Rec	ord Delete	Record -		ne buttons edit existin	below the grids to repo g data.	rt additional data	
Back Review Su	bmission QA Ch	ecks						
			Hama t A	/isit ARB Mandatory Re		. Detum to Ton		

- 2) On the Add Device Level Fuel Data page, report metered fuel use.
 - a) Select the device/meter for which you would like to report fuel use from the drop-down menu.

Note: If the device for which you would like to report is not displayed in the drop-down menu, return to the Facility Information page, Devices tab to add it (See Section 3).

b) Select the fuel you would like to report for from the drop-down menu. Once you select a fuel, the appropriate unit of measure will populate in the Unit of Measure drop-down and will not require user selection.


Note: You may select and report fuel use for the same fuel for multiple devices if necessary. You may also report fuel use for multiple fuels for the same device if necessary.

- c) Enter the fuel quantity measured.
- d) Click the **Save** button. Once you click the **Save** button, a new row in the grid will appear displaying the selected device and fuel amount reported.

Note: If you do not click the **Save** button before navigating away from this page, any changes made will not be retained.

- e) Repeat steps a-d for any other additional devices.
- f) When complete, click the **Back** button to return to the Review Emissions and Fuels Submission page.

Figure 6-18 Add Device Level Fuel Data Page

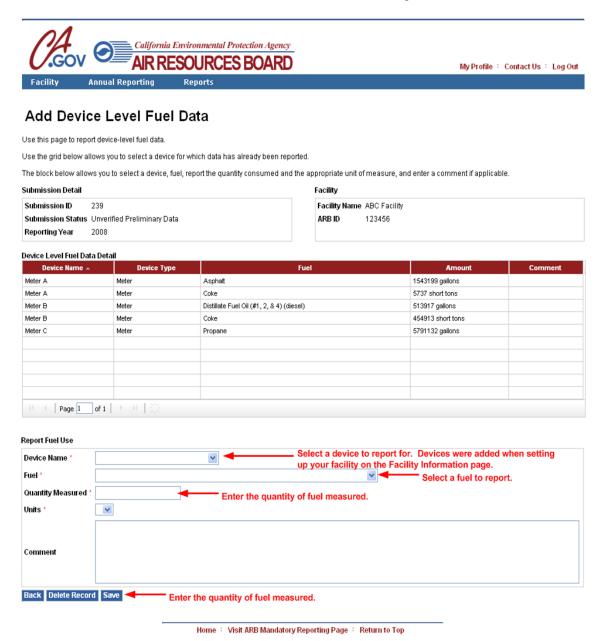


6.4 Adding Supporting Documentation

If your submission requires any additional supporting documentation, you may attach it to your submission using the Supporting Documentation tab.


1) Click on the Supporting Documentation tab to attach a document to your submission.

Figure 6-19 Supporting Documentation Tab

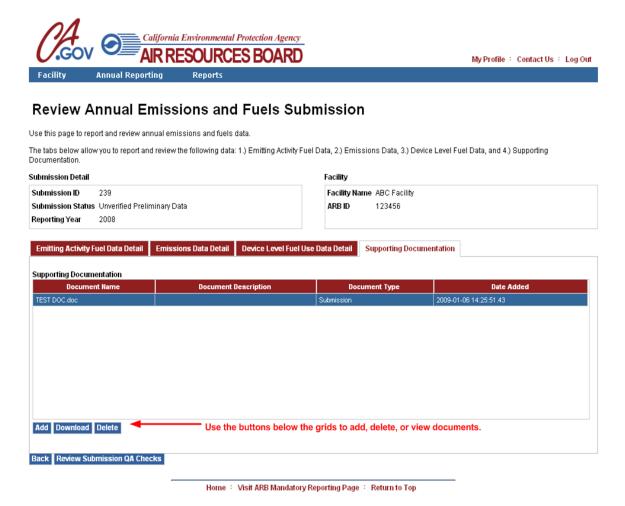

- 2) Click the Add button to add a new document.
 - a) From the pop-up window, use the **Browse** button to locate the document you would like to upload.
 - b) Select the document Status as Public or Private. This Status designation will determine whether or not the document will be accessible in public reports.
 - c) Add a Description if necessary.
 - d) Click the **Add** button. The document should now display in the grid on the Supporting Documentation tab.

Figure 6-20 Add Document Window

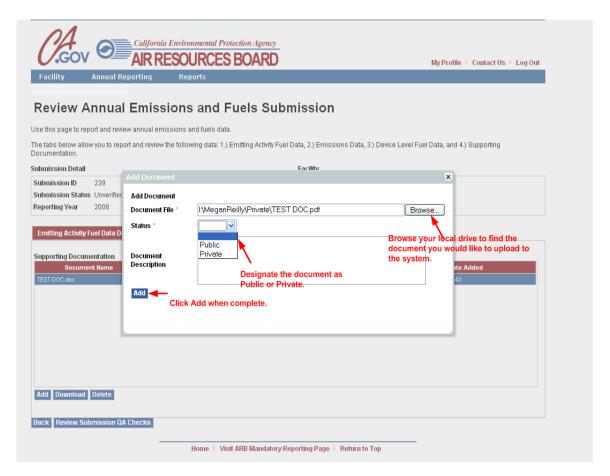

- 3) Click the **Download** button to open and view the document.
- 4) Click the Delete button to delete a document from the submission.

[This page intentionally left blank.]

7.0 Report Annual Energy and Production Data

7.1 Annual Energy and Production Submission

Reporting Energy and Production data is only relevant for facilities and generating units. Power entities will not report energy and production data.


After the submission has been created (See Section 5: Annual Reporting), you will be navigated to the Annual Energy and Production Submission Details page. From this page, use the tabs to report various data, such as indirect energy use, energy production, energy provided or sold, steam production, cement efficiency metrics, or hydrogen data. At the top of this page, there are two blocks that display information about your submission. In the upper left hand corner, there is a block displaying your Submission ID (system-generated identifier) and Submission Type (Energy and Production). In the upper right hand corner, there is a block displaying your facility or generating unit name and ARB ID.

The tabs that display on the Annual Energy and Production Submission page correspond to energy and production reporting categories. Energy and Production reporting categories are set up on the Facility Information page, Energy and Production tab (see Section 3 for instructions on how to add or change Energy and Production reporting categories).

The following sections describe reporting for all available Energy and Production reporting categories. All six of these reporting categories may not apply to your facility, but all are included in this document for reporting guidance purposes.

For more information about which energy and production reporting categories your facility or generating unit is required to report, please refer to the ARB Mandatory Reporting Regulation or the Mandatory Instructional Guidance for Operators or also refer to Figure 3-14 and Figure 3-15 of this document.

Figure 7-1
Review Energy and Production Submission Details Page

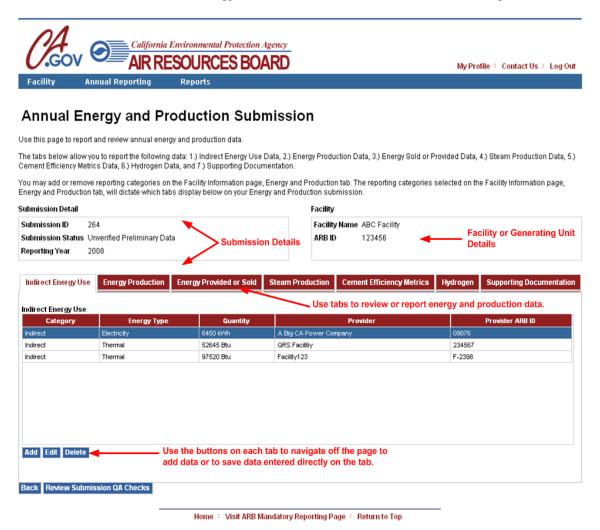


7.2 Reporting Indirect Energy Use

Indirect energy refers to electricity, thermal, or other energy provided by a retail provider or facility not owned or operated by the user of the energy. Indirect energy use is required to be reported by facilities with Primary Reporting Sector or Secondary Sector(s) of General Stationary Combustion, Cement, Refinery, Hydrogen, or Cogeneration. Reporting methods for indirect energy use are detailed in sections 95125(k) - (I) of the ARB Mandatory Reporting Regulation. In the California GHG Emissions Reporting Tool, they are reported in your Energy and Production Submission, under the Indirect Energy Use tab.


1) To report indirect energy use, click on the Indirect Energy Use tab. Any previously reported indirect energy use records will display in the grid on the tab. Then click the Add button to add a new record.

Figure 7-2 Indirect Energy Use Tab

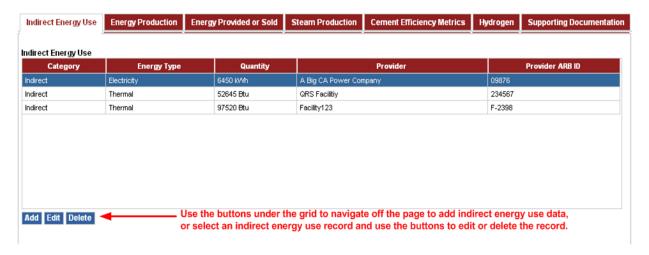

2) After clicking the **Add** button, you will be navigated to the Report Data page. On this page, you will report indirect energy use data.

Figure 7-3 Report Indirect Energy Use Data

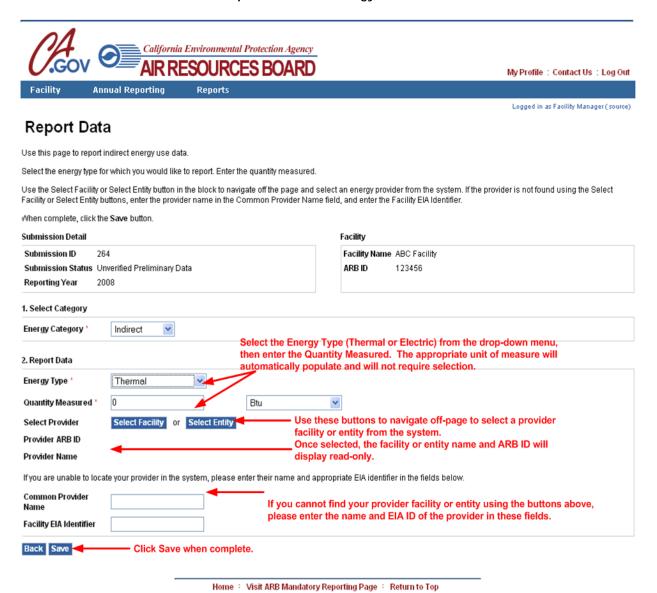


- a) Step 1: Select Energy Category The Energy Category of "Indirect" will automatically be chosen for you.
- b) Step 2: Report Data
 - Select the appropriate Energy Type from the drop-down menu. The drop-down menu will include options to report your facility's Thermal or Electric indirect energy.
 - ii) Enter the quantity of indirect energy measured. The appropriate unit of measure will display (Btu for Thermal and kWh for Electric), and will not require selection by the user.

iii) Select the provider of the indirect energy. If the provider is a facility or power entity in the reporting tool database, use the Select Facility or Select Entity buttons. You will be navigated off-page to select a provider facility or power entity. Highlight the row listing the provider facility or power entity and then click the Continue button.

Figure 7-4 Select Provider Facility



Select Facility

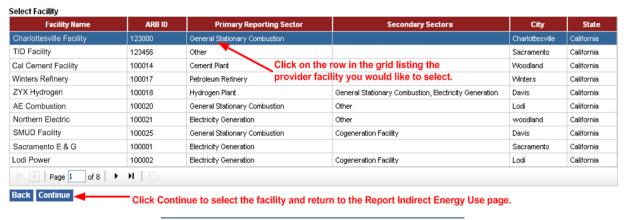

Home : Visit ARB Mandatory Reporting Page : Return to Top

Figure 7-5 Select Provider Entity



Select Power Entity

Select Power Entity Entity Name	ARB-ID	Primary Entity Type	Secondary Entity Type	City	Fil State
TUV Entity	12300	Marketer	Secondary Linky Type	Staunton	California
DEF Entity	12301	Asset Owning/Controlling Supplier Clic	k on the row in the grid listing the	Sacramento	California
Sacramento Valley Power	100045	Non-mailjansaictional Retail Fromuei	vider power entity you would like to	Davis	California
Davis Electric	100033	Multijurisdictional Retail Provider	ct.	Davis	California
ΓΙD Entity	1999	Non-Multijurisdictional Retail Provider	Asset Owning/Controlling Supplier	Turlock	California
ADWP Entity	1007	Asset Owning/Controlling Supplier		Los Angeles	California
SMUD Entity	1006	Marketer	Asset Owning/Controlling Supplier	Sacramento	California
Calpine Entity	1008	Non-Multijurisdictional Retail Provider		Capay	California
Charlottesville Electricity Co.	999	Marketer		Charlottesville	Virginia
Page 1 of 1) ;;;				
Back Continue	— Click C	ontinue to select the entity and return t	o the Deport Indicast Energy Hee no		

Home : Visit ARB Mandatory Reporting Page : Return to Top

- iv) If using the Select Facility or Select Entity buttons does not locate your provider, you may enter the provider's name in the Common Provider Name field and its EIA ID in the Facility EIA Identifier field.
- v) When finished reporting data, click the **Save** button. This will navigate you back to the Energy and Production Submission page. The indirect energy use record you have just entered will appear in the grid under the Indirect Energy Use tab.
- 3) To edit an existing indirect energy use record, select the record by highlighting and clicking on the row in the grid listing the record. Then click the Edit button. You will be navigated back to the Report Indirect Energy Use Data page. Make any necessary edits to the record, then click the Save button.
- 4) To delete an existing indirect energy use record, select the record by highlighting and clicking on the row in the grid listing the record. Then click the Delete button. A pop-up will display asking you to confirm the deletion. If you are sure you would like to delete, click Yes. The record will be removed from the grid under the Indirect Energy Use tab.

Note: Deleting a record is a permanent action and cannot be undone. Please remember that records can be edited. Only delete a record if it has been created in error, and you are sure it should be deleted.

7.3 Reporting Energy Production

Energy production refers to the net power generated by your facility. Net power generated refers to the gross generation minus station service or unit service power requirements, expressed in megawatt hours (MWh) per year. In the case of cogeneration, this value is intended to include internal consumption of electricity for the purposes of a production process, as well as power put on the grid.

Energy Production is required to be reported for facilities with Primary Reporting Sector or Secondary Sector(s) of Electricity and Cogeneration. The requirements for cogeneration facilities are found in section 95112 of the ARB Mandatory Reporting Regulation. In the California GHG Emissions Reporting Tool, energy production is reported in your Energy and Production Submission, under the Energy Production tab.

1) To report energy production, click on the Energy Production tab. The reporting requirements for cogeneration facilities differ from those of non-cogeneration facilities. The Primary Reporting Sector and Secondary Sector(s) selected for your facility on your Facility Information page will dictate the fields displayed on this tab.

Note: If you need to make changes to your facility's Primary Reporting Sector or Secondary Sector(s), navigate to your Facility Information page. Then click on the Facility Details tab to make any necessary changes. See Section 2 for more information.

Figure 7-6
Energy Production Tab (Non-Cogeneration)

Figure 7-7
Energy Production Tab (Cogeneration)

Indirect Energy Use	Energy Production	Energy Provided or Sold	Steam Production	Cement Efficiency Metrics	Hydrogen	Supporting Documentation	
Energy Production							
Net Power Generated *		2	5250	MWh			
(Cogeneration Only) Amount Consumed On-site		2000	MWh				
(Cogeneration Only) Efficiency of Electricity Generation (if known)		Generation (if known)	15	%			
Thermal Energy Produc	ction (Cogeneration or	ly)					
Total Useful Thermal C	Output *	3	2075	MMBtu			
Amount Consumed On	ı-site *	1	8500	MMBtu			
Efficiency of Thermal E	Energy Production (if F	nown) 9	2	%			
				_			
Input Steam to Turbine	e (if measured)	5	000	MMBtu			
Output of Heat Recove	ry System Generator	HRSG) *	75	MMBtu			
Supplemental Fuel Fire	ed in Duct Burner of Hi	RSG 1	000	MMBtu			
Save		re navigating off of the	•••	n tab,			

2) Report Energy Production Data

- a) If not a cogeneration facility or unit, enter your net power generated in MWh. Then click the **Save** button. If you do not click the **Save** button, the value you entered will not be retained.
- b) If a cogeneration facility or unit, enter your net power generated in MWh. Then enter the additional required fields, including the amount of electricity consumed onsite, the efficiency of electricity generation, and additional Thermal Energy Production information. When complete, click the Save button. If you do not click the Save button, the values you entered will not be retained.


7.4 Reporting Energy Provided or Sold

The Energy Provided or Sold tab allows the user to report the Electric and Thermal Energy that has been provided or sold. This includes: Thermal Energy Provided or Sold (Cogeneration only), Electricity Provided or Sold (Cogeneration only), Total Wholesale Electricity Sold (Cogeneration only), and Wholesale Electricity Directly Exported.

Energy Provided or Sold is required to be reported by facilities with Primary Reporting Sector or Secondary Sector(s) of Electricity and Cogeneration. The requirements for non-cogeneration facilities only require them to report wholesale electricity directly exported. The requirements for cogeneration facilities, which differ from those of non-cogeneration facilities in that they are more expansive, are found in section 95112 of the ARB Mandatory Reporting Regulation, and include thermal energy provided or sold, electricity provided or sold, total wholesale electricity sold, and wholesale electricity directly exported. In the CA GHG Emissions Reporting Tool, energy provided or sold is reported in your Energy and Production Submission, under the Energy Provided or Sold tab.


1) To report energy provided or sold, click on the Energy Provided or Sold tab. Any previously reported energy provided or sold records will display in the grid on the tab. Then click the **Add** button to add a new record.

Figure 7-8
Energy Provided or Sold Tab

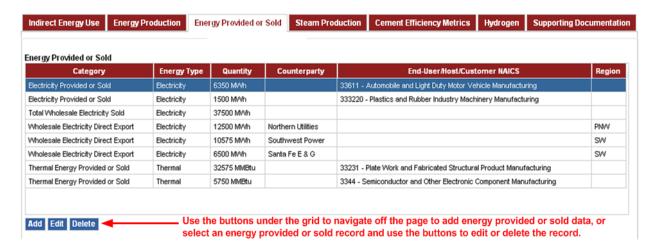

- 2) After clicking the **Add** button, you will be navigated to the Report Data page. On this page, you will report energy provided or sold data. Please see below (a d) for reporting instructions for each specific type of energy provided or sold.
 - a) To report Wholesale Electricity Directly Exported (Cogeneration and Non-cogeneration).

Figure 7-9
Report Wholesale Electricity Direct Export (Cogeneration and Non-cogeneration)

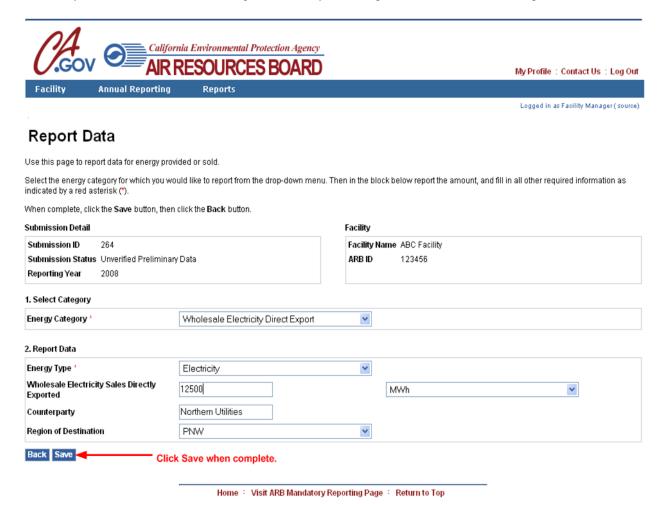


- i) Step 1: Select Energy Category Select Wholesale Electricity Direct Export from the drop-down menu.
- ii) Step 2: Report Data
 - The Energy Type of Electricity will automatically populate in the drop-down menu and will not require you to select it.
 - Enter the quantity of wholesale electricity sales directly exported in MWh in the corresponding field. The unit of measure will automatically populate in the drop-down menu and will not require you to select it.
 - Enter the name of the counterparty to which you directly exported the wholesale electricity.

Select a region of destination of the wholesale electricity sales. The
options in the drop-down menu include: PNW (Pacific Northwest) and SW
(Southwest).

Note: As referenced in the ARB Mandatory Reporting Regulation, Pacific Northwest is defined as Washington, Oregon, Idaho, Montana, and British Columbia, and Southwest is defined as Arizona, Nevada, Utah, Colorado, and western New Mexico.

- iii) When you have completed entering your data, click the Save button. Upon clicking the Save button, the data entered will be saved, and you will be navigated back to the Energy and Production Submission page. On the Energy Provided or Sold tab, the Wholesale Electricity Direct Export record you just entered will appear in the grid.
- b) To report Thermal Energy Provided or Sold (Cogeneration only).

Figure 7-10
Report Thermal Energy Provided or Sold (Cogeneration Only)

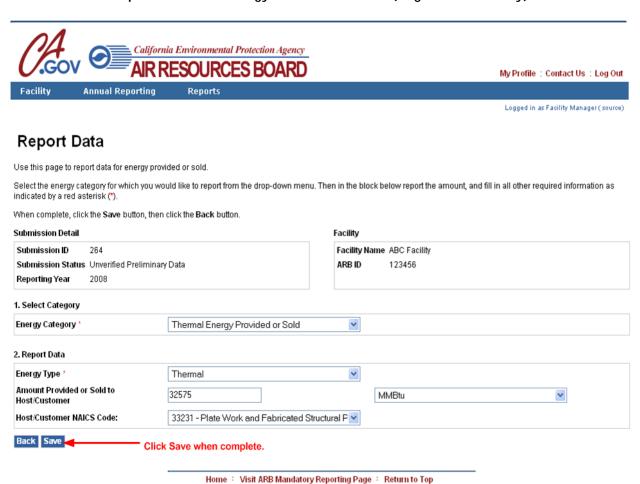


- i) Step 1: Select Energy Category Select Thermal Energy Provided or Sold from the drop-down menu.
- ii) Step 2: Report Data
 - The Energy Type of Thermal will automatically populate in the drop-down menu and will not require you to select it.
 - Enter the amount of thermal energy provided or sold to a host or customer in MMBtu in the corresponding field. The unit of measure will automatically populate in the drop-down menu and will not require you to select it.
 - Select the NAICS Code of the host or customer that the thermal energy was provided or sold to from the drop-down menu.

Note: The North American Industry Classification System (NAICS) has replaced the U.S. Standard Industrial Classification (SIC) system. NAICS was developed jointly by the U.S., Canada, and Mexico to provide new comparability in statistics about business activity across North America. To find your 6 digit NAICS Code, you can go to http://www.census.gov/epcd/www/naics.html.

- iii) When you have completed entering your data, click the Save button. Upon clicking the Save button, the data entered will be saved, and you will be navigated back to the Energy and Production Submission page. On the Energy Provided or Sold tab, the Thermal Energy Provided or Sold record you just entered will appear in the grid.
- c) To report Electricity Provided or Sold (Cogeneration only).

Figure 7-11 Report Electricity Provided or Sold (Cogeneration Only)

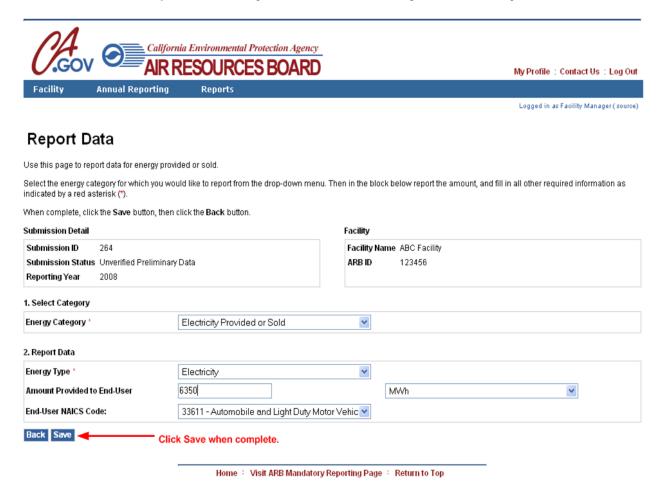

- i) Step 1: Select Energy Category Select Electricity Provided or Sold from the drop-down menu.
- ii) Step 2: Report Data
 - The Energy Type of Electricity will automatically populate in the drop-down menu and will not require you to select it.
 - Enter the amount of electricity provided to end-users in MWh in the corresponding field. The unit of measure will automatically populate in the drop-down menu and will not require you to select it.
 - Select the NAICS Code of the end-user that the electricity provided to from the drop-down menu.

Note: The North American Industry Classification System (NAICS) has replaced the U.S. Standard Industrial Classification (SIC) system. NAICS was developed jointly by the U.S., Canada, and Mexico to provide new


comparability in statistics about business activity across North America. To find your 6 digit NAICS Code, you can go to http://www.census.gov/epcd/www/naics.html.

- iii) When you have completed entering your data, click the **Save** button. Upon clicking the **Save** button, the data entered will be saved, and you will be navigated back to the Energy and Production Submission page. On the Energy Provided or Sold tab, the Electricity Provided or Sold record you just entered will appear in the grid.
- 3) To edit an existing energy provided or sold record, select the record by highlighting and clicking on the row in the grid listing the record. Then click the Edit button. You will be navigated back to the Report Energy Provided or Sold Data page. Make any necessary edits to the record, then click the Save button.
- 4) To delete an existing energy provided or sold record, select the record by highlighting and clicking on the row in the grid listing the record. Then click the Delete button. A pop-up will display asking you to confirm the deletion. If you are sure you would like to delete, click Yes. The record will be removed from the grid under the Energy Provided or Sold tab.

Note: Deleting a record is a permanent action and cannot be undone. Please remember that records can be edited. Only delete a record if it has been created in error, and you are sure it should be deleted.

a) To report Total Wholesale Electricity Sold (Cogeneration only).

Figure 7-12 Report Total Wholesale Electricity Sold (Cogeneration Only)

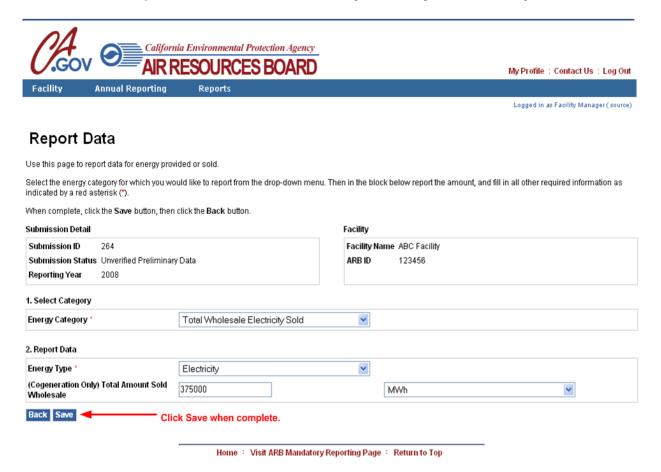

- i) Step 1: Select Energy Category Select Total Wholesale Electricity Sold from the drop-down menu.
- ii) Step 2: Report Data
 - The Energy Type of Electricity will automatically populate in the drop-down menu and will not require you to select it.
 - Enter the total amount of electricity sold wholesale in MWh in the corresponding field. The unit of measure will automatically populate in the drop-down menu and will not require you to select it.
- iii) When you have completed entering your data, click the **Save** button. Upon clicking the **Save** button, the data entered will be saved, and you will be navigated back to the Energy and Production Submission page. On the Energy Provided or Sold tab, the Total Wholesale Electricity Sold record you just entered will appear in the grid.

- 5) To edit an existing energy provided or sold record, select the record by highlighting and clicking on the row in the grid listing the record. Then click the Edit button. You will be navigated back to the Report Energy Provided or Sold Data page. Make any necessary edits to the record, then click the Save button.
- 6) To delete an existing energy provided or sold record, select the record by highlighting and clicking on the row in the grid listing the record. Then click the Delete button. A pop-up will display asking you to confirm the deletion. If you are sure you would like to delete, click Yes. The record will be removed from the grid under the Energy Provided or Sold tab.

Note: Deleting a record is a permanent action and cannot be undone. Please remember that records can be edited. Only delete a record if it has been created in error, and you are sure it should be deleted.

7.5 Reporting Steam Production

The Steam Production tab allows users to report the steam produced by their facility. Steam Production is required to be reported by facilities with Primary Reporting Sector or Secondary Sector(s) of Electricity and Cogeneration. In the CA GHG Emissions Reporting Tool, steam production is reported in your Energy and Production Submission, under the Steam Production tab.

1) To report steam production, click on the Steam Production tab.

Figure 7-13 Steam Production Tab



- 2) Report Steam Production Data.
 - a) Enter your quantity of steam generated from boilers in MMBtu.
 - b) Enter the efficiency of the boiler, if known, in a percentage.
 - c) Then click the **Save** button. If you do not click the **Save** button, the value you entered will not be retained.

7.6 Reporting Cement Efficiency Metrics

The Cement Efficiency Metrics tab allows users to report the amount of cement and clinker produced by a cement manufacturing facility. Cement efficiency metrics data is required to be reported by facilities with Primary Reporting Sector or Secondary Sector(s) of Cement. The reporting requirements for cement plants are found in section 95110 of the ARB Mandatory Reporting Regulation. In the CA GHG Emissions Reporting Tool, cement efficiency metrics data are reported in your Energy and Production Submission, under the Cement Efficiency Metrics tab.

1) To report cement efficiency metrics, click on the Cement Efficiency Metrics tab.

Energy Provided or Sold Steam Production Indirect Energy Use Energy Production Cement Efficiency Metrics Hydrogen Supporting Documentation Report Cement Efficiency Metrics Data Amount Clinker * 25275 metric tons Amount Sold Directly 1050 metric tons 5750 Amount Own Consumed metric tons Enter all required fields. 2500 Amount Added to Stock metric tons Type Clinker Substitute Consumed * Gypsum Amount Clinker Substitute Consumed * 770 metric tons Type Cement Substitute Consumed Limestone Amount Cement Substitute Consumed * metric tons Click Save before navigating off of the Cement Efficiency Metrics tab, or the data entered will not be retained.

Figure 7-14
Cement Efficiency Metrics Tab


2) Report Cement Efficiency Metrics Data. Enter the total amount of clinker, amount of clinker sold directly, amount of own clinker consumed, amount of clinker added to stock, amount of clinker substitute consumed, and the amount of cement substitute consumed, in metric tons in the corresponding fields. Select the type of clinker substitute consumed from the drop-down menu, and select the type of cement substitute consumed from the drop-down menu. Then click the Save button. If you do not click the Save button, the value you entered will not be retained.

7.7 Reporting Hydrogen Data

The Hydrogen tab allows users to report the steam produced by their facility. Hydrogen data is required to be reported by facilities with Primary Reporting Sector or Secondary Sector(s) of Hydrogen. The reporting requirements for hydrogen plants are found in section 95114 of the ARB Mandatory Reporting Regulation. In the CA GHG Emissions Reporting Tool, hydrogen data are reported in your Energy and Production Submission, under the Hydrogen tab.

1) To report hydrogen data, click on the Hydrogen tab.

Figure 7-15 Hydrogen Tab

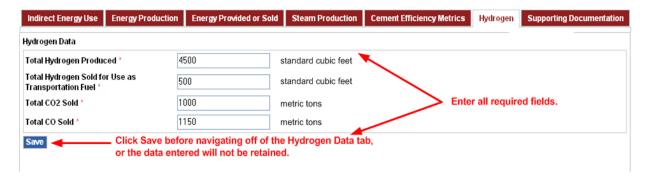


2) Report Hydrogen Data. Enter the total amount of hydrogen produced and the total amount of hydrogen sold for use as transportation fuel, in standard cubic feet in the corresponding fields. Then enter the total CO₂ sold and the total CO sold, in metric tons, in the corresponding fields. Then click the Save button. If you do not click the Save button, the value you entered will not be retained.

7.8 Adding Supporting Documentation

If your submission requires any additional supporting documentation, you may attach it to your submission using the Supporting Documentation tab.


1) Click on the Supporting Documentation tab to attach a document to your submission.

Figure 7-16 Supporting Documentation Tab

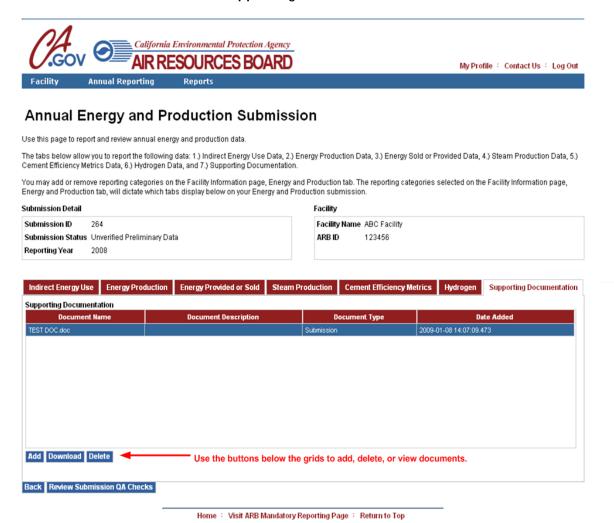

- 2) Click the Add button to add a new document.
 - a) From the pop-up window, use the **Browse** button to locate the document you would like to upload.
 - b) Select the document Status as Public or Private. This Status designation will determine whether or not the document will be accessible in public reports.
 - c) Add a Description if necessary.
 - d) Click the **Add** button. The document should now display in the grid on the Supporting Documentation tab.

Figure 7-17 Add Document Window

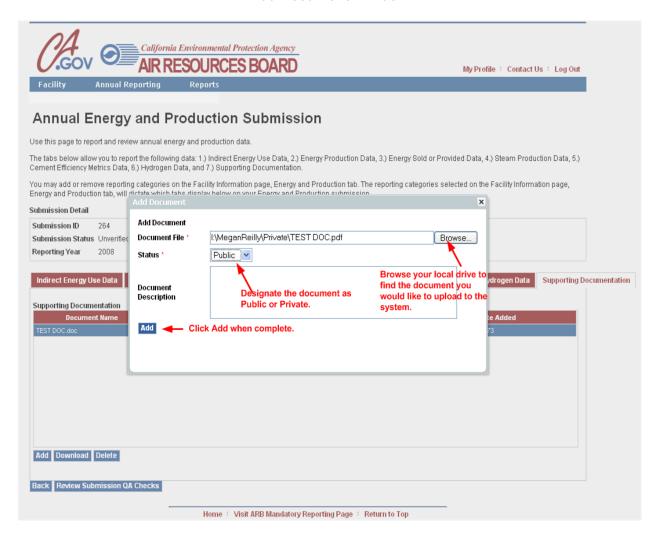


- 3) Click the **Download** button to open and view the document.
- 4) Click the Delete button to delete a document from the submission.

8.0 Report Annual Power Transactions Data

Reporting Power Transactions data is only relevant for power entities. Facilities and generating units will not report power transactions data.

After the submission has been created (See Section 5: Annual Reporting), you will be navigated to the Annual Power Transactions Submission Details page. From this page, the tabs are used to review uploaded power transactions data, such as power transactions data, power wheeled data, retail sales data, or facility ownership data. At the top of this page, there are two blocks that display information about your submission. In the upper left hand corner, there is a block displaying your Submission ID (system-generated identifier), Submission Status (Unverified Preliminary Data), and Reporting Year. In the upper right hand corner, there is a block displaying your power entity name and ARB ID.

Figure 8-1 Power Transactions Submission Page

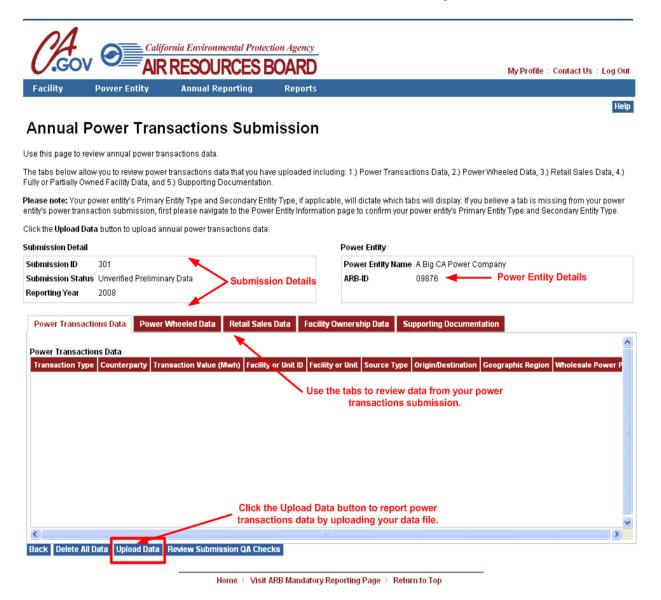

The tabs that display on the Annual Power Transactions Submission page correspond to the reporting requirements for your primary entity type and if applicable your secondary entity type. Your primary entity type and secondary entity type are set up on the Entity Information page, Entity Details tab (see Section 4 for instructions on how to add or change primary or secondary entity types).

The following sections describe information and instructions for reporting power transactions data by uploading an XML file to the Reporting Tool.

For more information about which types of power transactions data your power entity is required to report, please refer to the ARB Mandatory Reporting Regulation or the Mandatory Reporting Instructional Guidance for Operators, or also refer to the figure below

for a brief summary of required power transactions data by entity type. If your power entity has both a primary entity type and secondary entity type, then you are required to report all non-overlapping requirements for both.

Figure 8-2 Power Entity Power Transactions Reporting Requirements Summary by Entity Type

Reporting Requirements/ Entity Type

Marketer:

- 1.) Wholesale Power Imported to CA
- 2.) Wholesale Power Exported from CA
- 3.) Wholesale Power Wheeled through CA

Asset Owning/Controlling Supplier:

- 1.) Is Wholesale Power Purchased > 10% of Total
 Power Supplied? (Yes or No)
 - 2.) If Yes:
 - a.) Wholesale Power Purchased/Taken
 - b.) Wholesale Power Sold

Department of Water Resources (DWR):

- 1.) Wholesale Power Imported to CA
- 2.) Wholesale Power Purchased/Taken from CA
- 3.) Wholesale Power Sold to CA
- 4.) Fully or Partially Owned Facility Data

Non-Multijurisdictional Retail Provider:

- 1.) Wholesale Power Imported to CA
- 2.) Wholesale Power Exported from CA
- 3.) Wholesale Power Wheeled through CA
- 4.) Wholesale Power Purchased/Taken from CA
- 5.) Wholesale Power Sold to CA
- 6.) Retail Sales Data
- 7.) Fully or Partially Owned Facility Data

Multijurisdictional Retail Provider:

- 1.) Wholesale Power Purchased/Taken from CA
- 2.) Wholesale Power Purchased/Taken Not from CA
- 3.) Wholesale Power Sold Not to CA
- 4.) Wholesale Power Sold to CA
- Power Wheeled through CA
- Retail Sales Data
- 7.) Fully or Partially Owned Facility Data

8.1 Upload Power Transactions Data

To report power transactions data, your power entity will first download the Excel spreadsheet template available on the Upload Power Transactions page. The fields in the spreadsheet have been mapped to fields in a schema. After you have inserted your power entity's data into the template, you will export the file to an XML file, and then upload the XML file to the Reporting Tool.

The Excel spreadsheet template includes all required types of power transactions data for your entity type with all required fields included. The first worksheet tab of the spreadsheet includes guidance and instructions on filling out the spreadsheet. The second worksheet tab includes information to be filled out about your entity, the submission, and the submitter. The subsequent worksheet tabs in the spreadsheet correspond to the power transactions data that is required to be reported by your power entity.

Note: If your power entity has both a primary entity type and secondary entity type, you will need to download two power transaction templates, and upload two corresponding XML files to the Reporting Tool

1) From the Power Transaction Submission page, click the **Upload Data** button.

Figure 8-3 Upload Data



Annual Power Transactions Submission

Use this page to review annual power transactions data.


Submission Detail

The tabs below allow you to review power transactions data that you have uploaded including: 1.) Power Transactions Data, 2.) Power Wheeled Data, 3.) Retail Sales Data, 4.) Fully or Partially Owned Facility Data, and 5.) Supporting Documentation.

Please note: Your power entity's Primary Entity Type and Secondary Entity Type, if applicable, will dictate which tabs will display. If you believe a tab is missing from your power entity's power transaction submission, first please navigate to the Power Entity Information page to confirm your power entity's Primary Entity Type and Secondary Entity Type.


Power Entity

Click the Upload Data button to upload annual power transactions data.

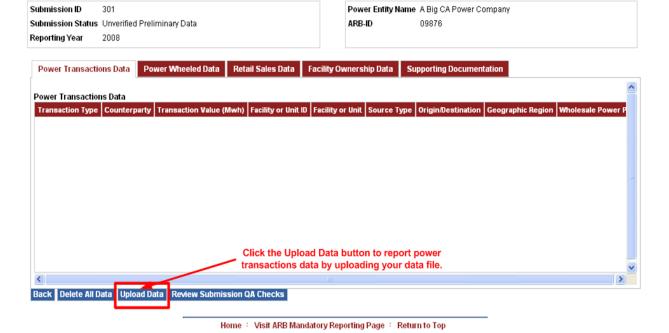


2) On the Upload Power Transactions Data page, download the Excel power transaction template(s) by clicking on the hyperlinked template name and save it to your local drive. If your power entity has a primary entity type and a secondary entity type (Asset Owning/Controlling Supplier), you will need to download two templates.

Figure 8-4
Download Power Transaction Template(s)

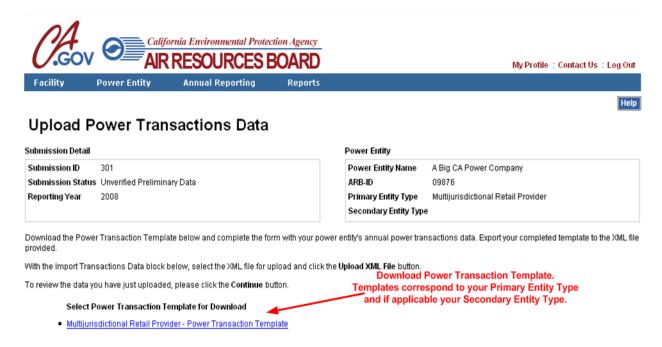

- 3) Complete the template by inserting data for your power entity.
 - a) The first worksheet tab of the spreadsheet provides instructional guidance on how to complete it. The spreadsheet has data validation and conditional formatting embedded in it to further guide you to report data in the correct form.


Figure 8-5 Power Transaction Template - Guidance Tab Microsoft Excel - MJ RP_PT1.xls

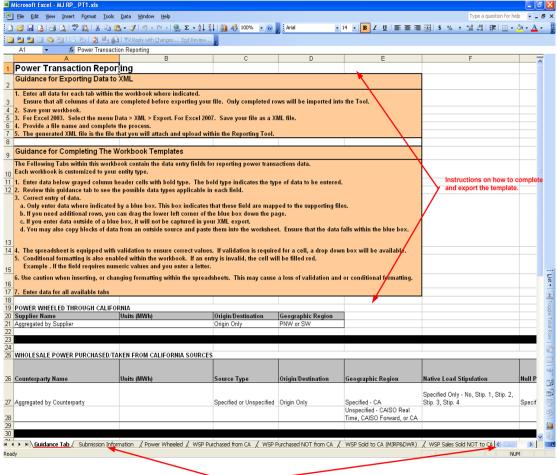


Complete tabs with power transactions data

b) The second tab contains information about the submission and power entity that you need to complete prior to exporting and uploading the file to the Reporting Tool.

Note: For the Submitter field on this tab, enter the ARB username of the person (Entity Reporter) that will upload the file to the Reporting Tool. The Entity Reporter's ARB username listed on this tab must match the username logged in the Reporting Tool. If the Submitter does not match, the system will detect this discrepancy and will not permit the upload of data.

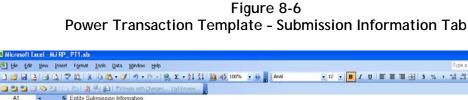

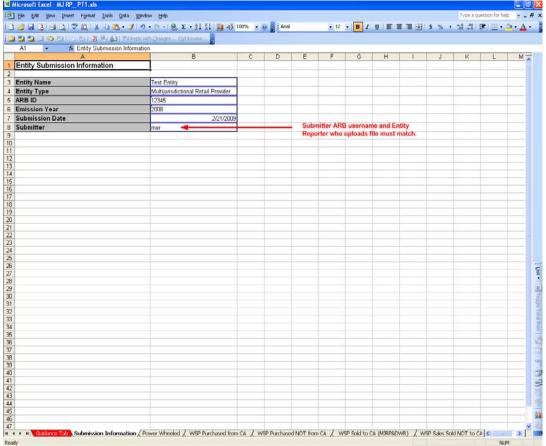

c) The subsequent worksheet tabs in the spreadsheet list fields required for each specific power transaction your power entity is required to report. The spreadsheet has data validation and conditional formatting embedded in it to further guide you to report data in the correct form. Please refer to the Guidance Tab for more information about what information is required for each power transaction tab.

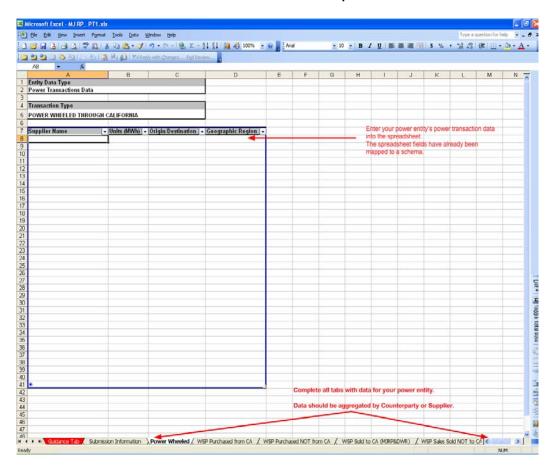


Figure 8-7 Power Transaction Template

4) When you have finished inserting data into the Excel spreadsheet template, you should export the file to an XML file.

Note: For Excel 2003. Select the menu Data > XML > Export. For Excel 2007. Select the menu File > Save As > Save your file as a XML file ("Save As Type").


5) Upload the XML file to the Reporting Tool. Use the **Browse** button to locate the file from your local drive. Then click the **Upload XML File** button to attach and upload the data within the Reporting Tool.

Figure 8-8
Upload XML File to the Reporting Tool




6) The uploaded XML file will display in the grid below. Use the **Download** button to open and view the file. Use the **Delete** button to delete the file.

Figure 8-9
Current XML Submissions

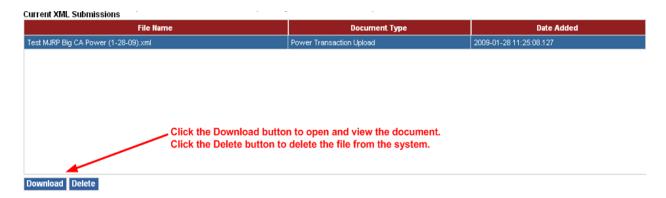

- 7) Within several minutes, you will receive an email from the system that displays the status of your data upload. Please check your email inbox.
 - a) This email will list the status of the data upload: Success or Failure. If the upload has failed, there is a critical error that must be corrected before the submission can be uploaded successfully.
 - b) It will also provide a detailed list of apparent data errors for your submission. If necessary, you may correct these errors, re-export the file to XML, and upload the revised file to the Reporting Tool.
- 8) Click the **Continue** button to proceed to the Power Transactions Submission page to review the data you have just uploaded.

Figure 8-10
Upload Power Transactions Data Page

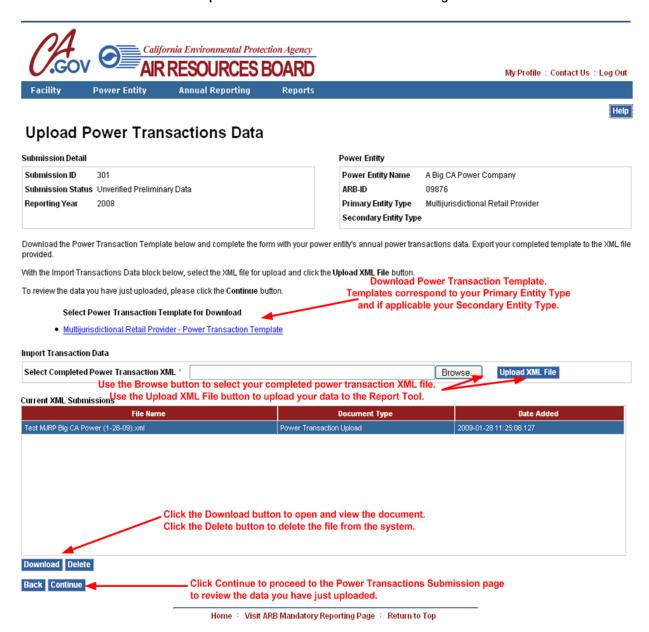


8.2 Review and Modify Power Transactions Data

Once the Entity Reporter has uploaded the XML file with her power entity's power transactions data, she will return to the Power Transactions Submission page to review her submission. If she needs to edit any data, she should do so locally on the Excel template, export the *revised* template to an XML file, and then upload the *revised* XML file to the Reporting Tool.

1) From the Upload Power Transactions Data page, click the Continue button to return to the Power Transactions Submission page (See Figure 8-10).

- 2) On the Power Transactions Submission page:
 - a) Use the tabs to review the power transactions data uploaded from your power entity's XML file (See Figures 8-12 through 8-15).

Figure 8-11 Power Transactions Submission Page

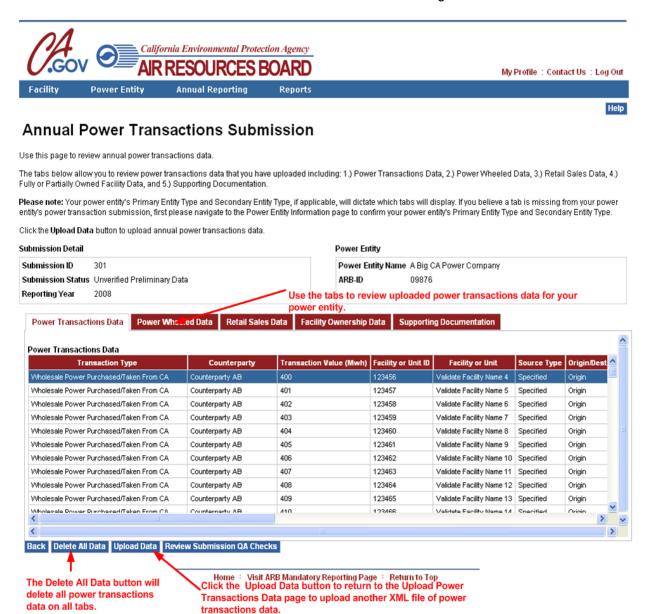

b) The grids under each tab display data entered from the Excel power transactions template that was uploaded as a XML file to the Reporting Tool.


Note: You cannot edit individual records, but you do have the option to delete all data (click **Delete All Data** button) and then re-upload a revised XML file (See Step 3).

- i) All columns in the submission grid can be sorted in ascending or descending order. Click on the column header to sort by a specific column of data.
- ii) The order of grid columns is changeable. To move a column of data, click on the column header, and then drag and drop the column where you would like it.
- c) Power Transactions Data Tab Power Transactions data relevant to your power entity primary entity type will display under this tab. See the list below of the transaction types and the relevant primary entity type (or secondary entity type if applicable).

Power Transaction Type	AO/C Supplier	Marketer	Non-MJ Retail Provider	MJ Retail Provider	DWR
Wholesale Power Imported to CA		Х	Х		Х
Wholesale Power Exported from CA		Х	Х		
Wholesale Power Purchased/Taken from CA			Х	Х	Х
Wholesale Power Purchased Taken Not from CA				Х	
Wholesale Power Sold to CA			Х	Х	Χ
Wholesale Power Sold Not to CA				Х	
Is Wholesale Power Purchased > 10% of Total Power Supplied?	Х				
Wholesale Power Purchased/Taken (If Wholesale Power Purchased > 10% of Total Power Supplied)	Х				
Wholesale Power Sold (If Wholesale Power Purchased > 10% of Total Power Supplied)	Х				

Key: AO/C Supplier = Asset Owning/Controlling Supplier
Non-MJ Retail Provider = Non-Multijurisdictional Retail Provider
MJ Retail Provider = Multijurisdictional Retail Provider
DWR = Department of Water Resources


Figure 8-12 Power Transactions Data Tab

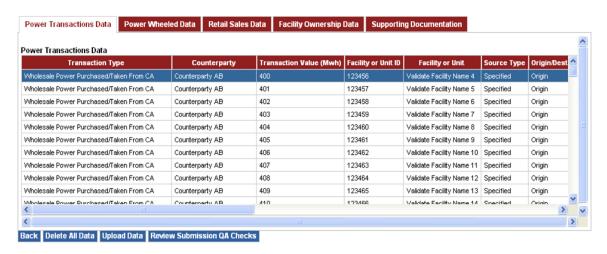

Home : Visit ARB Mandatory Reporting Page : Return to Top

d) Power Wheeled Tab


Figure 8-13 Power Wheeled Data Tab

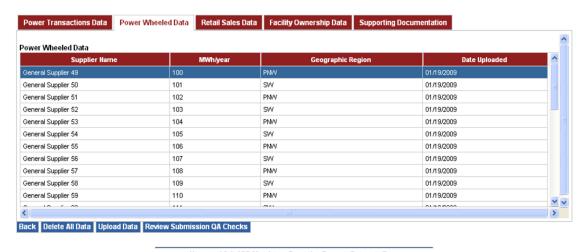

Home : Visit ARB Mandatory Reporting Page : Return to Top

e) Retail Sales Tab

Figure 8-14 Retail Sales Data Tab

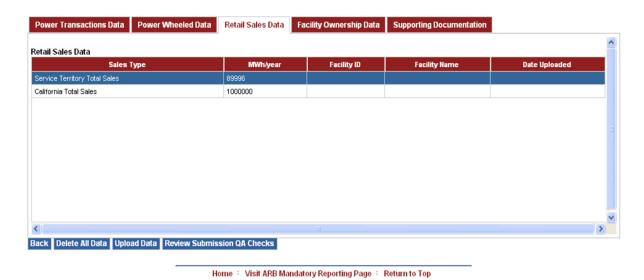

f) Facility Ownership Data Tab

Figure 8-15 Facility Ownership Data Tab



3) To delete power transactions data, click the Delete All Data button on the Power Transactions. Clicking the Delete All Data button will delete all power transactions records. There is a warning pop-up to confirm that you would like to perform a full deletion of power transactions data.


4) To upload a new power transactions data XML file, see Section 8.1 for further instructions.

8.3 Adding Supporting Documentation

If your submission requires any additional supporting documentation, you may attach it to your submission using the Supporting Documentation tab.

1) Click on the Supporting Documentation tab to attach a document to your submission.

Figure 8-16
Supporting Documentation Tab

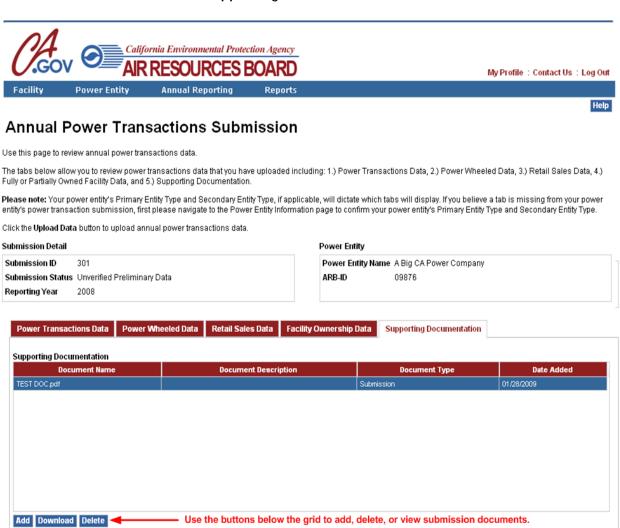


Home : Visit ARB Mandatory Reporting Page : Return to Top

2) Click the Add button to add a new document.

Back | Delete All Data | Upload Data | Review Submission QA Checks

- a) From the pop-up window, use the **Browse** button to locate the document you would like to upload.
- b) Select the document Status as Public or Private. This Status designation will determine whether or not the document will be accessible in public reports.
- c) Add a Description if necessary.
- d) Click the **Add** button. The document should now display in the grid on the Supporting Documentation tab.

Figure 8-17
Add Document Window

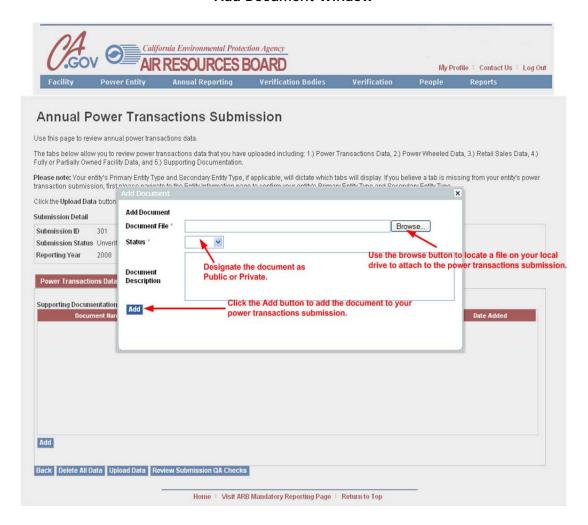

- 3) Click the **Download** button to open and view the document.
- 4) Click the Delete button to delete a document from the submission.

9.0 Run Submission QA Checks and Change Submission Status to "Pending Certification"

When you have completed reporting annual data for your facility, generating unit, or power entity, you may review the system quality assurance checks. If satisfied with the system quality assurance checks, you may change the submissions status from "Unverified Preliminary Data" to "Pending Certification."


9.1 QA Checks

Before you change the status of your facility, generating unit, or power entity submission, you need to review the system quality assurance (QA) checks. If necessary, after reviewing the QA checks, you may return to the submission to make changes to the submission before changing its status to "Pending Certification." Any necessary changes to the submission should be completed before changing the status, as after the status has been changed, the data will be locked down and you will be unable to access it to make edits.

If the submission has any QA checks marked with a Criticality of "Failure," you will not be able to proceed to change the submission status to "Pending Certification" until the issue has been addressed. For QA checks marked with a Criticality of "Warning," you will be able to proceed. You may return to the submission to address a QA check marked with "Warning," but it will not be required.


1) From the Submission Review page, click the Review Submission QA Checks button.

Figure 9-1 Review Submission Page

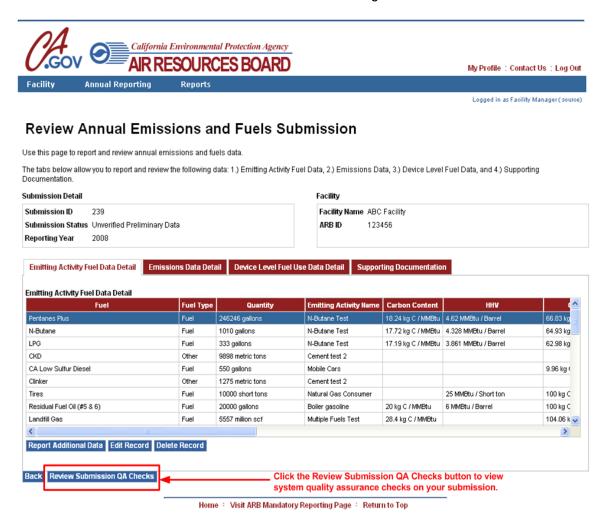

2) On the Review Submission QA Checks page, review all system quality assurance checks.

Figure 9-2 Review QA Checks Page

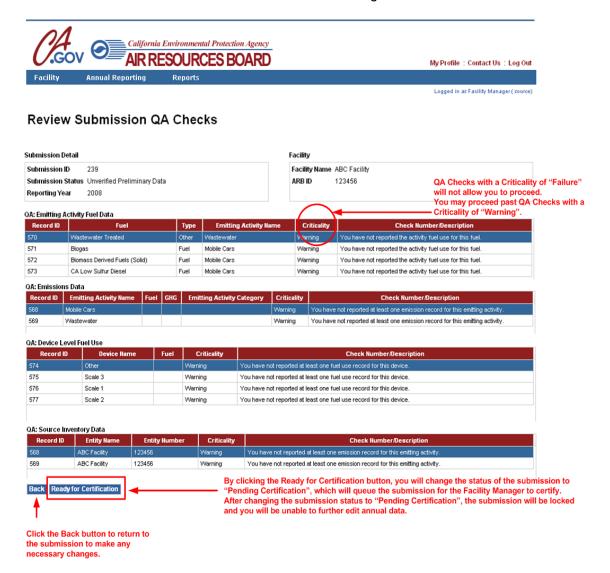

- a) Take note of the Criticality of each QA check.
 - i) Those marked as "Warning" will not prevent you from proceeding to mark the submission as "Pending Certification."
 - ii) Those marked as "Failure" will prevent you from proceeding to mark the submission as "Pending Certification." You must click the **Back** button and make any necessary changes to the data before you will be allowed to proceed.
- b) Take note of the Source Inventory QA Checks at the bottom of the page. These checks are performed on the data entered on your Facility Information page. To make any changes, you will need to navigate back to the Facility Information page. Click on the Facility menu in the top navigation bar. Then select the desired

facility from the grid by clicking on the hyperlinked Facility Name to get to that facility's Facility Information page.

- 3) If necessary, click the **Back** button to return to the Review Submission page. Then make any changes to your submission or to your facility information.
- 4) When satisfied that the facility information and submission data is fully complete and accurate, you can change the status of the submission to "Pending Certification" (see Section 9.2.)

9.2 Change Submission Status to "Pending Certification"

After you have reviewed the QA checks for your submission and are satisfied your facility's source inventory information and submission data is fully complete and accurate, you can change the status of the submission to "Pending Certification."

Once you have changed the status of the submission to "Pending Certification," the submission will be locked down. You will not be able to return to the submission to edit the data. In addition, once the status of the submission has been changed to "Pending Certification," it will be added to the Facility Manager or Power Entity Manager's queue for certification. After the submission status has been changed "Pending Certification," the Facility Manager or Power Entity Manager can then review the submission, review the submission QA checks, and certify the submission.


- 1) Navigate to the Review Submission QA Checks page by clicking on the Review Submission QA Checks button on the Review Submission Page, and review the quality assurance checks associated with the submission. See Steps 1-3 of Section 9.1 for more information on how to navigate to this page.
- 2) When you are satisfied that the facility information and submission data is complete and accurate, click the **Ready for Certification** button.

Figure 9-3 Review Submission QA Checks Page - Ready for Certification Changes Submission Status to "Pending Certification"



Review Submission QA Checks

necessary changes.

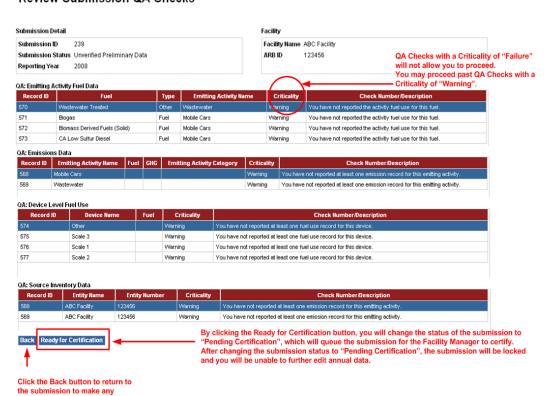

CA GHG Emissions Reporting Tool: Users Guide February 25, 2009

[This page intentionally left blank.]

10.0 Certifying Annual Data

Certification is performed by the Facility Manager or Entity Manager. Facility Managers will be responsible for certifying Emissions and Fuels, and Energy and Production submission for their facilities and generating units. Entity Managers will be responsible for certifying SF_6 Emissions and Power Transactions submission for their power entities; they may also certify submissions for any associated facilities or generating units. Facility Reporters and Entity Reporters will not be able to perform this action.

When a submission is certified, it changes its status from "Pending Certification" to "Unverified Locked Draft Data." Once all of the facility's submissions (Emissions and Fuels, and Energy and Production) have been certified by the Facility Manager, they will be queued for the Verifier and will be marked as "Verification Ready."

10.1 Certify or Unlock Annual Data Homepage


When the Facility Reporter or Entity Reporter has checked the submission as "Pending Certification," by clicking the Ready for Certification button on the QA Checks page (see Figure 9-2), the submission will be queued for the Facility Manager or Entity Manager to certify.

To select a submission to certify, the Facility Manager or Entity Manager should navigate to the Certify or Unlock Annual Data sub-menu to view the Certify Annual Data homepage. The Certify Annual Data homepage displays a grid listing all of the submissions with the submission status of "Pending Certification," submissions that need to be certified, or "Unverified Locked Draft Data," submissions that have just been certified.

Submissions with other statuses may display in this grid as well. If a verifier has requested revisions to the submission before they will agree to verify the data, submissions that have been marked with the status of "Revisions Requested" by the verifier will display in the grid. The Facility Manager will then have the option to re-open the data for the Facility Reporter or Entity Reporter to edit by changing the status back to "Unverified Preliminary Data."


1) To navigate to the Certify Annual Data homepage, click on the Certify or Unlock Annual Data sub-menu. This sub-menu is found beneath the Annual Reporting main menu in the top navigation bar.

Figure 10-1 Certify or Unlock Annual Data Sub-Menu

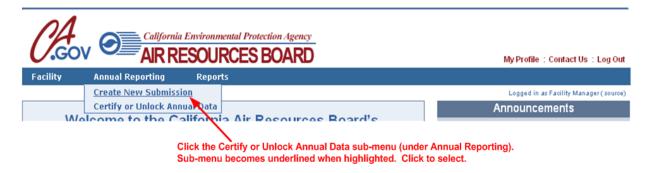

2) After you click the Certify or Unlock Annual Data sub-menu, the Certify Annual Data homepage will load.

Figure 10-2 Certify Annual Data Homepage

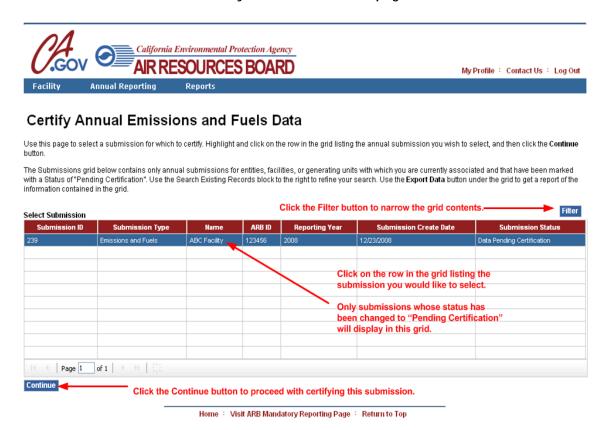


a) To select a submission to certify (or to change the submission status of a submission), highlight and click on the row in the grid listing the submission you

would like to certify. The row will highlight in dark blue. If you hover over additional rows in the grid, they will highlight light blue, but will not select and highlight in dark blue until you click on the row.

- i) All columns in the submission grid can be sorted in ascending or descending order. Click on the column header to sort by a specific column of data.
- ii) The order of grid columns is changeable. To move a column of data, click on the column header, and then drag and drop the column where you would like it.
- iii) If there are multiple pages of submissions, the total number of pages will display at the bottom of the grid. Use the arrows in the bottom left corner of the grid, on either side of the "Page # of #" label, to navigate between multiple pages.
- iv) To search the grid and narrow the contents of the grid display, click the **Filter** button. A filter pop-up will display.

Figure 10-3 Certify or Unlock Annual Data Filter

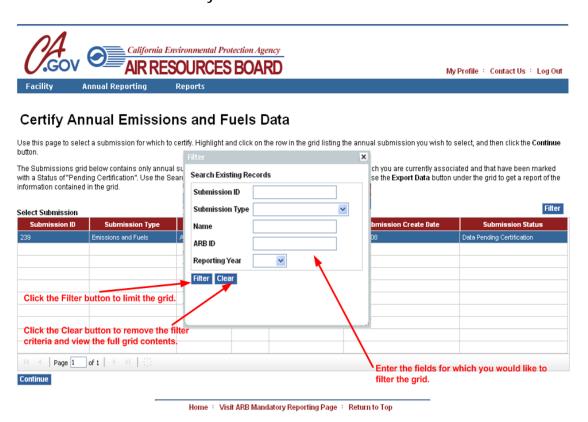

• Enter the criteria that you would like to search on in the relevant field in the filter pop-up, and then click the Filter button in the pop-up.

- To remove all criteria and see the full grid contents, click the Clear button in the pop-up.
- b) Click the Continue button to select a submission to certify.

10.2 Review Submission QA Checks

Once you select a submission to certify from the Certify Annual Data homepage, you will first need to review the system quality assurance (QA) checks (see instructions on how to select a submission to certify in Section 10.1).

If necessary, after reviewing the QA checks, you may return to the submission to the Facility Reporter to make changes to the submission before certifying the submission.

If the submission has any QA checks marked with a Criticality of "Failure," you will not be able to proceed to certify the submission and change its status to "Unverified Locked Data" until the issue has been addressed. For QA checks marked with a Criticality of "Warning," you will be able to proceed. You may return to the submission to address a QA check marked with "Warning," but it will not be required.

1) On the Review Submission QA Checks page, review all system quality assurance checks.

Figure 10-4 Review QA Checks Page




- a) Take note of the Criticality of each QA check.
 - i) Those marked as "Warning" will not prevent you from proceeding to certify the submission and mark the submission status as "Unverified Locked Data."
 - ii) Those marked as "Failure" will prevent you from proceeding to certify the submission and mark the submission status as "Unverified Locked Data." You must click the Back button and make any necessary changes to the data before you will be allowed to proceed.
- b) Take note of the Source Inventory QA Checks at the bottom of the page. These checks are performed on the data entered on your Facility Information page. To make any changes, you will need to navigate back to the Facility Information page. Click on the Facility menu in the top navigation bar. Then select the desired facility from the grid by clicking on the hyperlinked Facility Name to get to that facility's Facility Information page.

- 2) If necessary, click the **Back** button to return to the Certify Annual Data homepage page. Then return to your Review Submission Page or Facility Information page to make any changes to your submission or to your facility information.
- 3) When satisfied that the facility information and submission data are fully complete and accurate, click the **Continue** button to proceed with certifying the data. You can then change the status of the submission to "Unverified Locked Data" (see the next section, Section 10.3).

10.3 Certify Submission


On the Certification page, it will look very similar to the Review Submission page. At the top of the page, there will be two blocks. The Submission Detail block at the top left of the screen displays information about the submission you are about to certify, including the Submission ID, Submission Status (should read "Pending Certification"), and Reporting Year. The Facility block at the top right of the screen displays information about the facility (or generating unit) whose submission you are going to certify. Below the Submission Detail and Facility blocks, you will see tabs that correspond to data from your submission. Finally, at the bottom of the page, you will see several fields that will enable you to certify the submission (or change its status), including Comment, read-only certification statement text, Decision drop-down menu, and Password field.

Figure 10-5 Certification Page

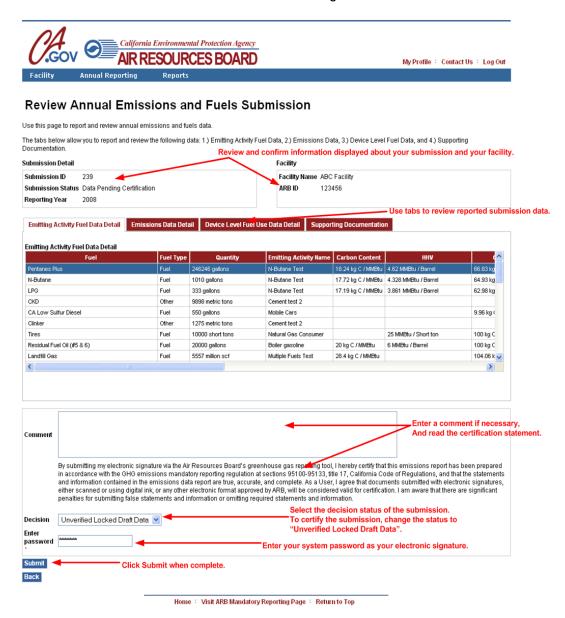


1) Review and confirm the submission details and facility information for the submission at the top of the page.

Figure 10-6
Review Submission Details and Facility Block

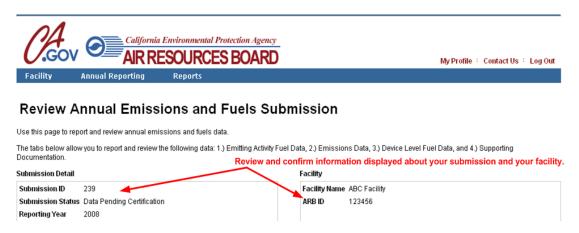


2) Review data from your submission. Use the tabs in the middle of the page to review all of the data reported for your submission. If any changes are required, you will not be able to make them directly on this page. You will need to click the **Back** button, and then navigate to the Review Submission page for the selected submission to make any necessary edits.

Figure 10-7 Review Submission Data

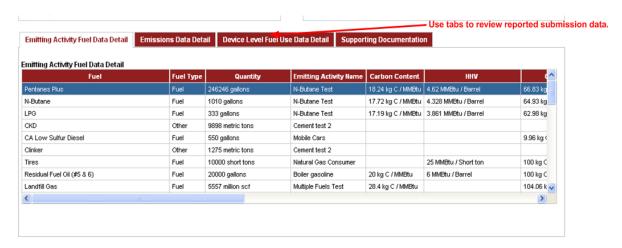

3) Certify the data and change the submission status from "Pending Certification" to "Unverified Locked Data."

Figure 10-8
Certify Submission and Change the Submission Status to "Unverified Locked Data"

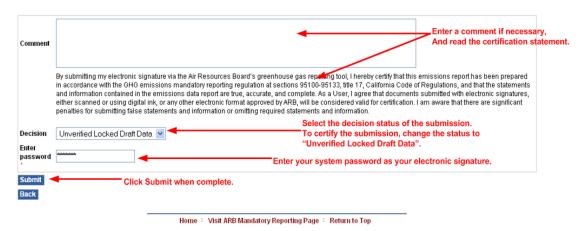

- a) If applicable, enter a comment in the Comment field.
- b) Read the certification statement below.
- c) Select a Decision from the drop-down menu.
 - i) Selecting "Unverified Locked Data" will certify the data and lock it down from editing by the Facility Reporter or Facility Manager. When all of the facility's submissions have been certified, they will all roll up to the verifier's queue and will be marked with the submission status of "Verification Ready," where the verifier can then access them to review and verify.
 - ii) Selecting "Unverified Preliminary Data" is meant to be used when the verified has returned the submission to the Facility Manager requesting revisions be made to the submission. Selecting this status would re-open the submission and allow revisions to be made before re-certifying it and returning it to the verifier.
- d) Enter your password in the Enter Password field. Your password acts as your electronic signature for the certification.
- e) If you need to back out of certification and return to either your Review Submission page or Facility Information page, click the **Back** button.
- f) To proceed with certifying the submission and changing its status to "Unverified Locked Data," click the **Submit** button. Upon clicking the **Submit** button, you will be returned to the Certify Annual Data homepage. The submission you have just certified will still display in the grid, but under the far-right column *Submission Status*, it will now read "Unverified Locked Data" (previously it was "Pending Certification"). If necessary, you can now select a different submission to certify and repeat steps contained in Sections 10.1-10.3).

[This page intentionally left blank.]

11.0 Verifying Annual Data

Greenhouse Gas emissions data report verification is performed by a third party Verifier hired by the reporter with the approval of ARB. Third-party verification of 2009 emission levels is required for all reporters beginning in 2010. Verification is optional for reporters in 2009. Verification of emissions data reports and requirements for Verifiers are specified in Subarticle 4, Sections 95130-95133 of the Mandatory GHG Reporting Regulation.

This module will not be accessible to Entity Managers, Facility Managers, Entity Reporters, or Facility Reporters. All submission types (Emissions and Fuels, Energy and Production, SF₆ Emissions, and Power Transactions) are subject to verification, for all Reporting Levels (Power Entity, Facility, and Generating Unit). Depending on Reporting Level and industry sector classifications, verification will occur either on an annual or triennial basis. Please refer to the ARB Mandatory Reporting Regulation or the Mandatory Reporting Instructional Guidance for Operators to view more information on verification schedules.

When a submission is verified, its status is changed from "Verification Ready" to "Verified." A Verifier may assign either a positive or adverse finding to a data submission. If the submission is not able to be verified due to issues with the annual data, the Verifier may instead change the submission's status to "Revisions Requested." This will return the submission to the queue of the Entity Manager or Facility Manager. The submission will remain locked from editing until the Entity Manager or Facility Manager changes its status back to "Unverified Preliminary Data" which unlocks the submission to be edited by the Entity Reporter or Facility Reporter, before re-certifying the data and returning it to the Verifier to verify.


11.1 Verification Homepage

The Entity Manager or Facility Manager will first certify the submission and change its submission status to "Unverified Locked Draft Data", by entering their password and clicking the **Submit** button on the Certification Page. Once all the submissions for a facility and applicable generating unit or for a power entity have been certified, the statuses of the submission will then change to "Verification Ready", and the submission will be queued for Verifier to review.

To select a submission to verify, the Verifier should first navigate to the Verification menu to view the Verification homepage. The Verification homepage displays a grid listing all of the submissions with the submission status of "Verification Ready." The Verifier may select a submission from the Verification homepage grid to review before verifying it.


1) To navigate to the Verification homepage, click on Verification menu. This menu is in the top navigation bar. This menu option is only available to Verifier users of the system. Entity Managers, Facility Managers, Entity Reporters, and Facility Reporters will not be able to view this menu item.

Figure 11-1 Verification Menu

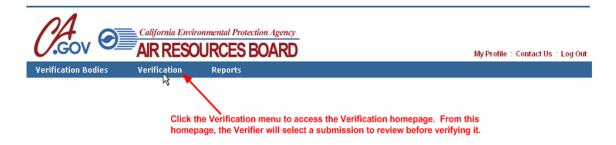

2) After you click the Verification menu, the Verification homepage will load.

Figure 11-2 Verification Homepage

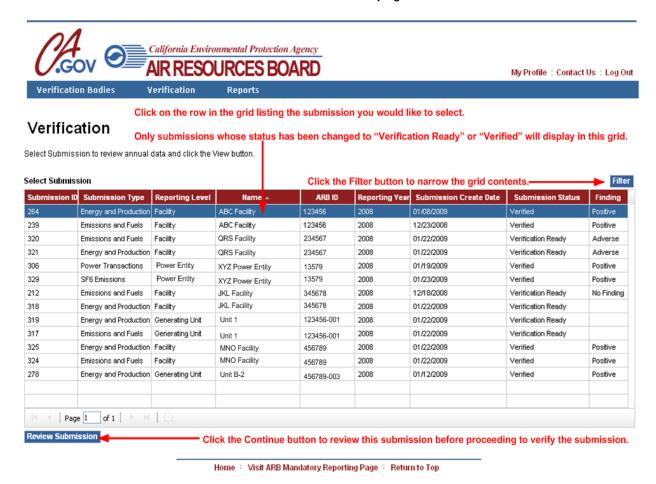


a) To select a submission to review (before verifying the submission), highlight and click on the row in the grid listing the submission you would like to review. The row will highlight in dark blue. If you hover over additional rows in the grid, they

will highlight light blue, but will not select and highlight in dark blue until you click on the row.

- i) All columns in the submission grid can be sorted in ascending or descending order. Click on the column header to sort by a specific column of data.
- ii) The order of grid columns is changeable. To move a column of data, click on the column header, and then drag and drop the column where you would like it.
- iii) If there are multiple pages of submissions, the total number of pages will display at the bottom of the grid. Use the arrows in the bottom left corner of the grid, on either side of the "Page # of #" label, to navigate between multiple pages.
- iv) To search the grid and narrow the contents of the grid display, click the Filter button. A filter pop-up will display.

Figure 11-3 Verification Homepage Filter

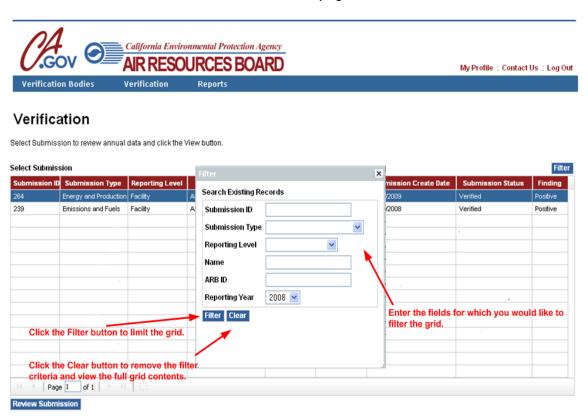

• Enter the criteria that you would like to search on in the relevant field in the filter pop-up, and then click the Filter button in the pop-up.

Home: Visit ARB Mandatory Reporting Page: Return to Top

- To remove all criteria and see the full grid contents, click the Clear button in the pop-up.
- b) Click the Continue button to select a submission to review.
- 3) The Verifier will be navigated to the Submission page for the selected submission. They will have the ability to view all data, but will not have the ability to edit any data for the submission. Once the Verifier has fully reviewed the submission, they may proceed to verify the submission (See Sections 11.2 and 11.3).


11.2 Verify Annual Data Homepage

After the Verifier has selected a submission to review from the Verification homepage and has completed verification review of the submission, the Verifier will then be able to verify all of the annual data for an organization (facility or power entity).

To select an organization's annual data to verify, the Verifier should navigate to the Verify Annual Data sub-menu to view the Verify Annual Data homepage. The Verify Annual Data homepage displays a grid listing all of the organizations with the submission status of either "Verification Ready," annual data that needs to be verified or "Verified," organizations whose annual data has been verified.

1) To navigate to the Verify Annual Data Homepage, click on the Verify Annual Data submenu. This sub-menu is found beneath the Verification main menu in the top navigation bar.

Figure 11-4 Verify Annual Data Sub-menu

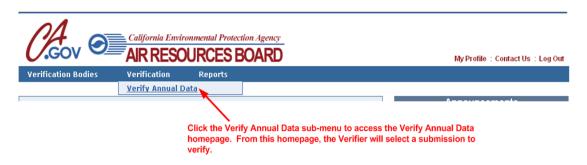


2) After you click the Verify Annual Data sub-menu, the Verify Annual Report Homepage will load.

Figure 11-5 Verify Annual Data Homepage



Verify Annual Report

Select the entity or facility from the grid below and click the Continue button to complete verification.

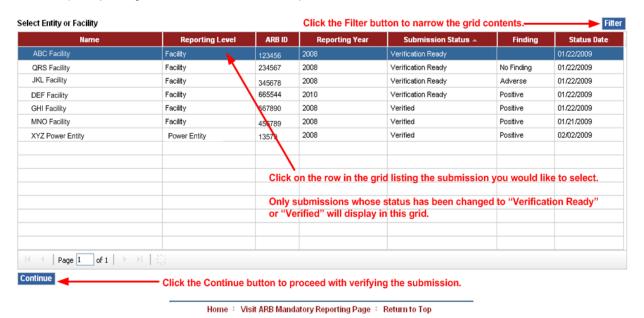

- a) To select an organization to verify its annual report (or to change the submission status of its annual report), highlight and click on the row in the grid listing the organization (facility or power entity) you would like to verify. The row will highlight in dark blue. If you hover over additional rows in the grid, they will highlight light blue, but will not select and highlight in dark blue until you click on the row.
 - i) All columns in the grid can be sorted in ascending or descending order. Click on the column header to sort by a specific column of data.
 - ii) The order of grid columns is changeable. To move a column of data, click on the column header, and then drag and drop the column where you would like it.
 - iii) If there are multiple pages, the total number of pages will display at the bottom of the grid. Use the arrows in the bottom left corner of the grid, on either side of the "Page # of #" label, to navigate between multiple pages.


iv) To search the grid and narrow the contents of the grid display, click the Filter button. A filter pop-up will display.

Figure 11-6 Verify Annual Data Filter



Verify Annual Report

Select the entity or facility from the grid below and click the Continue button to complete verification.

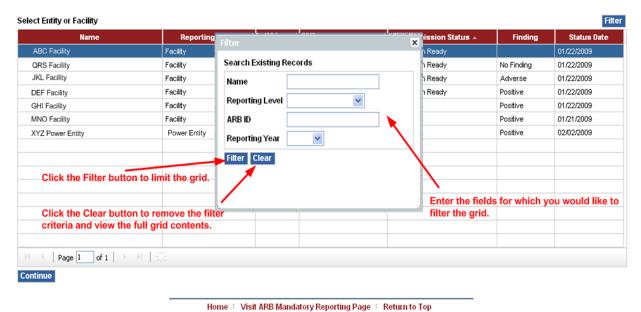

- Enter the criteria that you would like to search on in the relevant field in
- the filter pop-up, and then click the Filter button in the pop-up.
- To remove all criteria and see the full grid contents, click the Clear button in the pop-up.
- b) Click the Continue button to select an organization to verify.

11.3 Verify Annual Data

On the Verification page, at the top of the page, there will be two blocks. The Submission Detail block at the top left of the screen displays information about the submission you are about to verify, including the Submission ID, Submission Status (should read "Verification Ready"), and Reporting Year. The block at the top right of the screen displays information about the power entity, facility, or generating unit (Name and ARB ID)


whose submission you are going to verify. Below the Submission Detail block and Power Entity/Facility/Generating Unit block, you will see a Verification Documents tab. Finally, at the bottom of the page, you will see several fields that will enable you to verify the submission (or change its status) by using the Decision/Action drop-down menu, as well as a Finding drop-down menu and Password field.

California Environmental Protection Agency AIR RESOURCES BOARD My Profile : Contact Us : Log Out Verify Annual Report Review and confirm information displayed about your submission and your facility. Submission Detail Facility Submission Status Verification Ready ABC Facility Facility Name Reporting Year 2008 ARB ID 123456 Use the Verification Document tab to attach a **Verification Documents** Verification Documents Add Download Delete Read the verification statement. Submit Verification Decision By submitting my electronic signature via the Air Resources Board's greenhouse gas reporting tool, I hereby attest that as the lead verifier for this emissions data report, the assigned verification team has carried out all verification services as required by sections 95131, title 17, California Code of Regulations. As a User, I agree that documents submitted with electronic signatures, either scanned or using digital ink, or any other electronic format approved by ARB, will be considered valid for verification purposes. I am aware that there are significant penalties for submitting false statements and information or omitting required statements and information Finding Select the finding of the submission (Positive or Adverse). Select the decision/action status of the submission To verify the submission, change the status to "Verified". Enter password Enter your system password as your electronic signature. Back Submit Decision Click Submit Decision when complete. Home : Visit ARB Mandatory Reporting Page : Return to Top

Figure 11-7 Verification Page


1) Review and confirm the submission details and facility information for the submission at the top of the page.

Figure 11-8
Review Submission Details and Facility Block

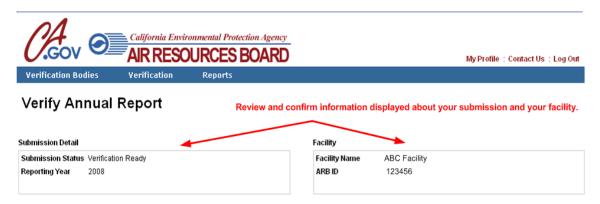


2) Click on the Verification Documents tab to review attached verification documents.

Figure 11-9
Verification Documents Tab

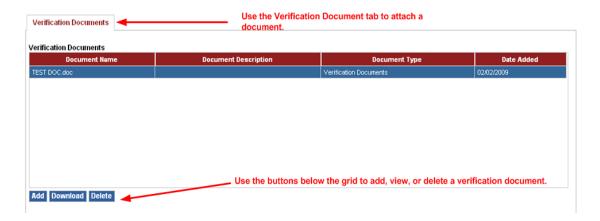


- a) Click the Add button under the Verification Documents tab to attach a verification opinion document. A pop-up block will display with fields that allow you to attach a document. ARB will make available a standardized verification opinion document that must be filled out and attached as the official verification opinion provided to ARB.
- b) Use the **Browse** button to locate a file from your local drive to attach to the verification. Select a **Document Status** from the drop-down menu, and enter a **Description** for the document in the block if necessary. Then click the **Add** button in the pop-up block.

Figure 11-10
Add Verification Document Pop-up

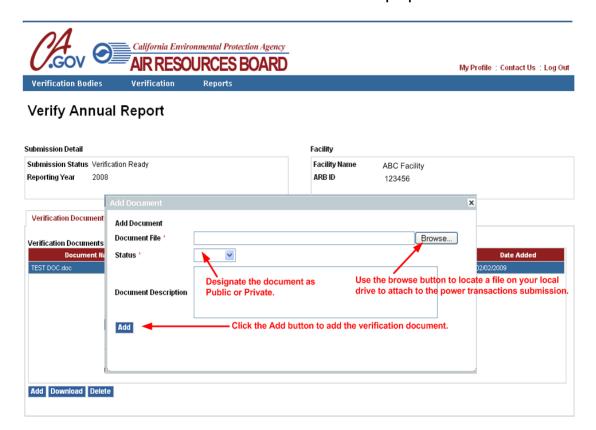

- c) The document you have just selected will now display in the Verification Documents tab grid.
- 3) Verify the data and change the submission status from "Verification Ready" to "Verified."

Figure 11-11
Verify Submission and Change the Submission Status to "Verified"

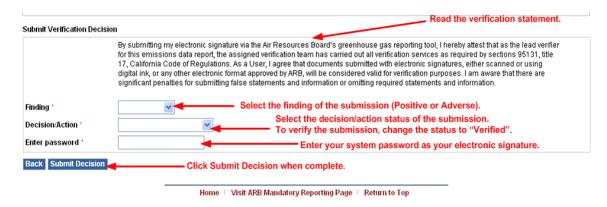

- a) Read the verification statement below.
- b) Select a Finding for the submission using the drop-down menu. The Finding drop-down menu choices are either Positive or Adverse.
- c) Select a Decision/Action from the drop-down menu. The Decision/Action drop-down menu choices are either "Verified" or "Revisions Requested."
 - i) Selecting "Verified" will confirm verification of the data. Once all of the annual data marked as "Verified" for the reporting year has been cleared by ARB staff, the data will be released to be available in Public Reports, pending any decisions on business confidential data.
 - ii) Selecting "Revisions Requested" is meant to be used when the verifier returns the submission to the Entity Manager or Facility Manager requesting revisions be made to the submission prior to its verification. Selecting this status would allow the Entity Manager or Facility Manager to re-open the submission and allow revisions to be made before re-certifying it and returning it to access by the verifier.
- d) Enter your password in the Enter Password field. Your password acts as your electronic signature for the verification statement.
- e) If you need to back out of verification and return to either the Verify Annual Data homepage or the Verification homepage, click the **Back** button.
- f) To proceed with verifying the submission and changing its status to "Verified," click the **Submit Decision** button. Upon clicking the **Submit Decision** button, you will be returned to the Verify Annual Data homepage. The submission you have just verified will still display in the grid, but under the far-right column *Submission Status*, it will now read "Verified" (previously it was "Verification Ready"). If necessary, you can now select a different organization's data to certify and repeat steps contained in Sections 11.1-11.3).